


# Sauna "Frodo" 500

**Please read the whole manual  
before You start.**


**All given measurements are in millimeters.**

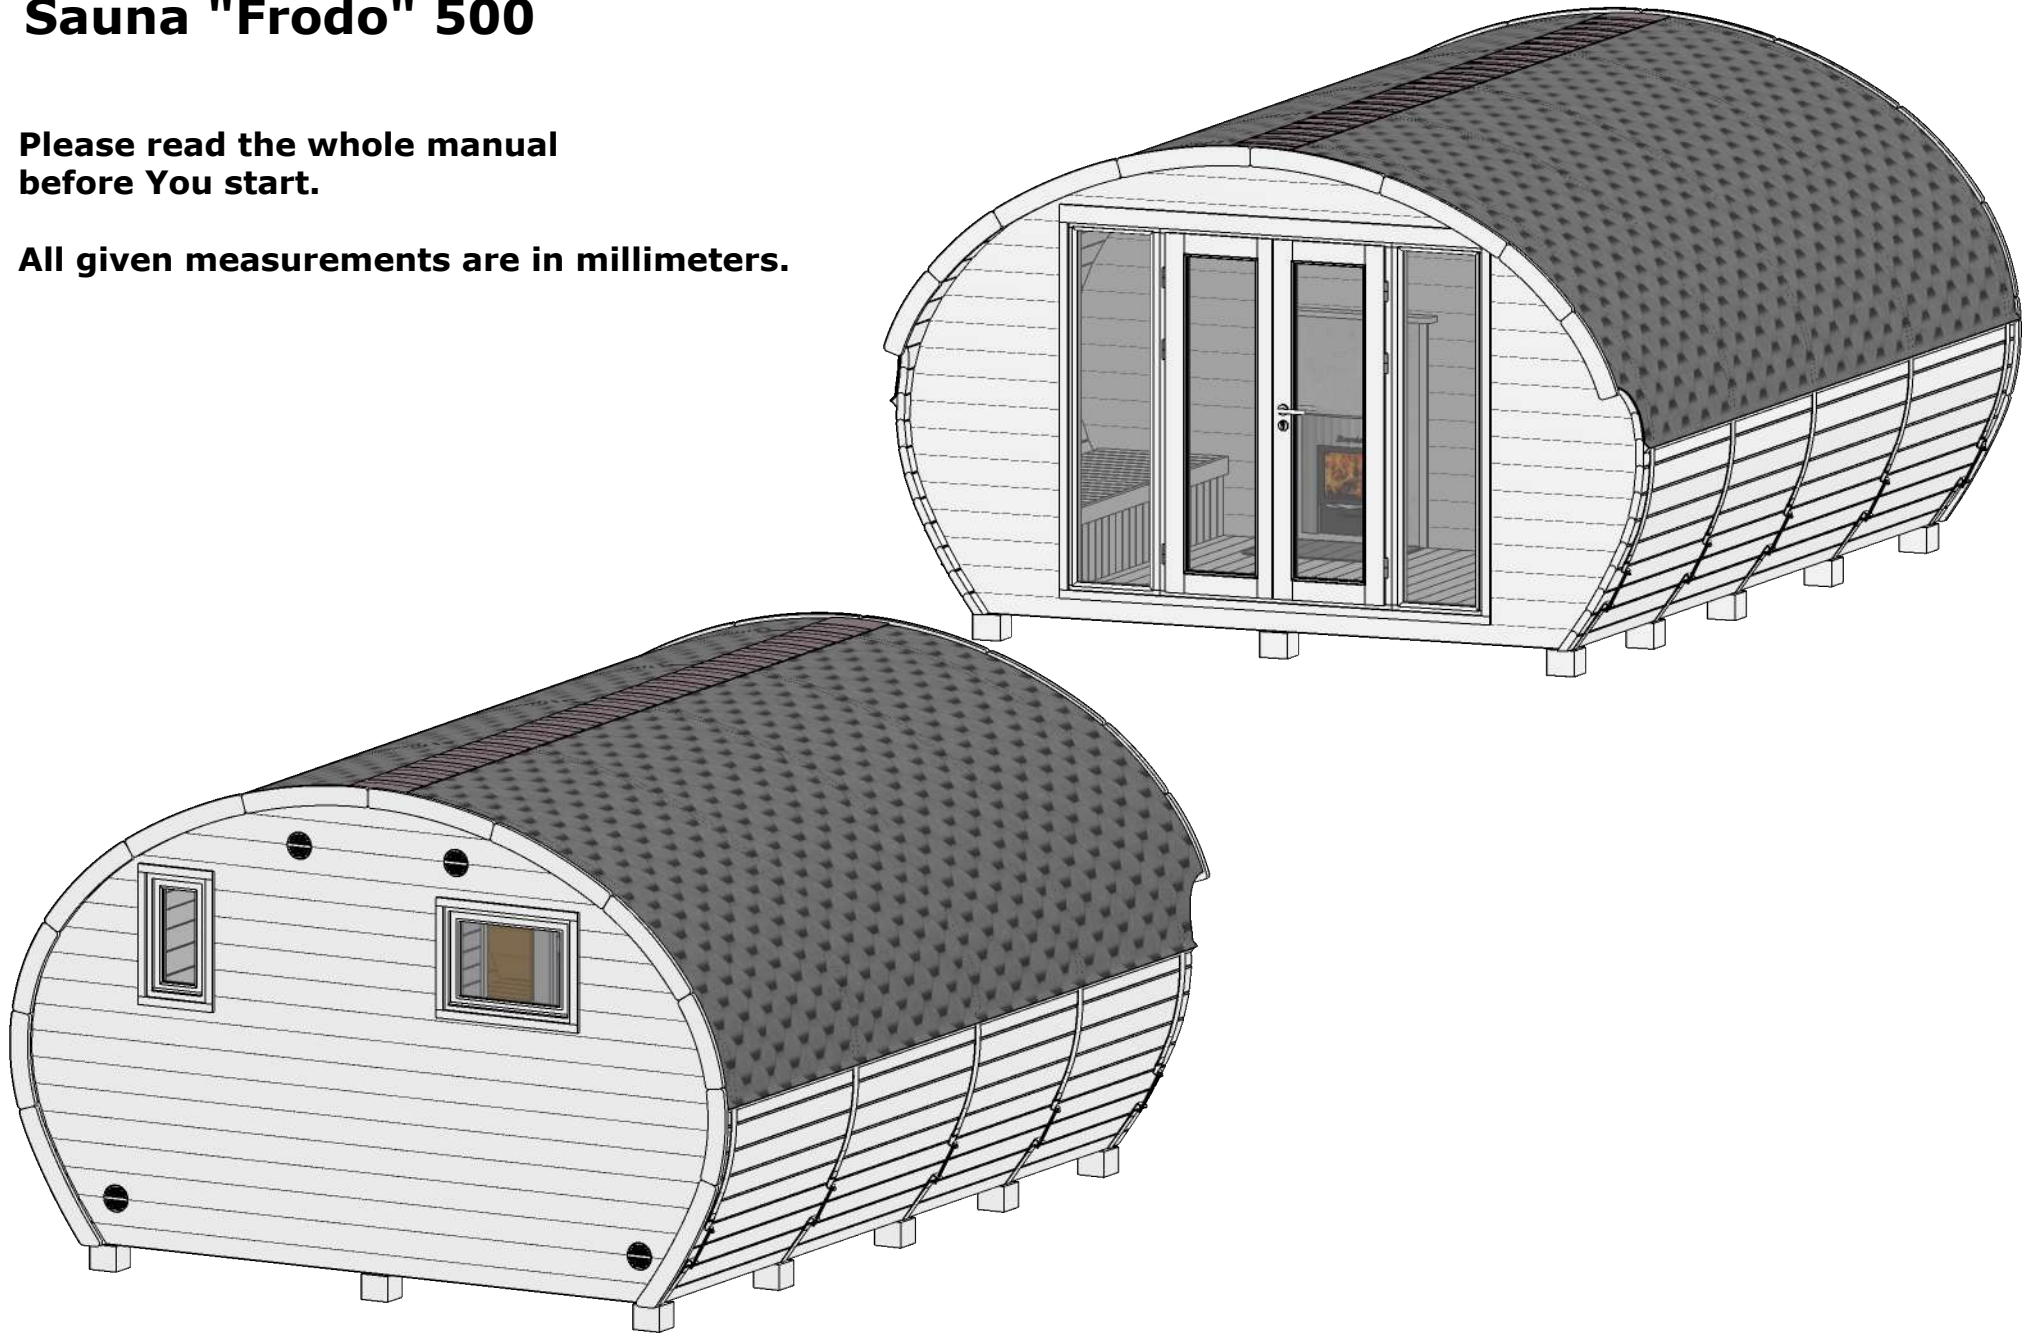

( FRO-005 )


# Sauna "Frodo" 500

## Details list 1.

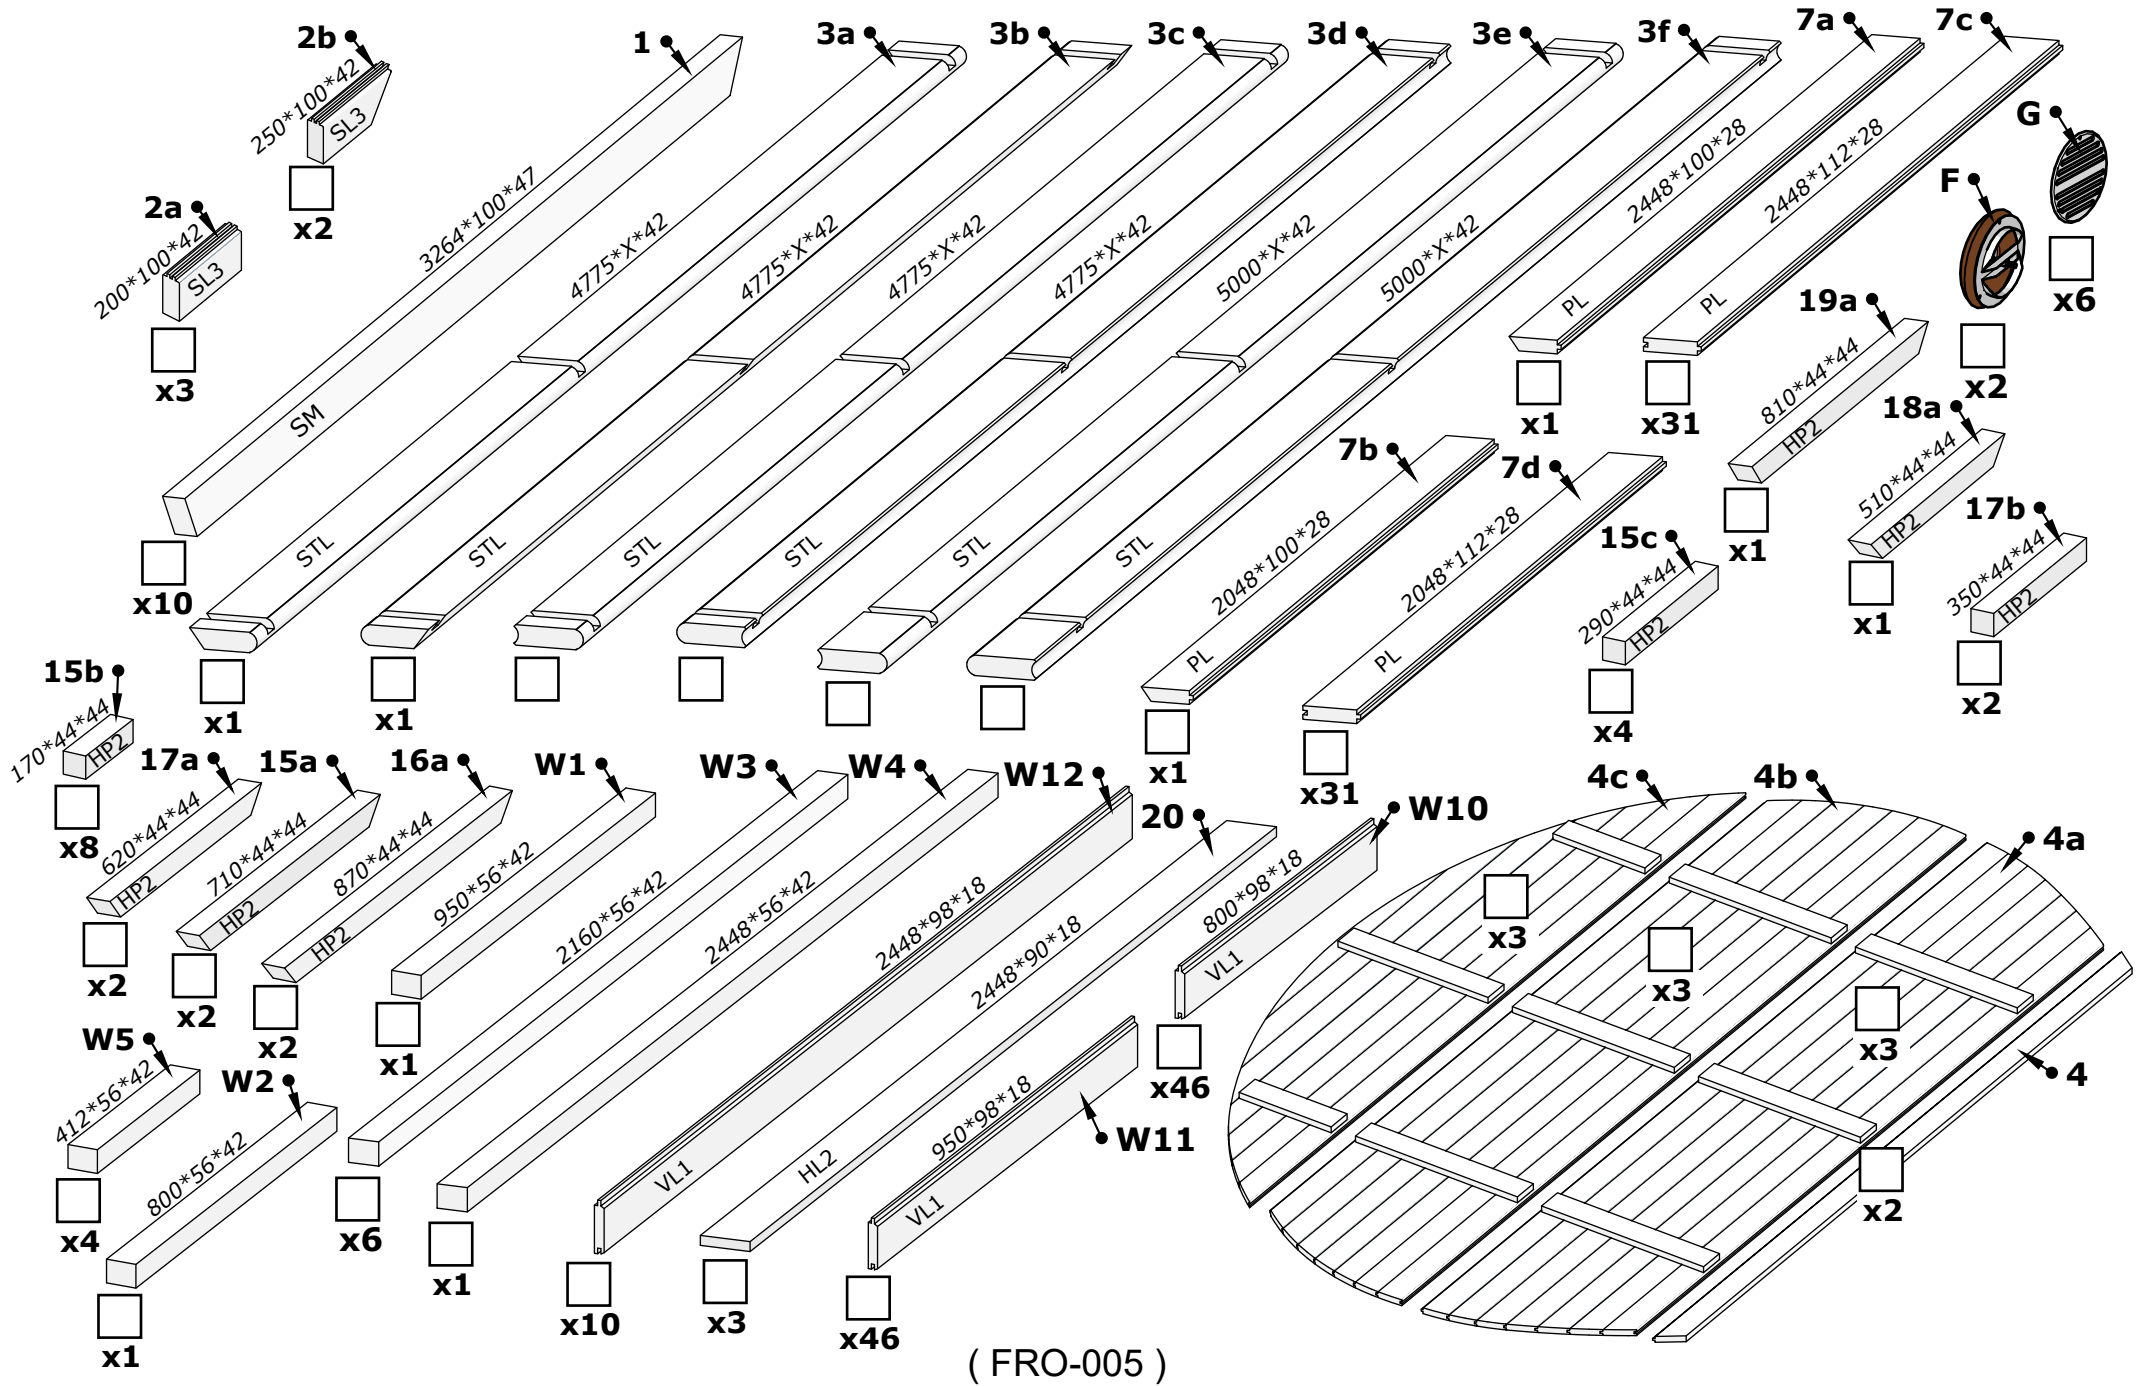


# Sauna "Frodo" 500

## Details list 2.



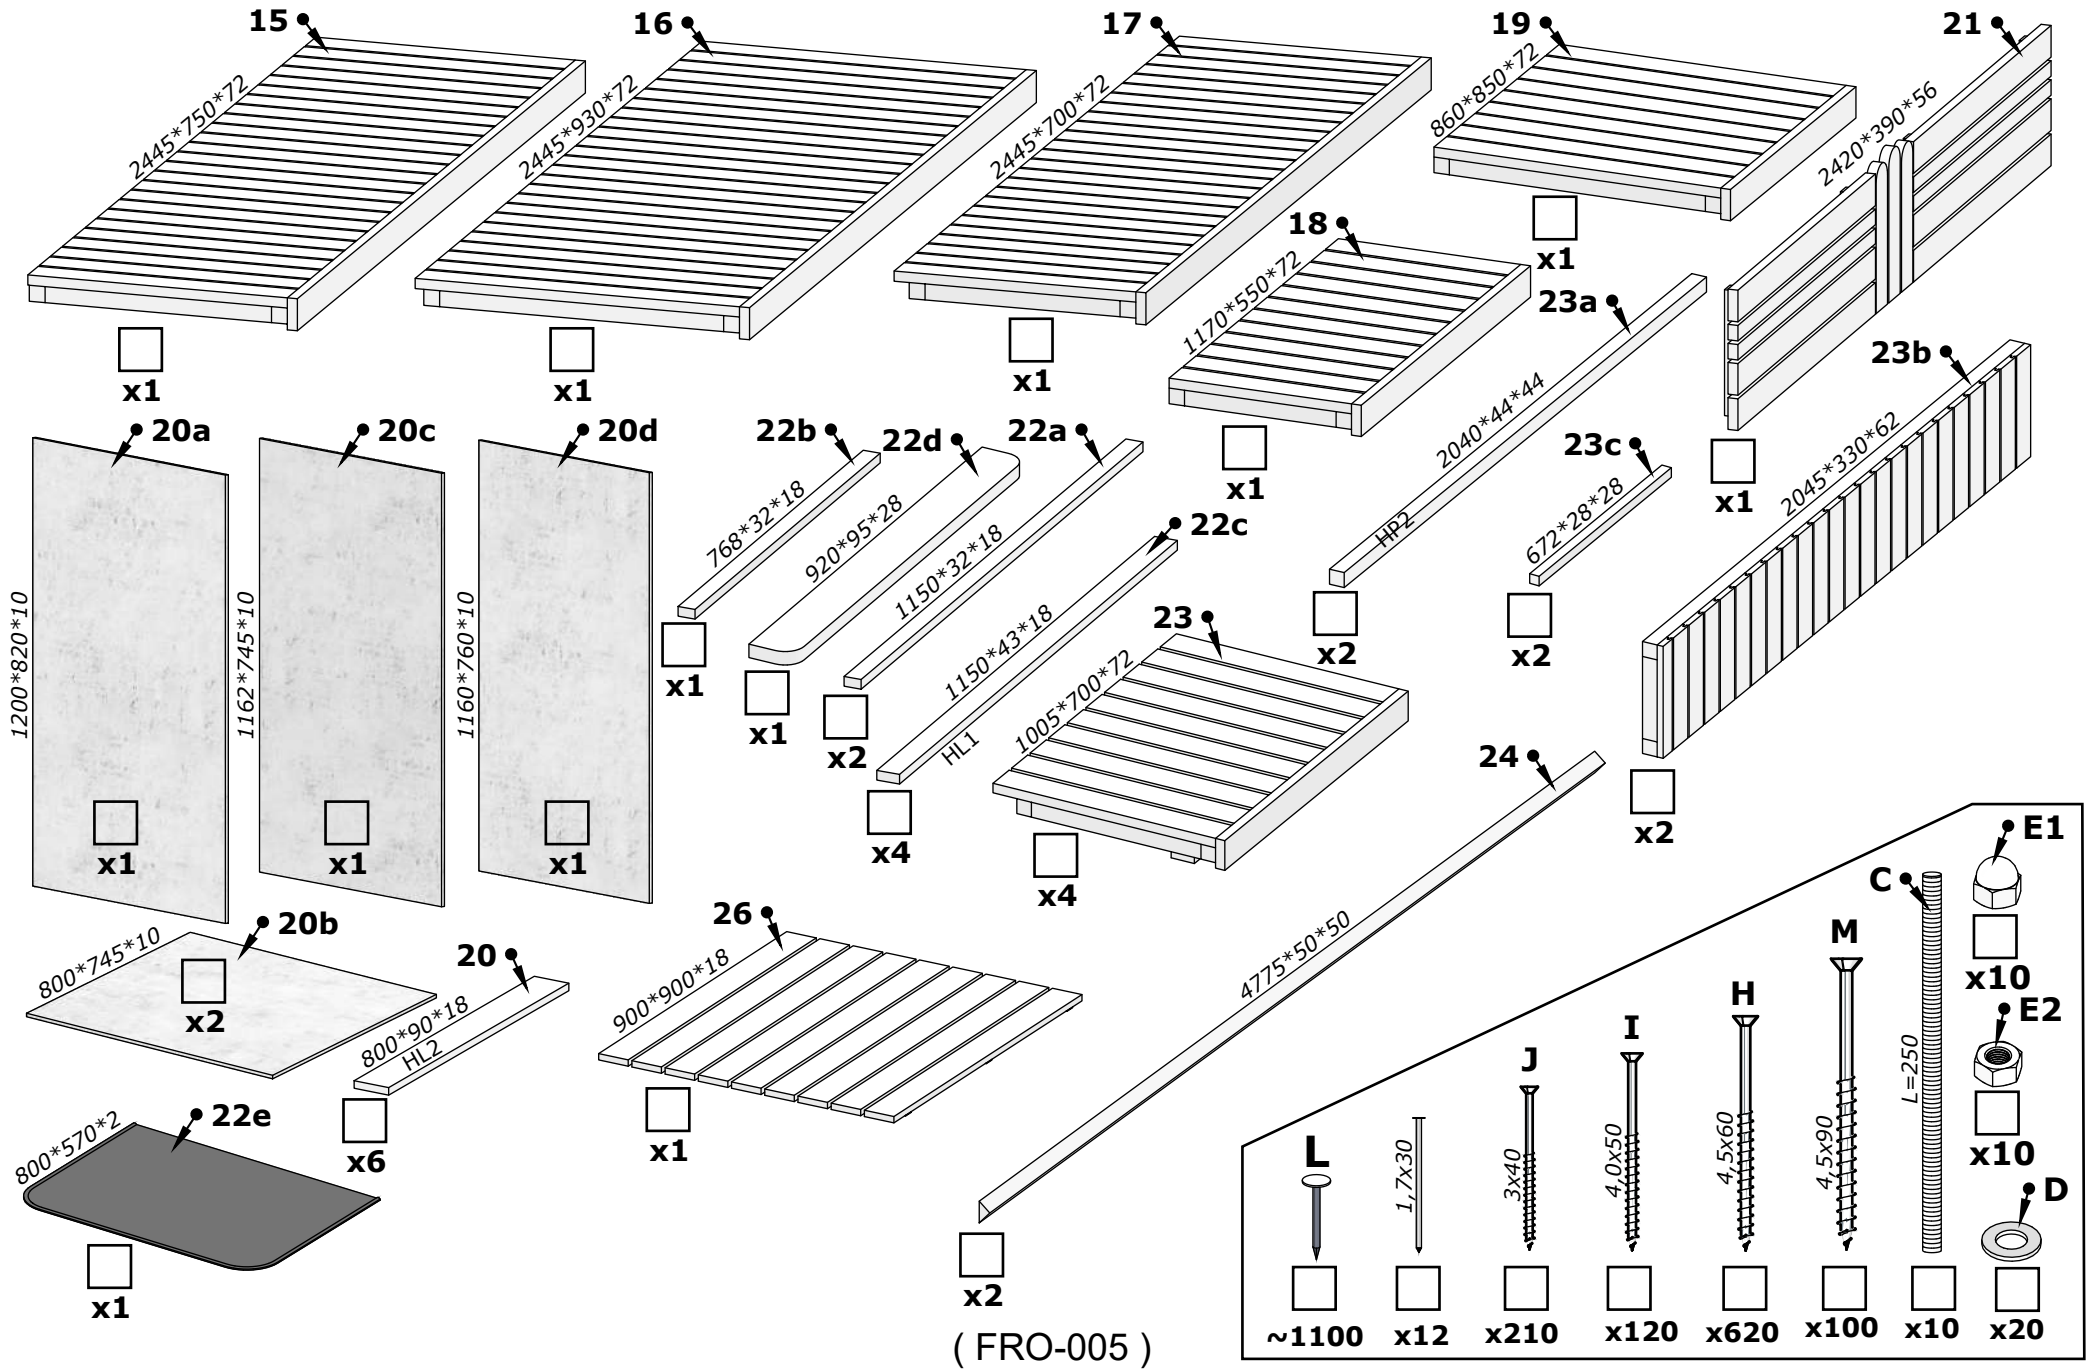


# Sauna "Frodo" 500


## Details list 3.

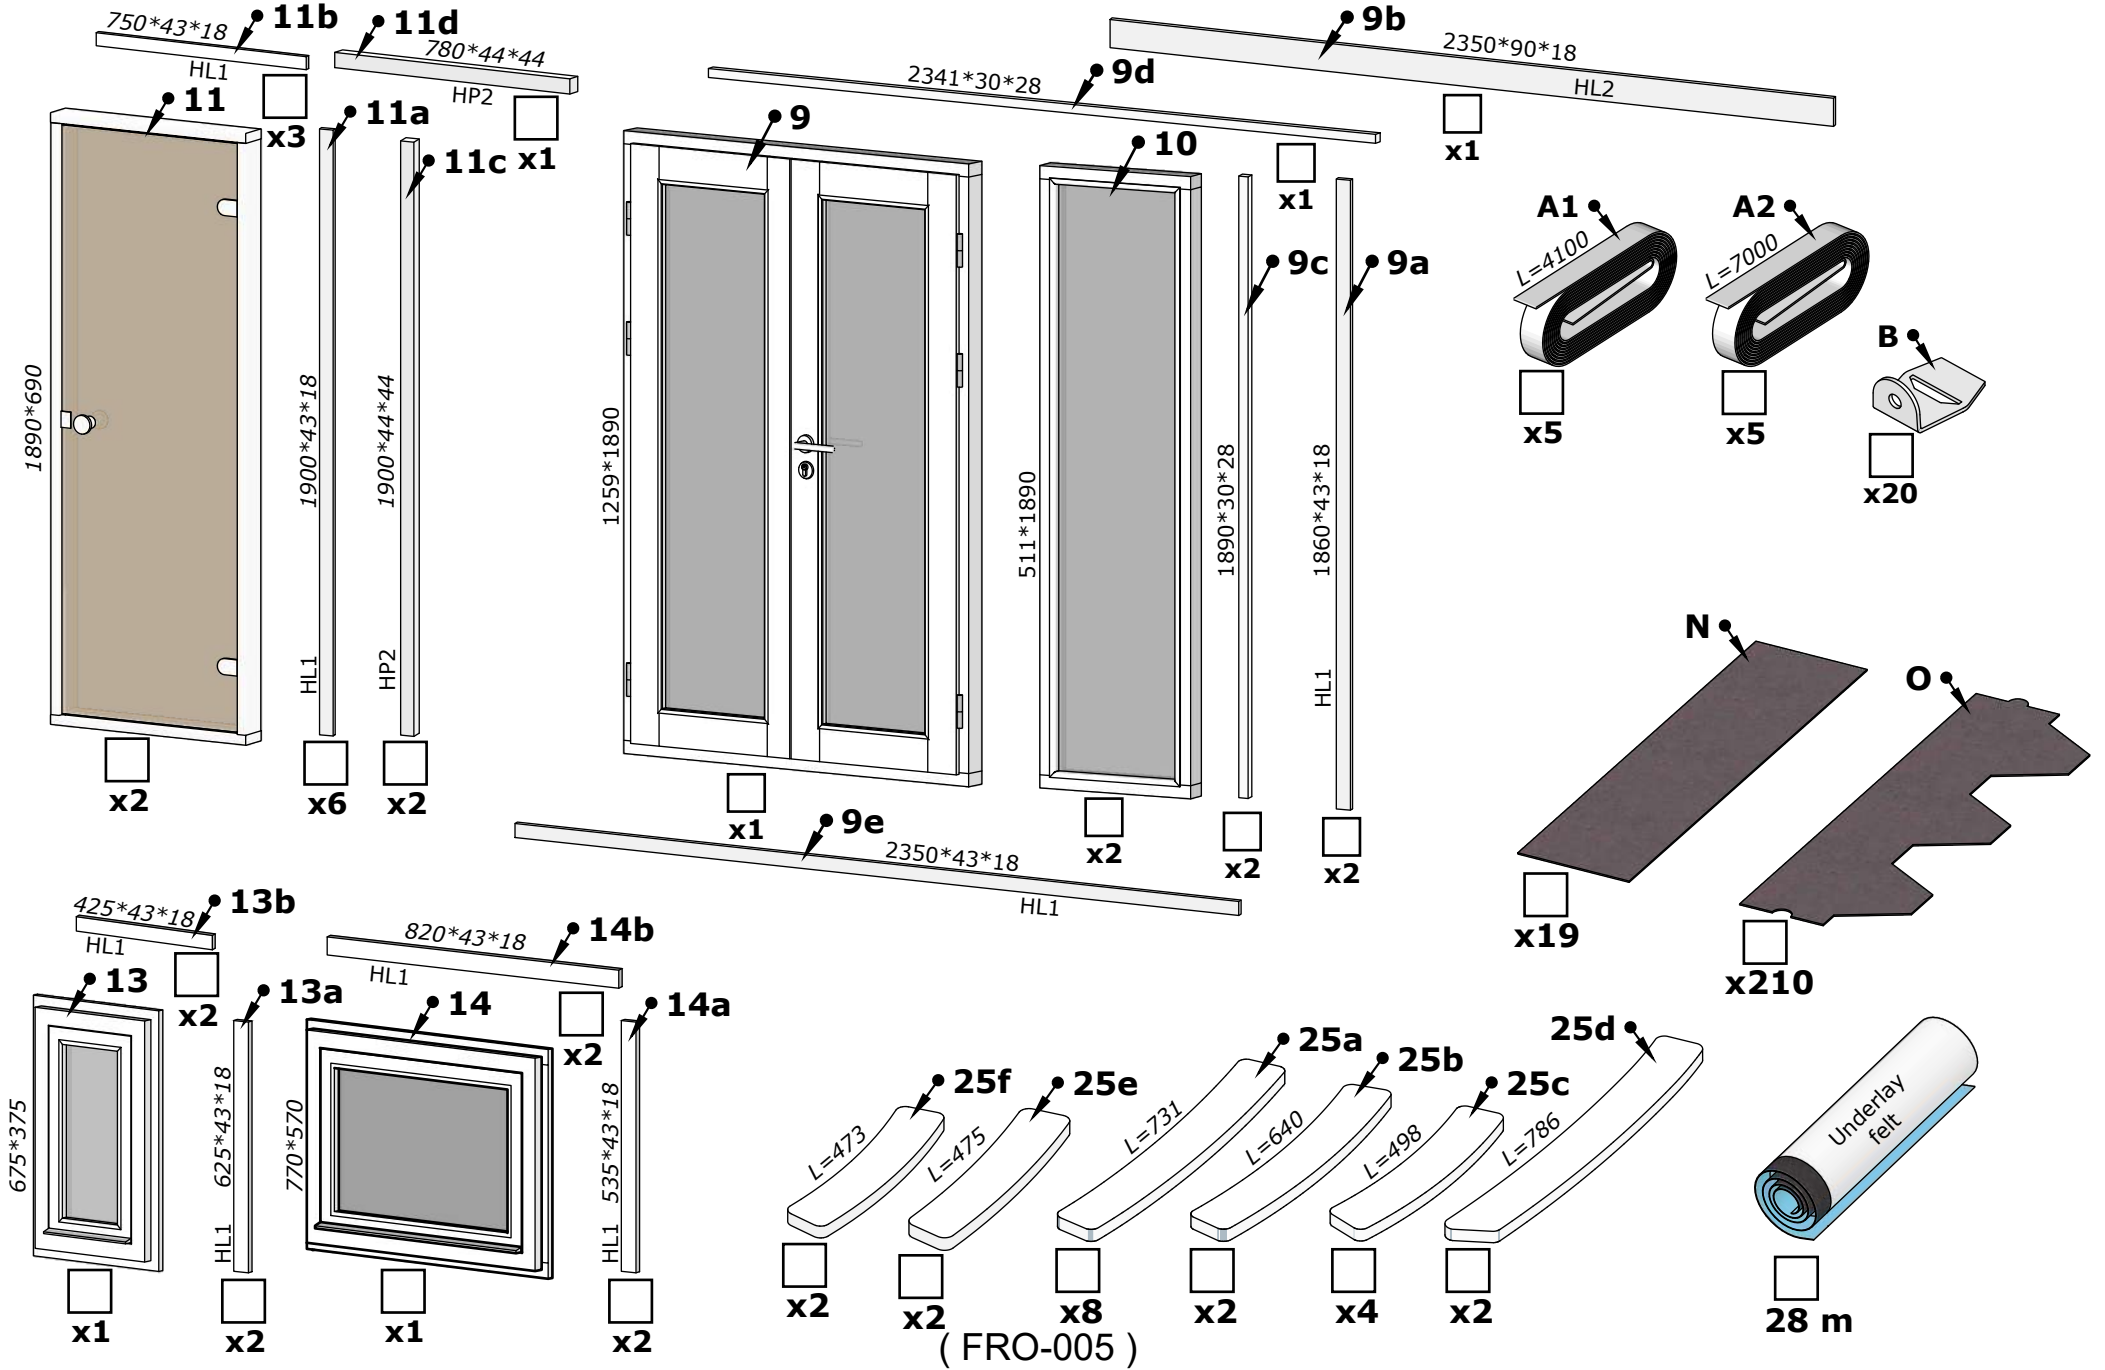



# Frodo 500

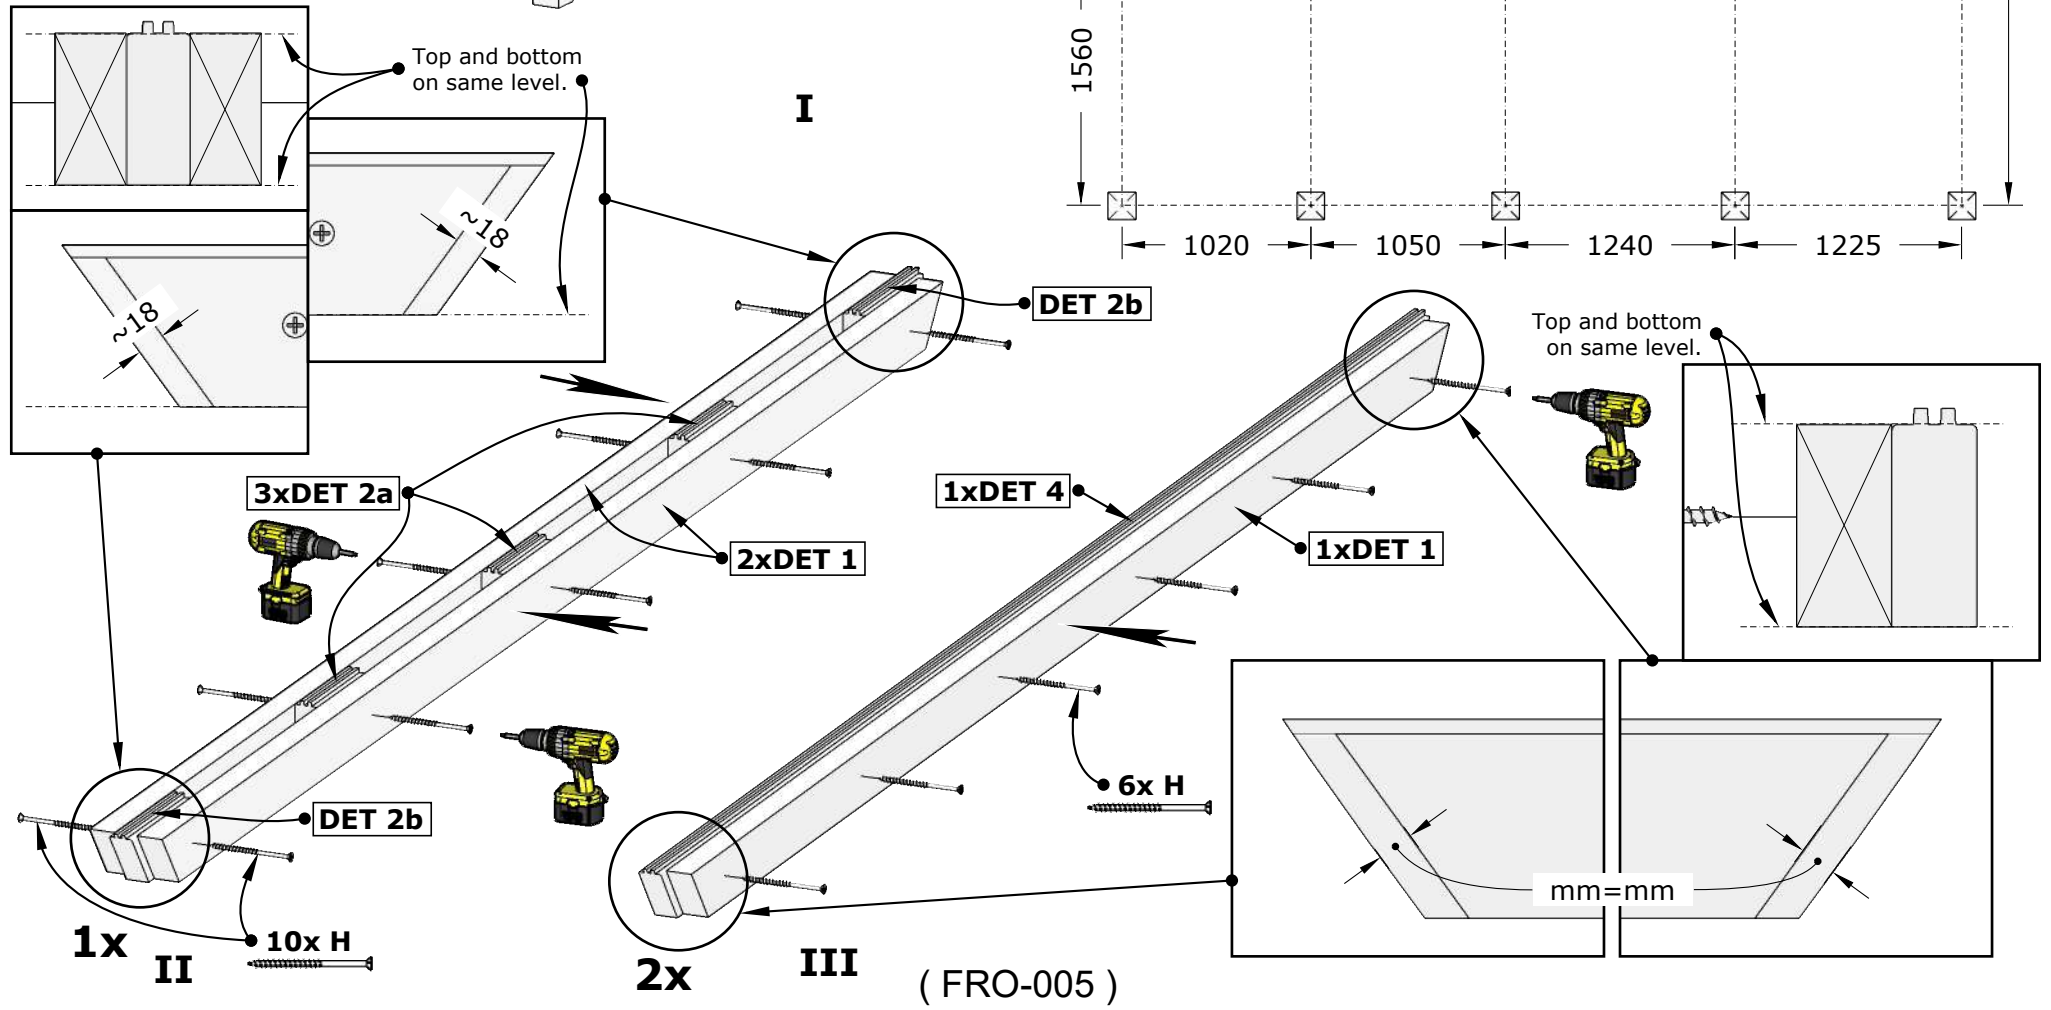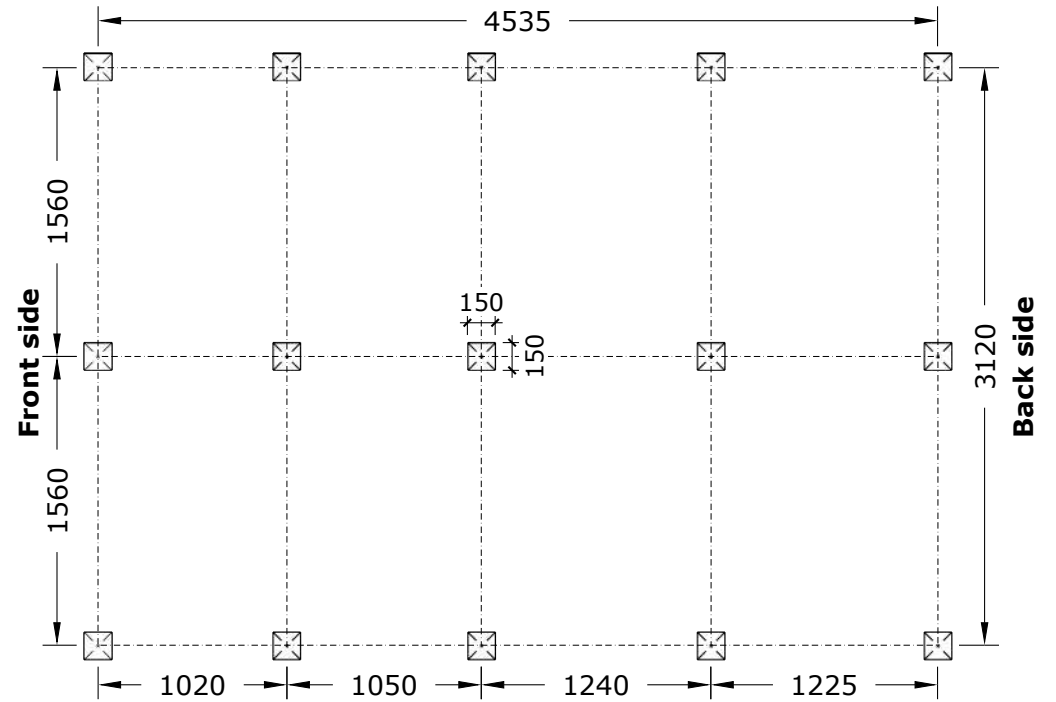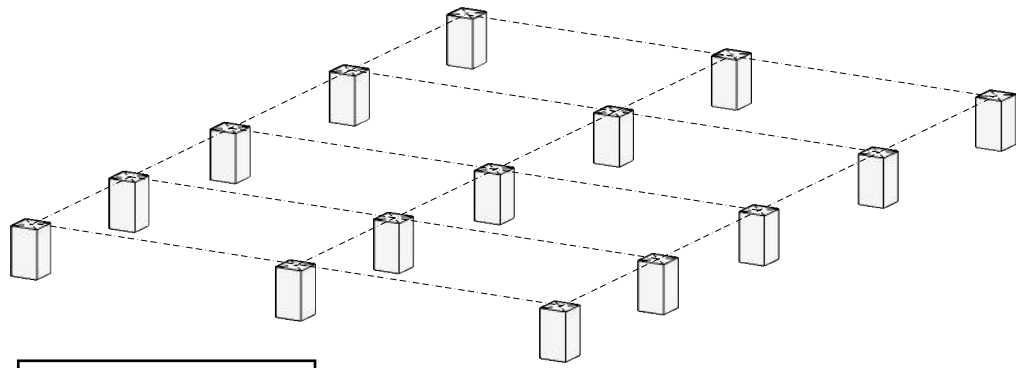


# Frodo 500

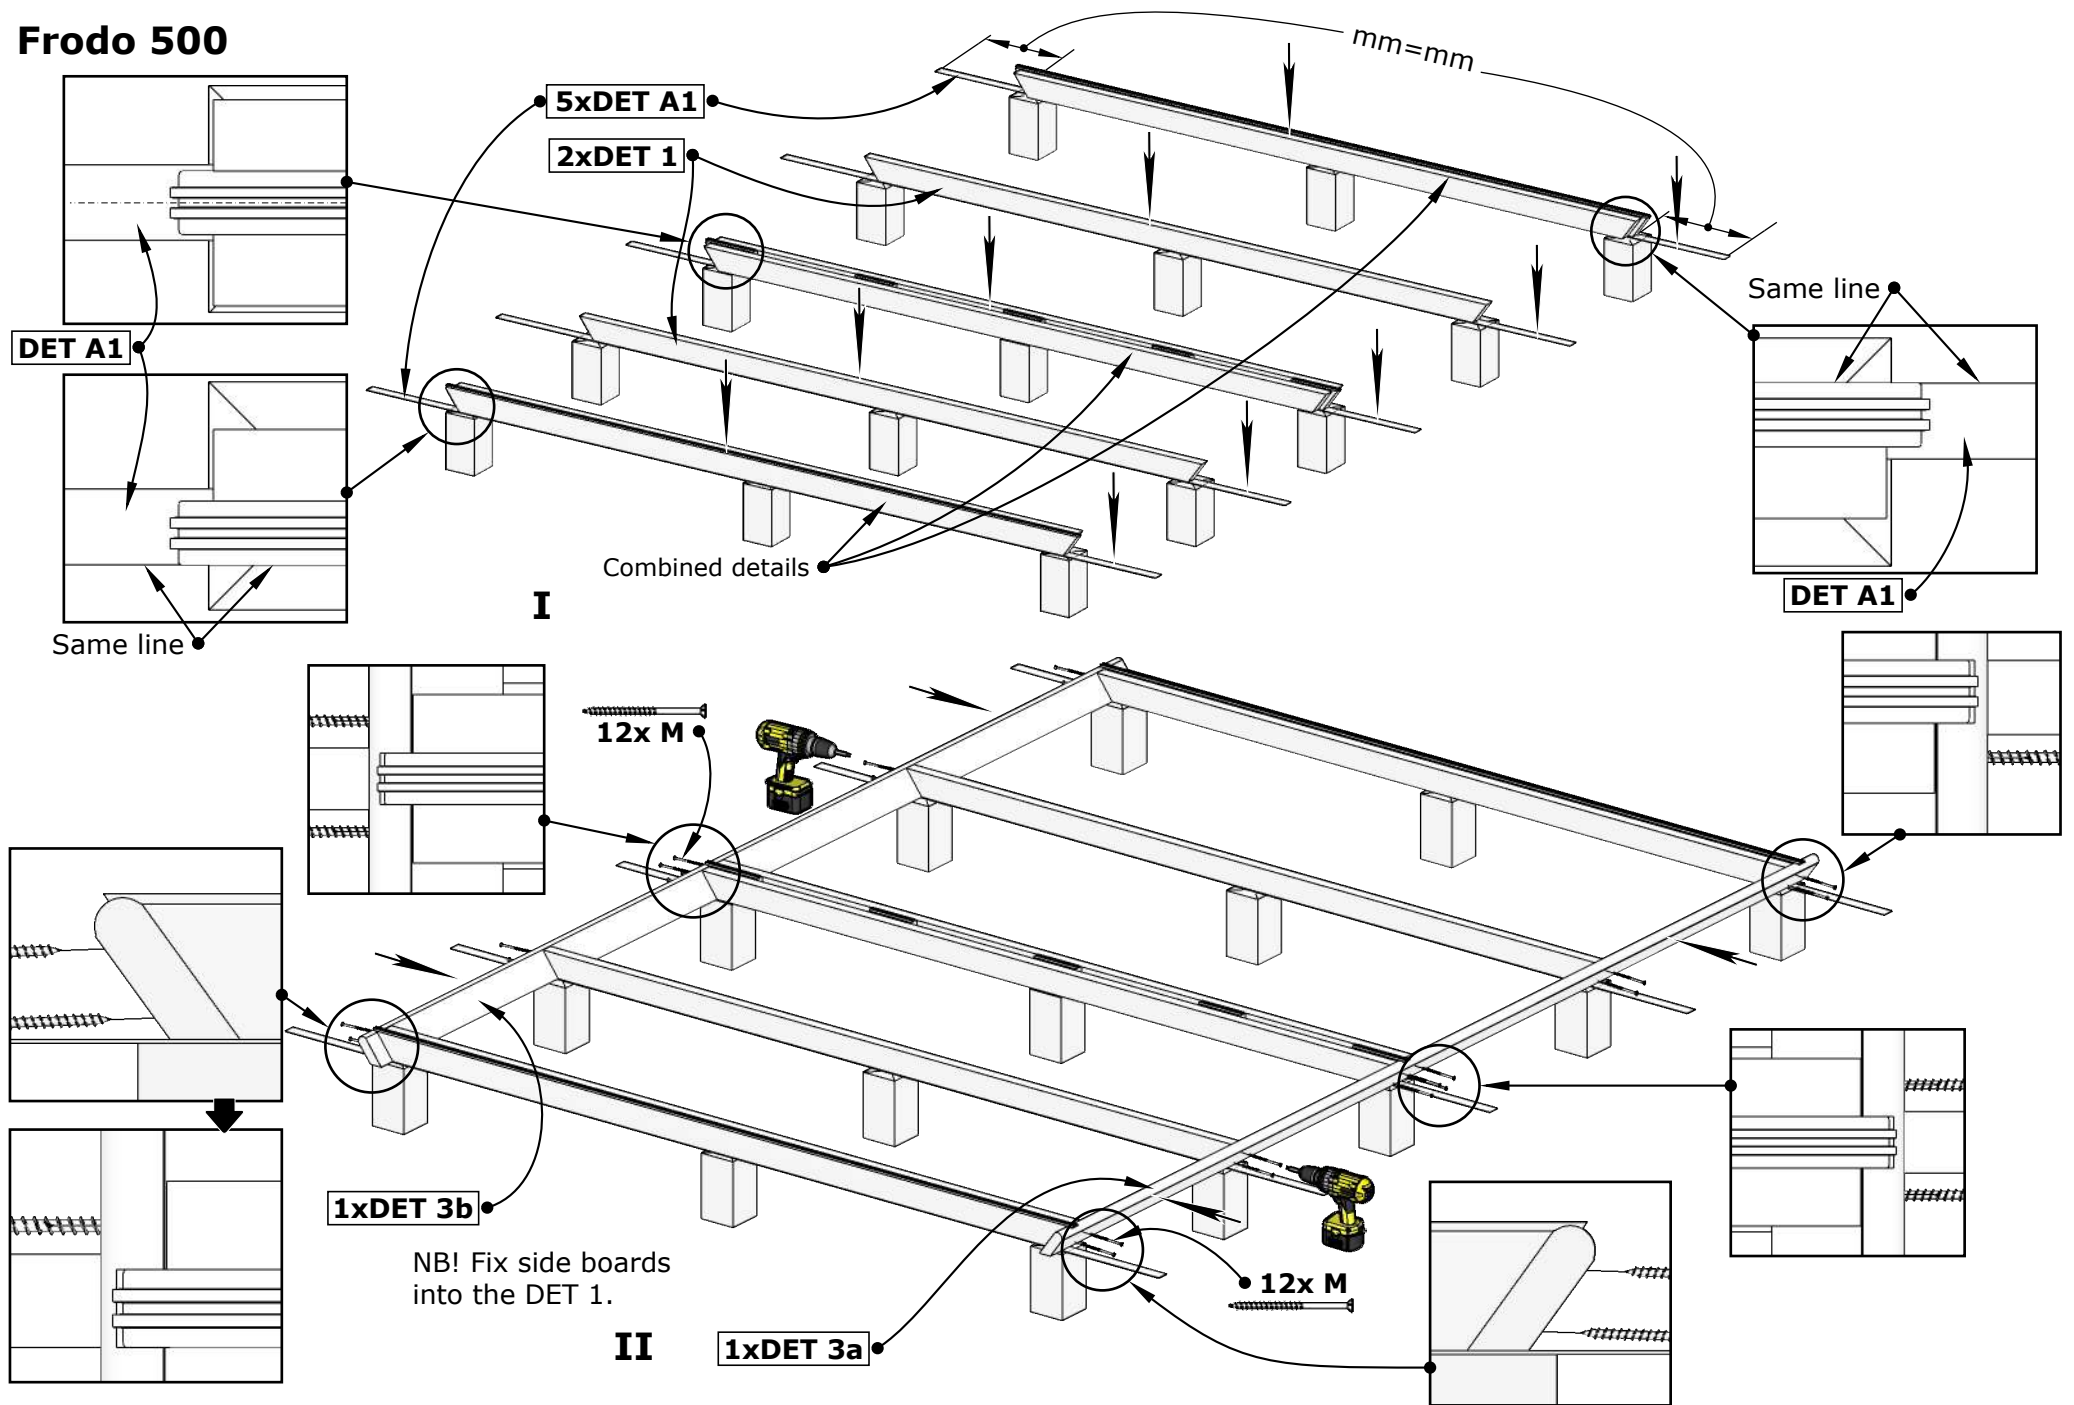

# Frodo 500

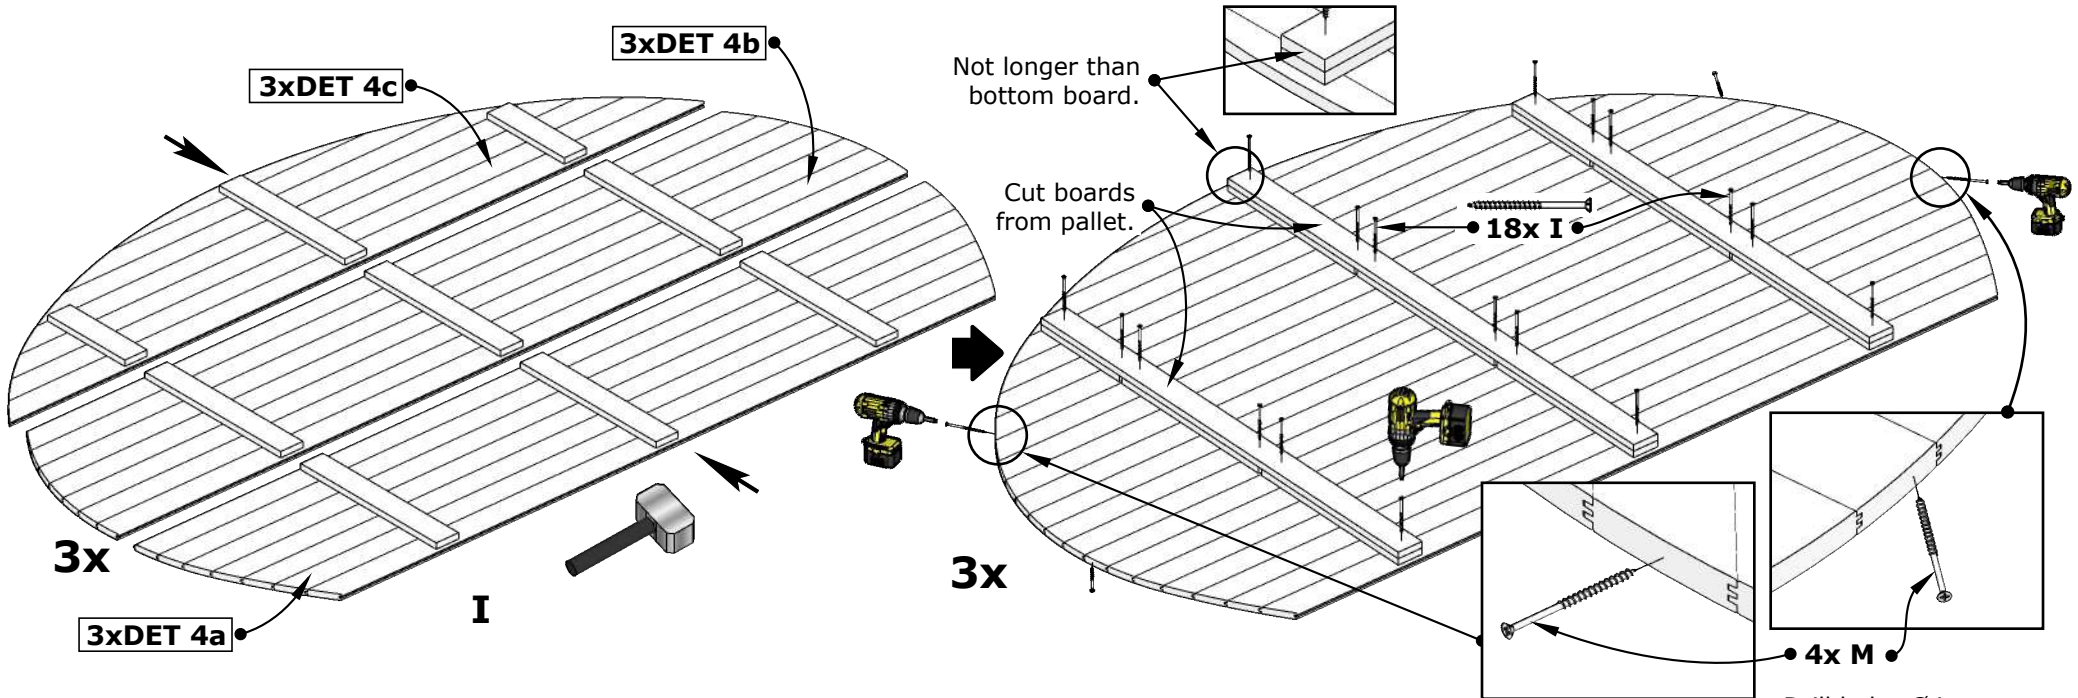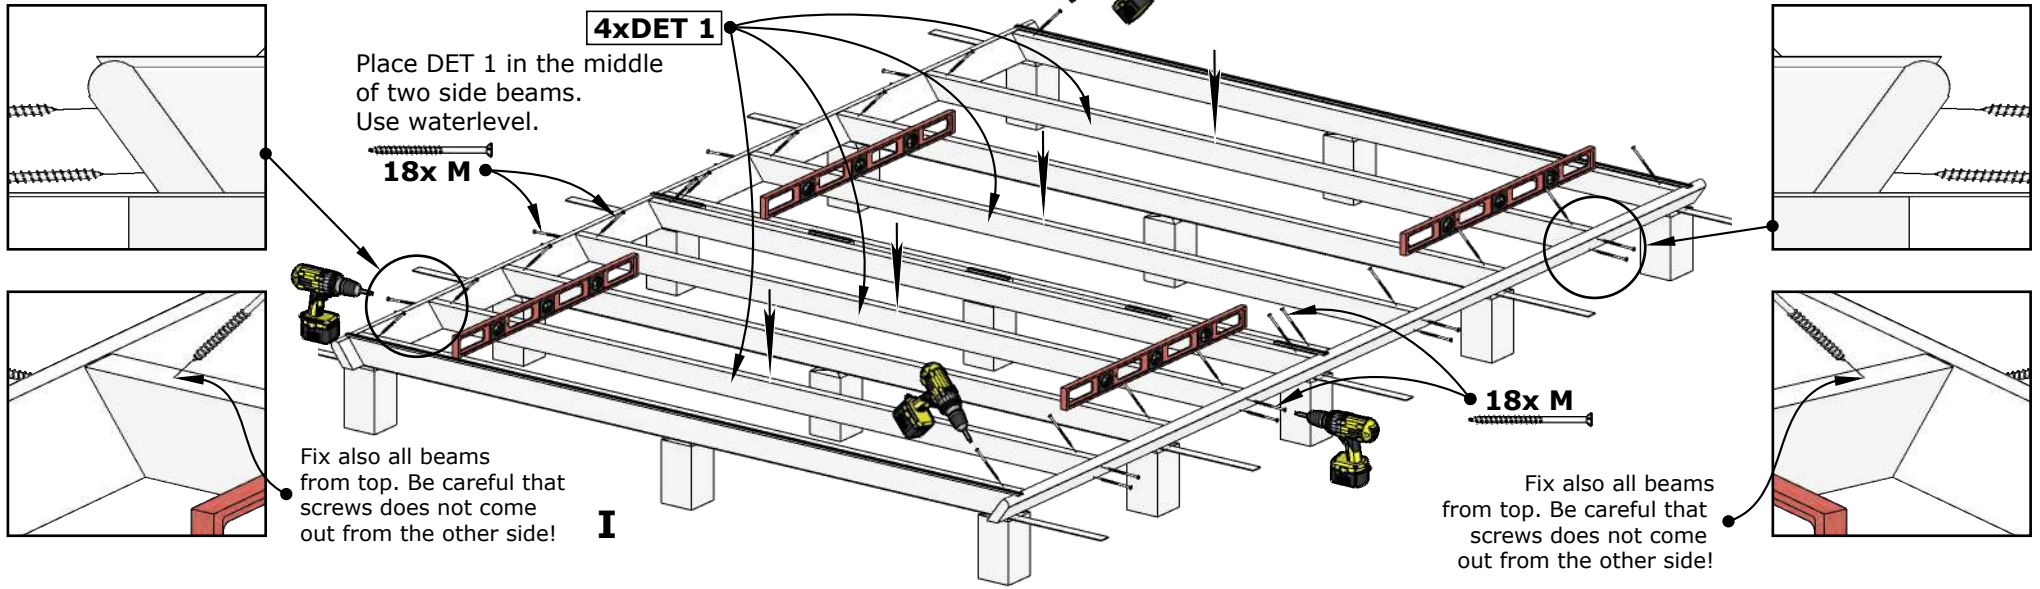

# Frodo 500


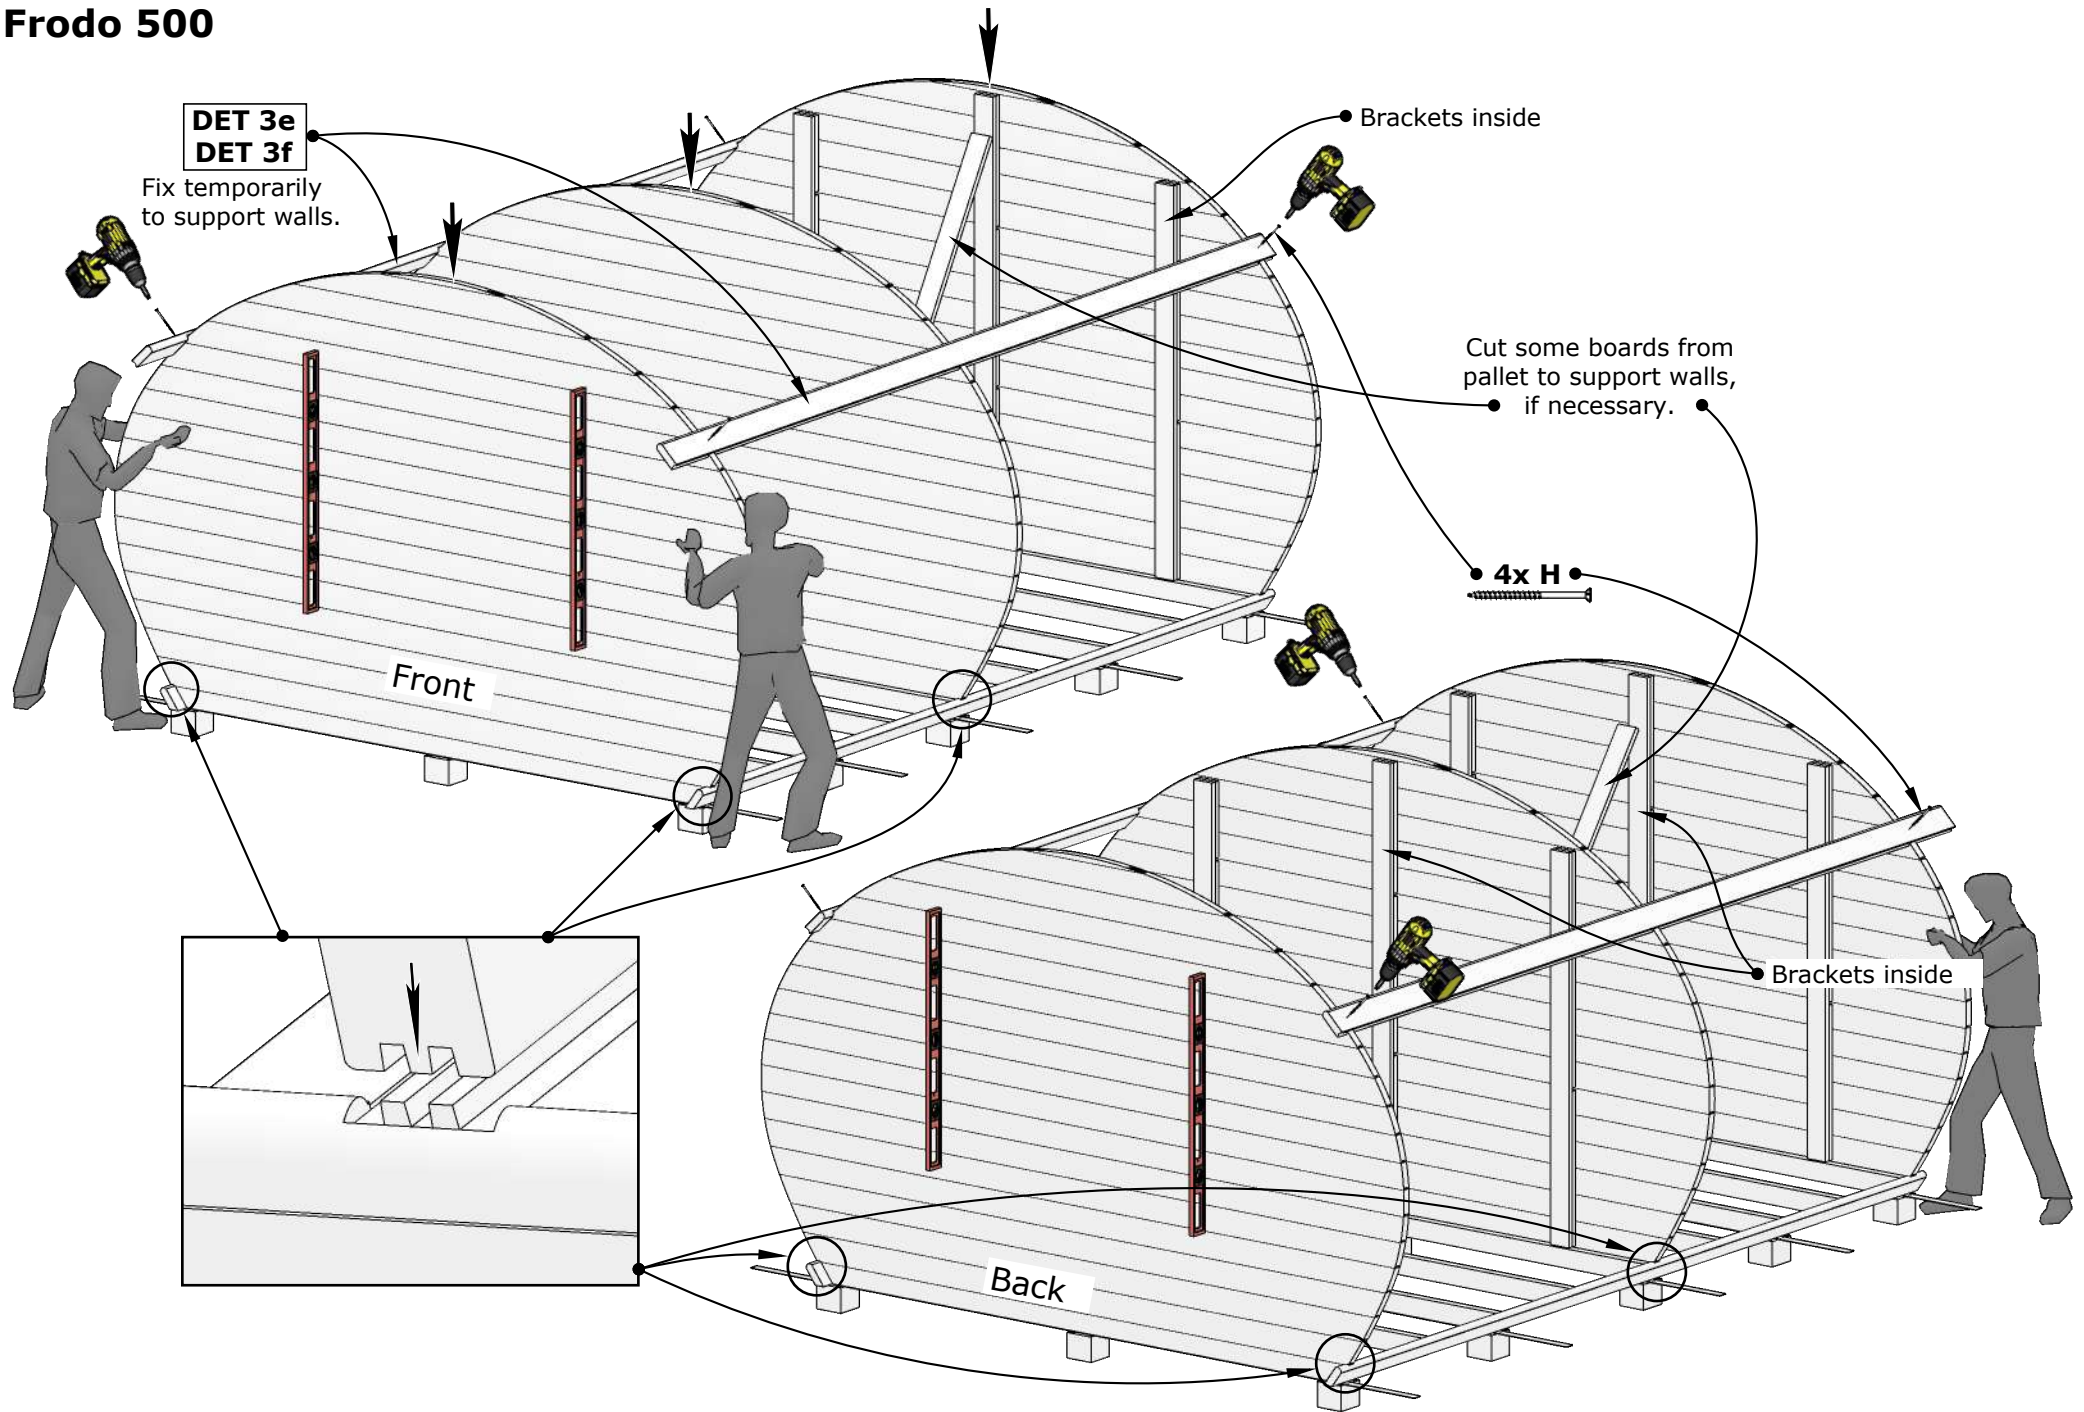


4.

( FRO-005 )




# Frodo 500

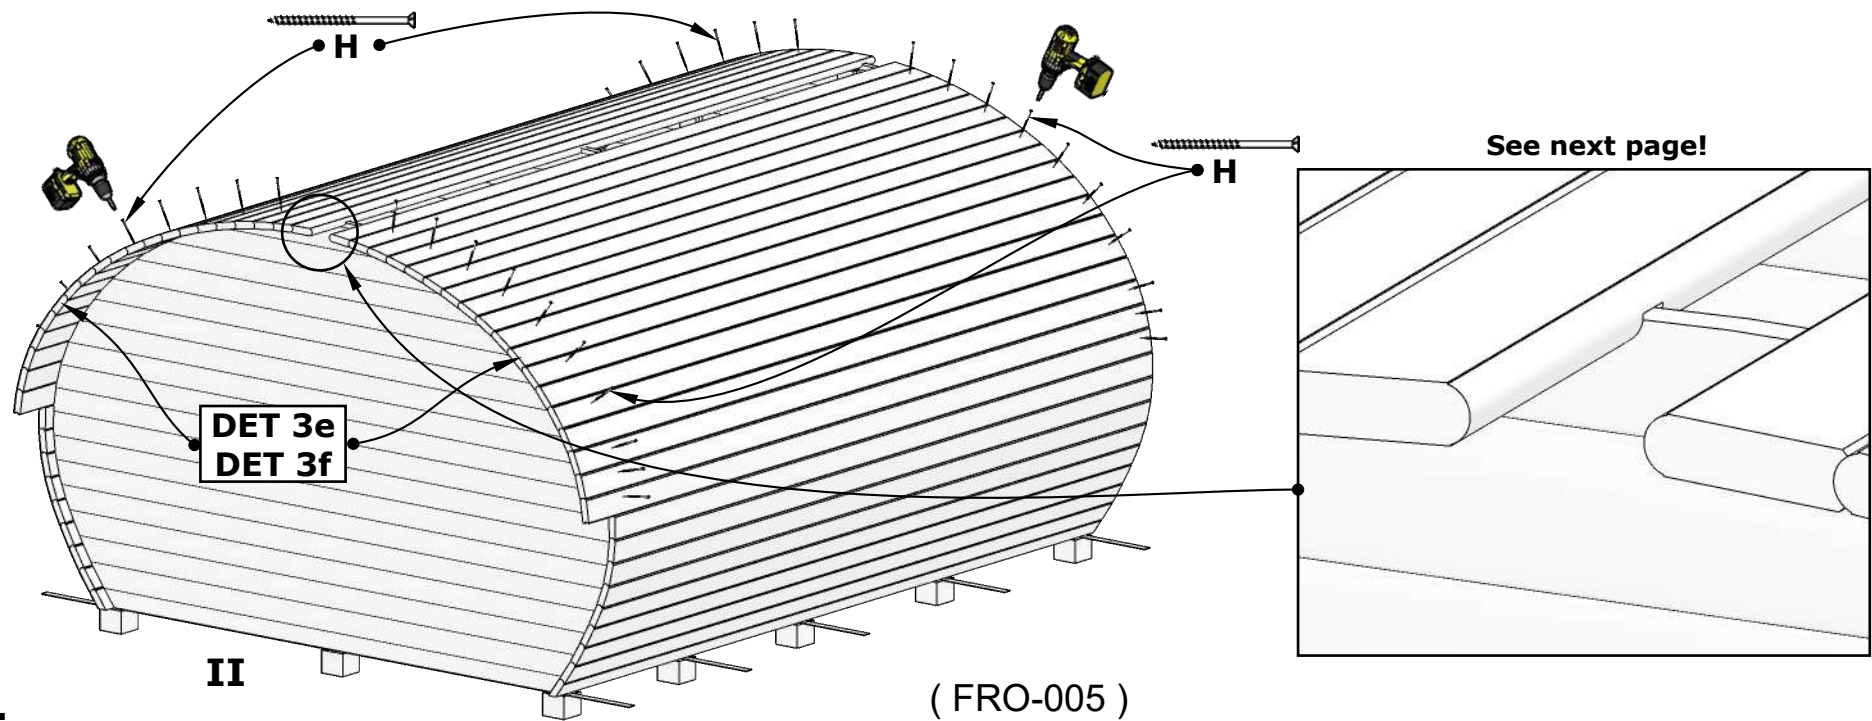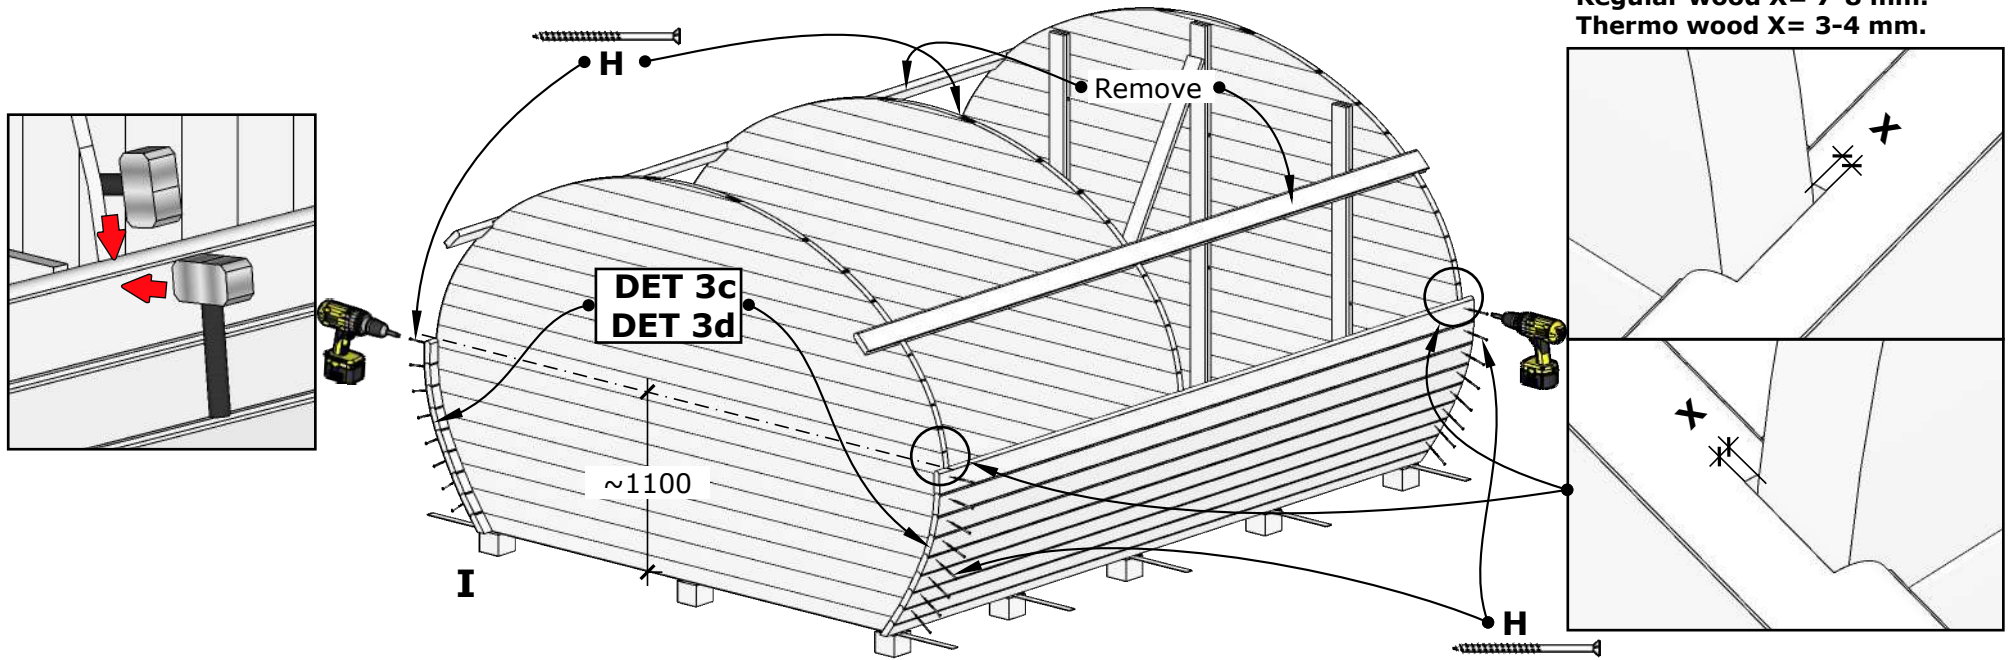


5.

( FRO-005 )

# Frodo 500

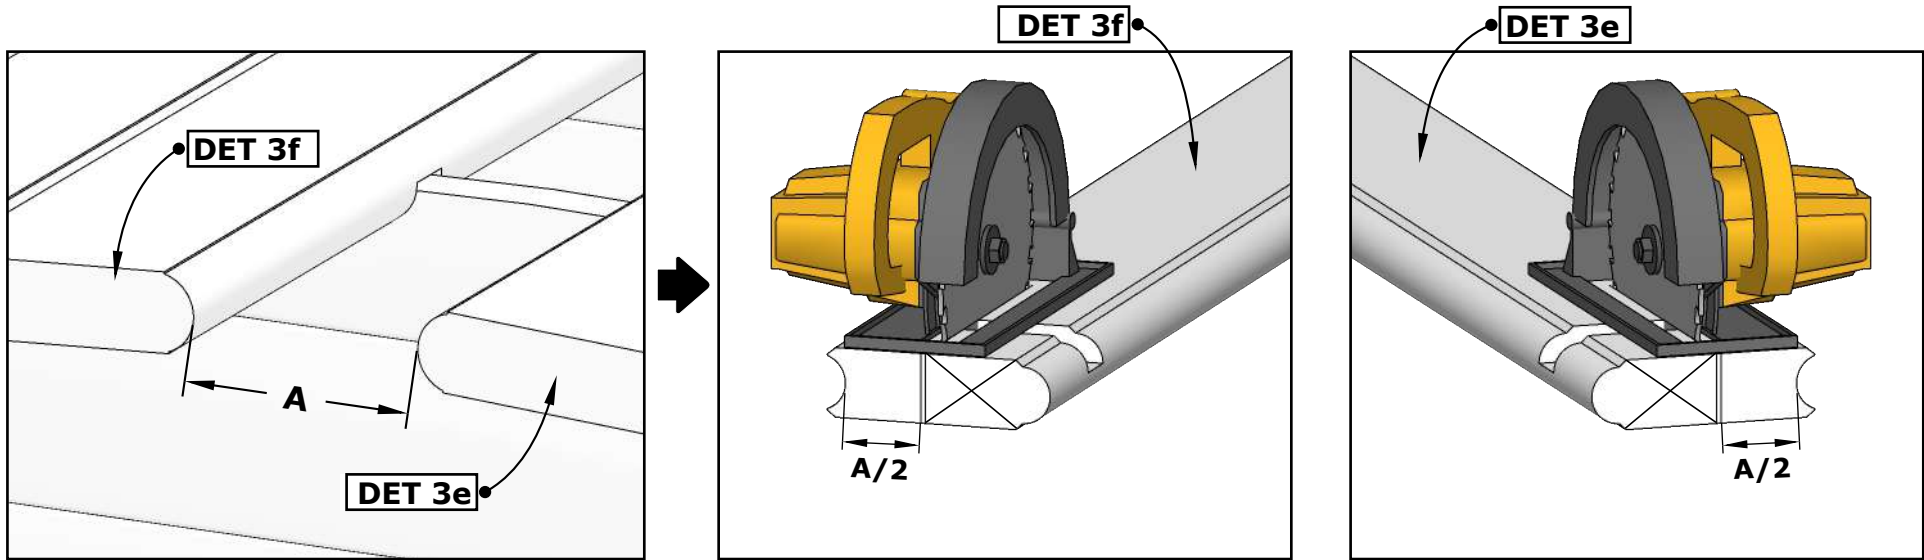

I

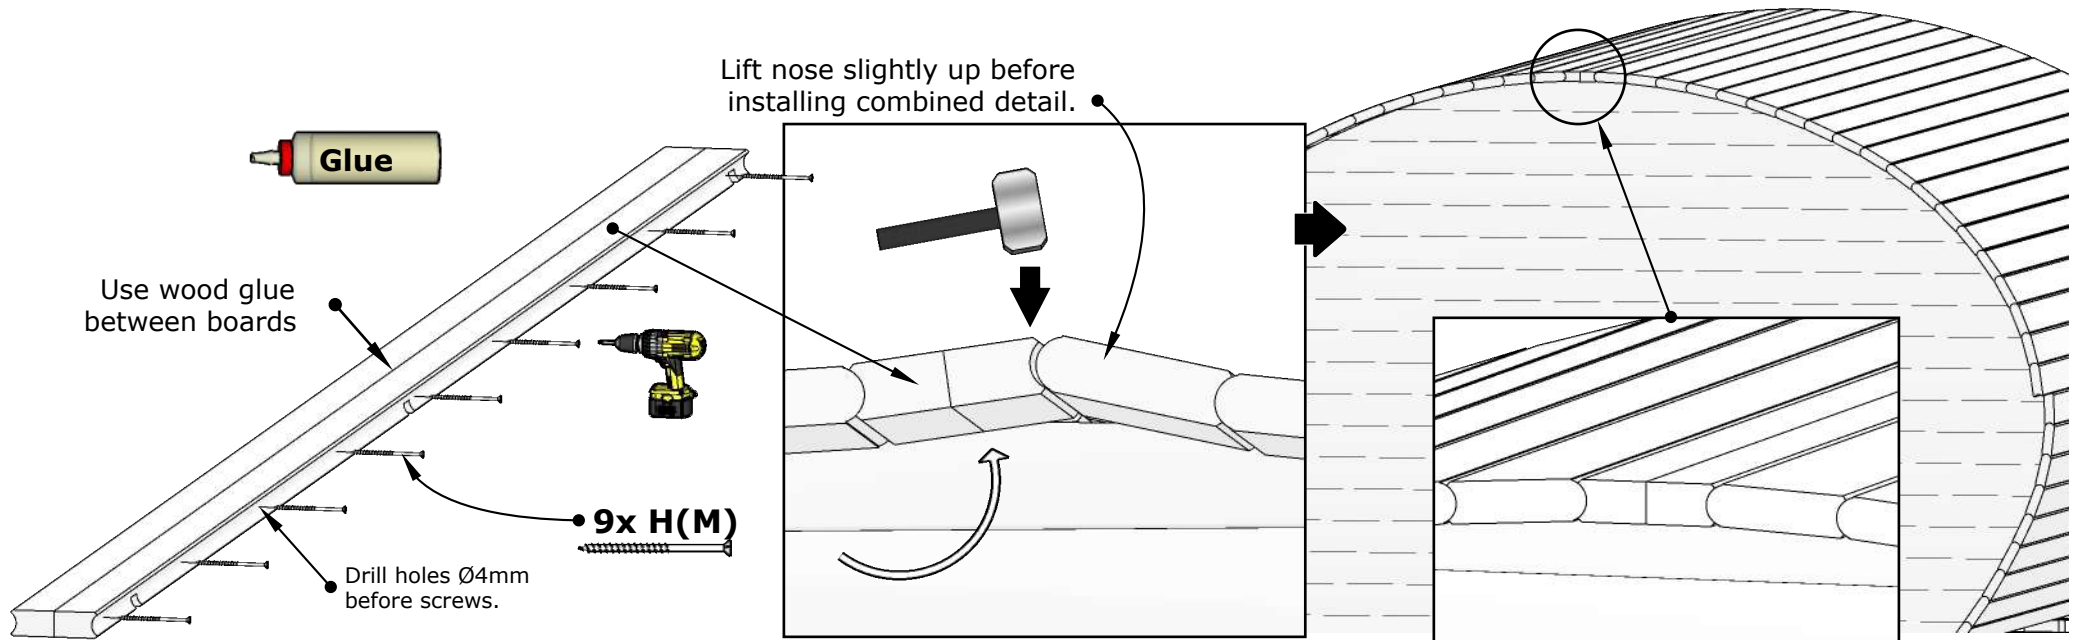


II


6.

( FRO-005 )

# Frodo 500

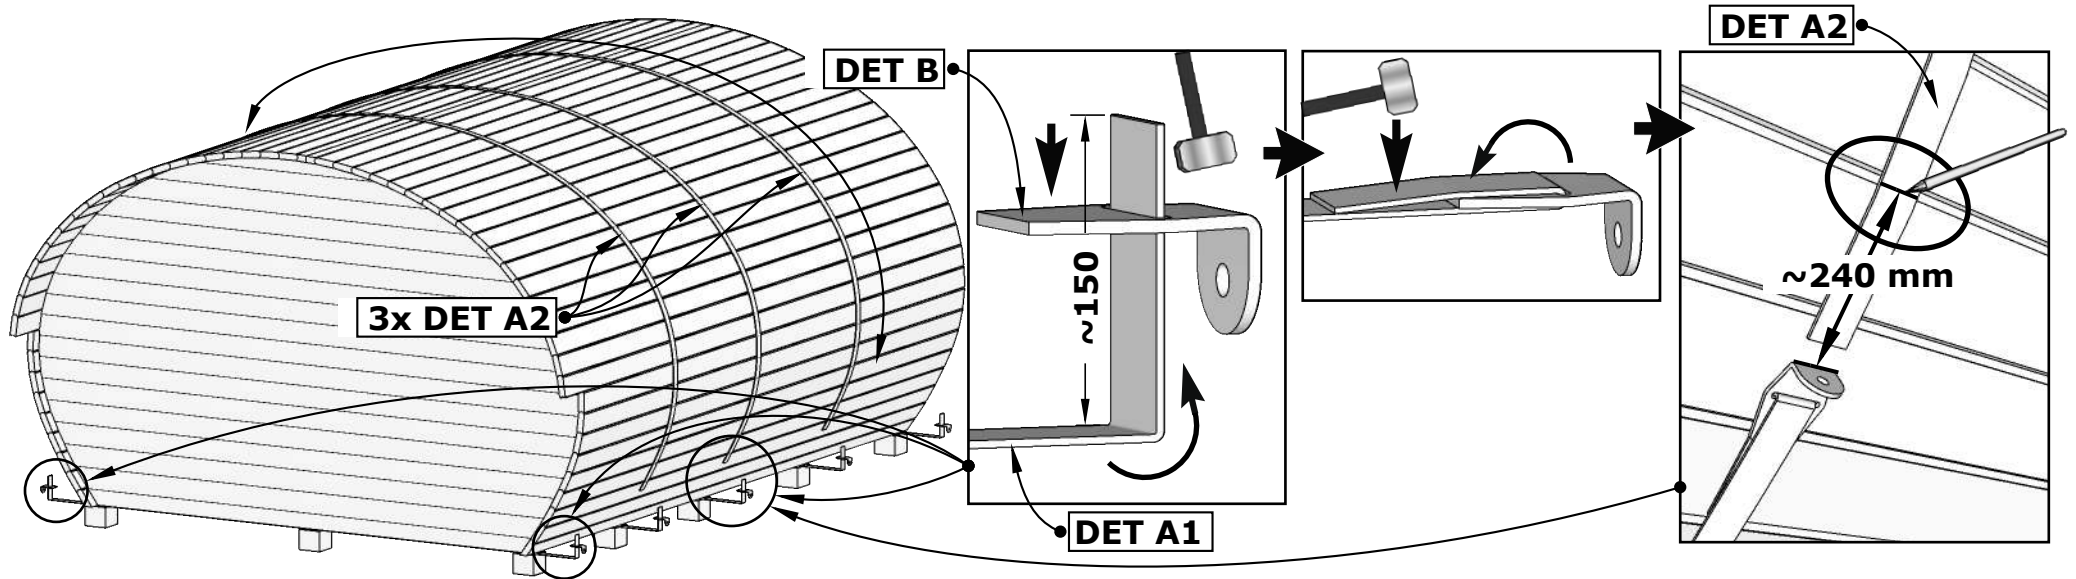

**I**




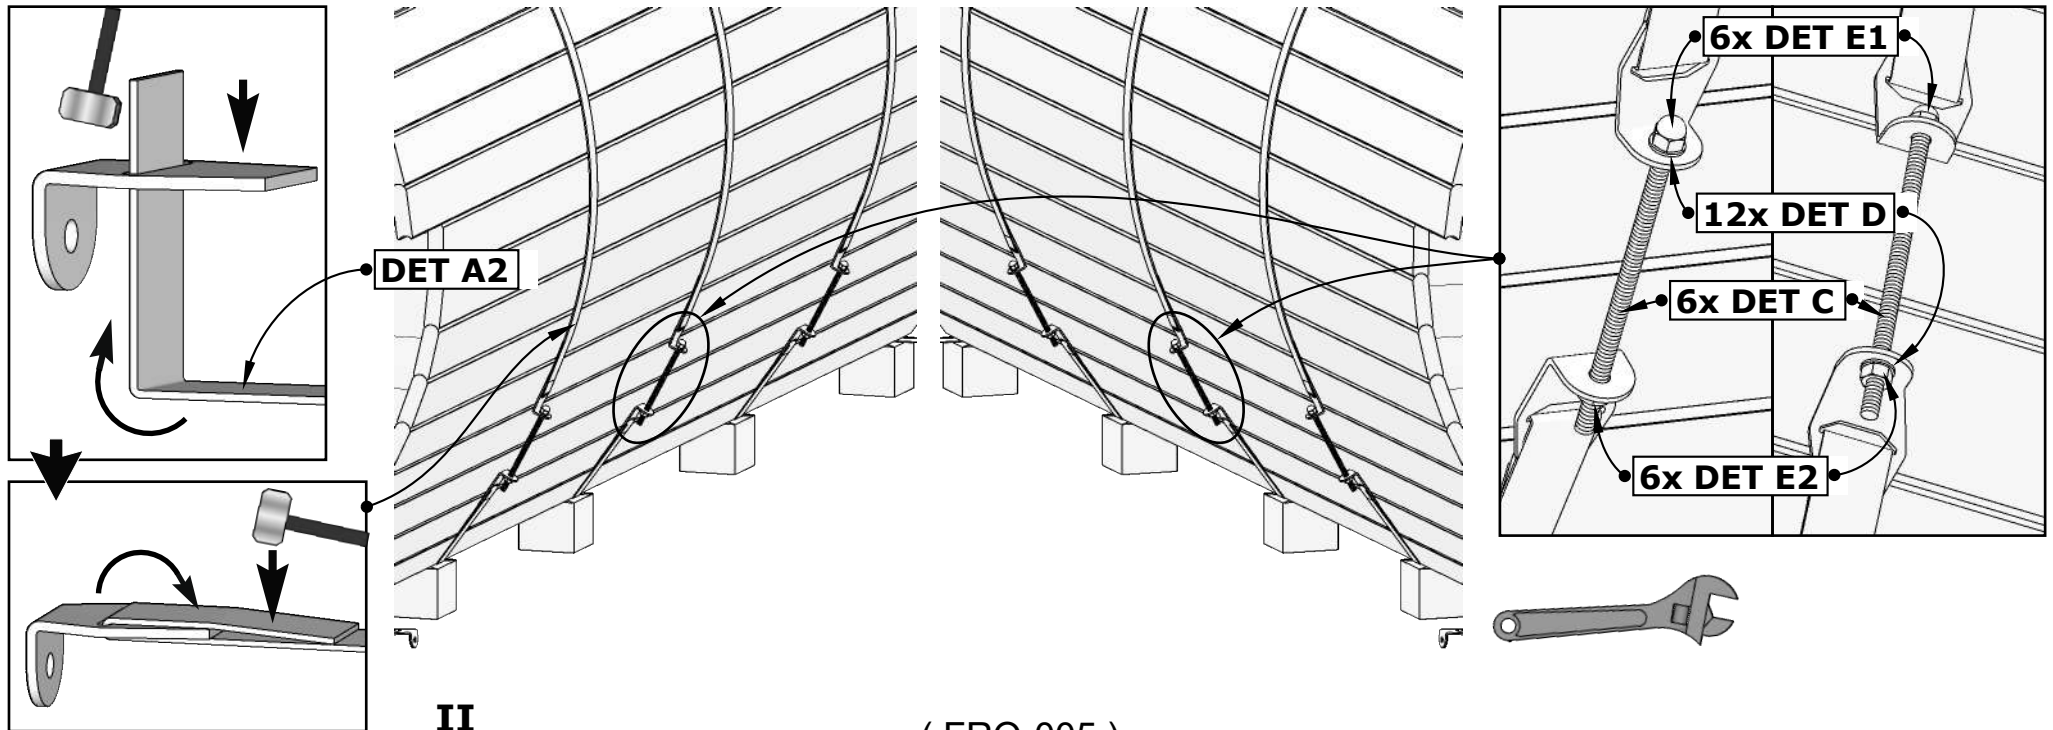


7.





**II**

( FRO-005 )


# Frodo 500

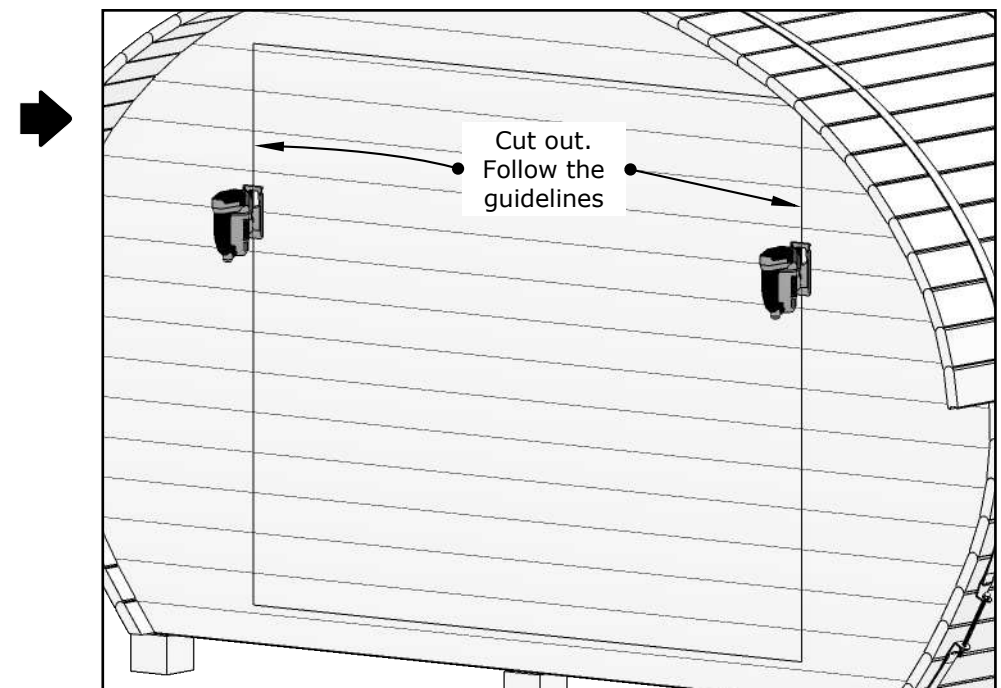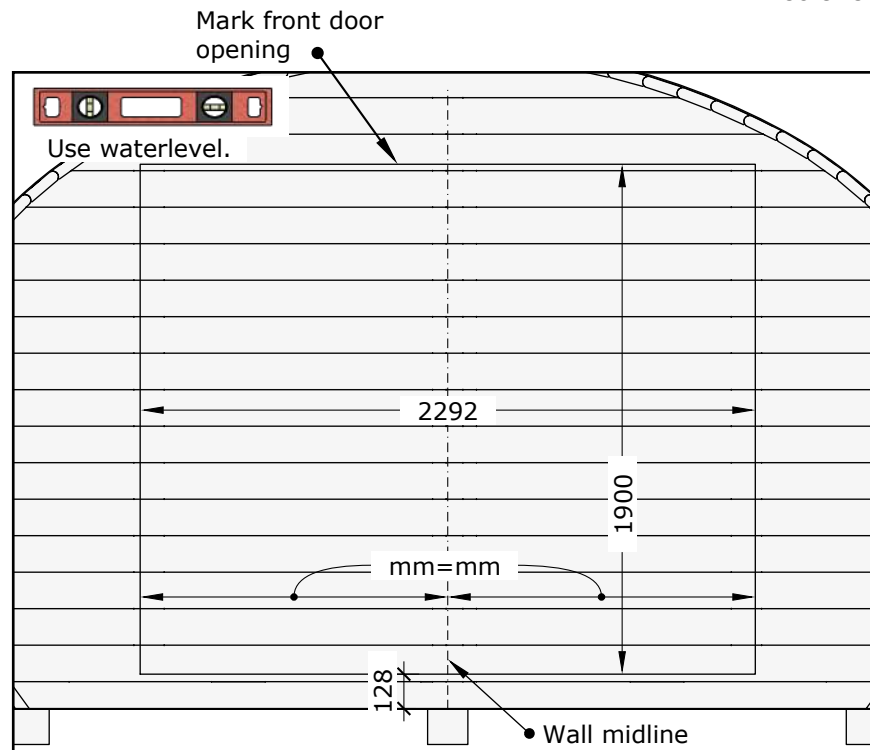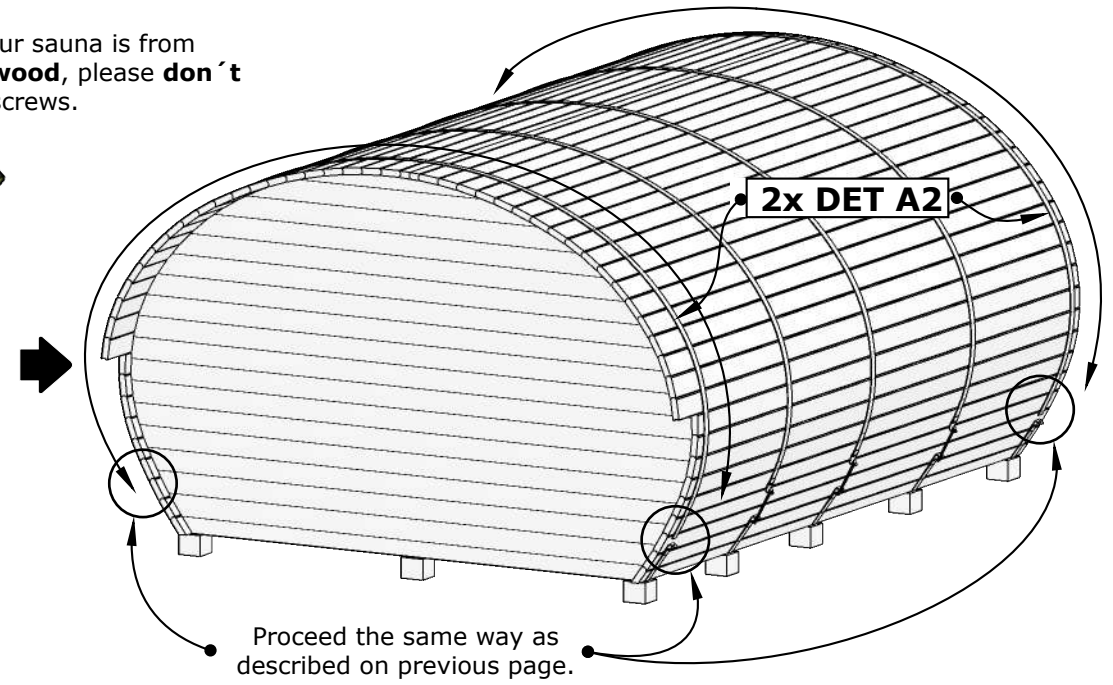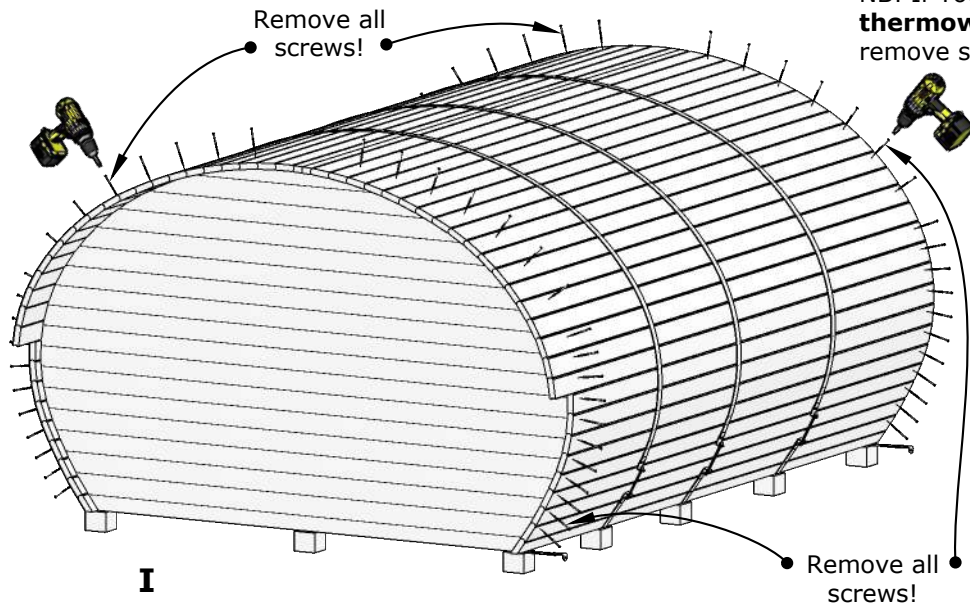


# Frodo 500

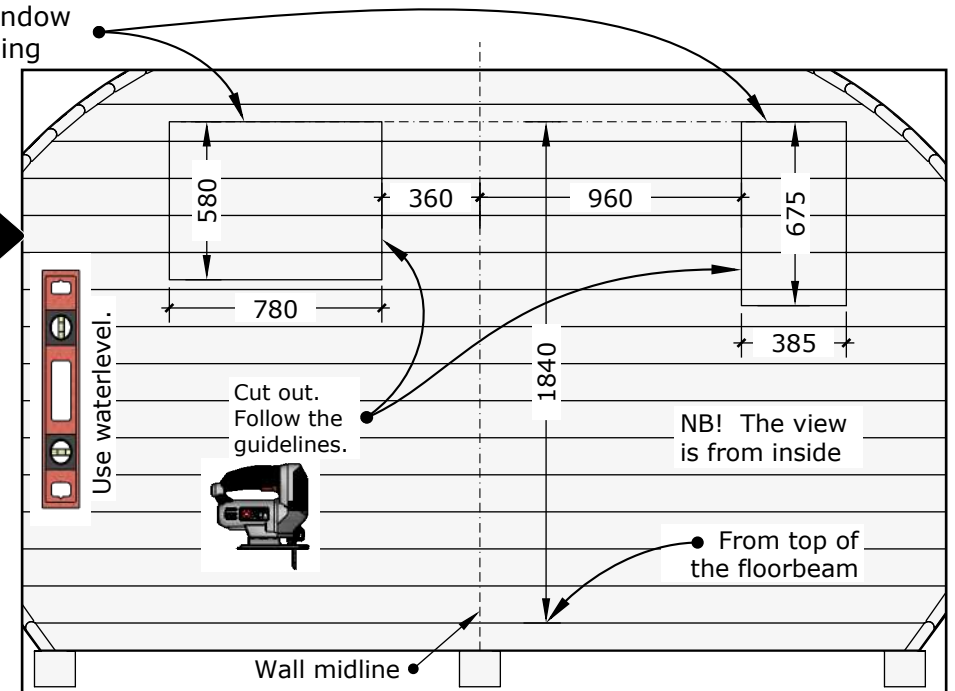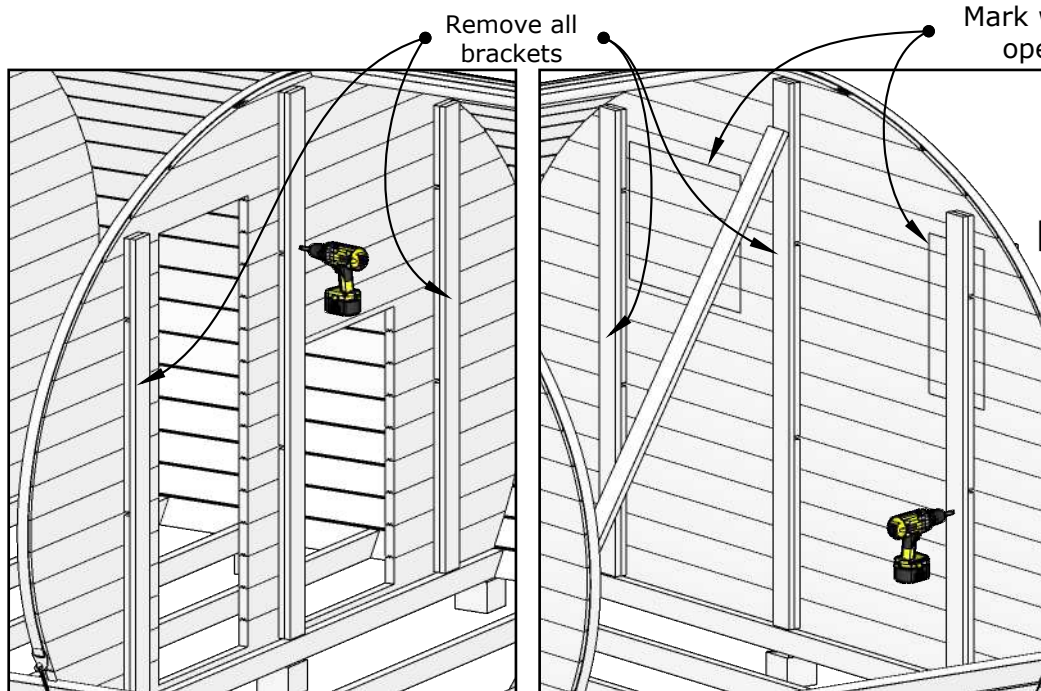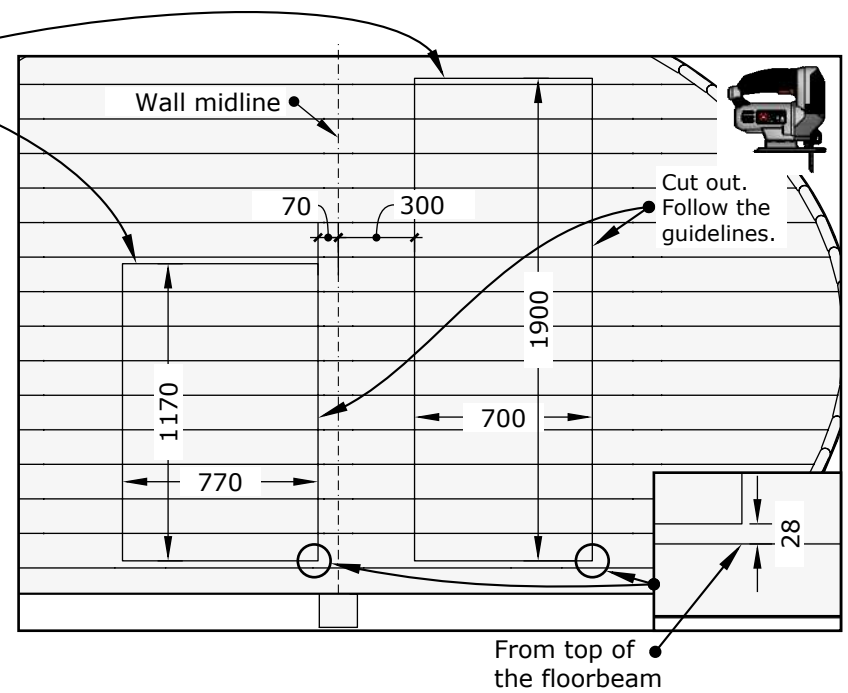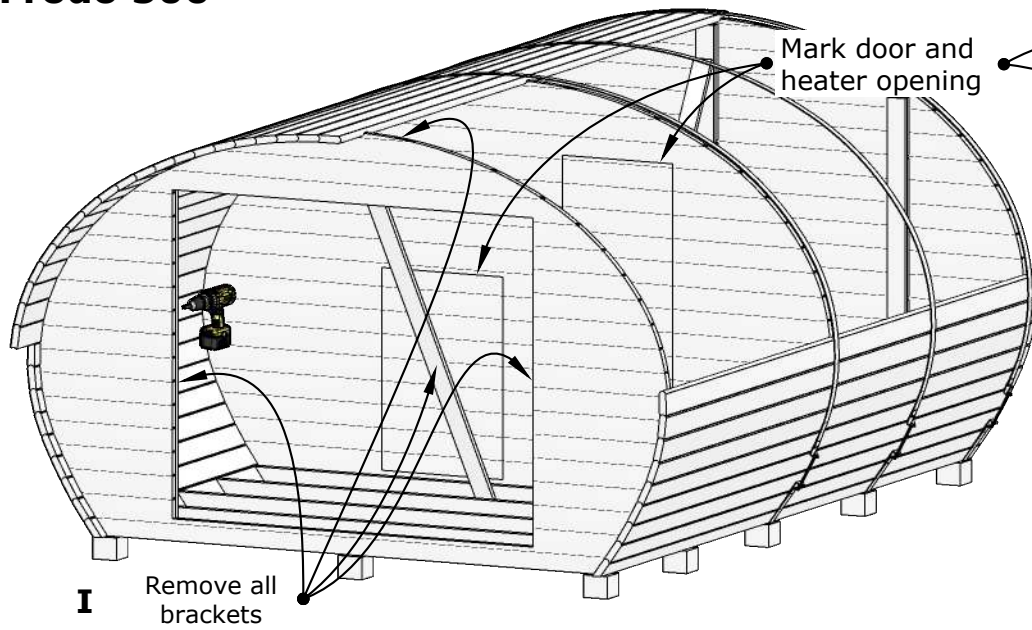

# Frodo 500

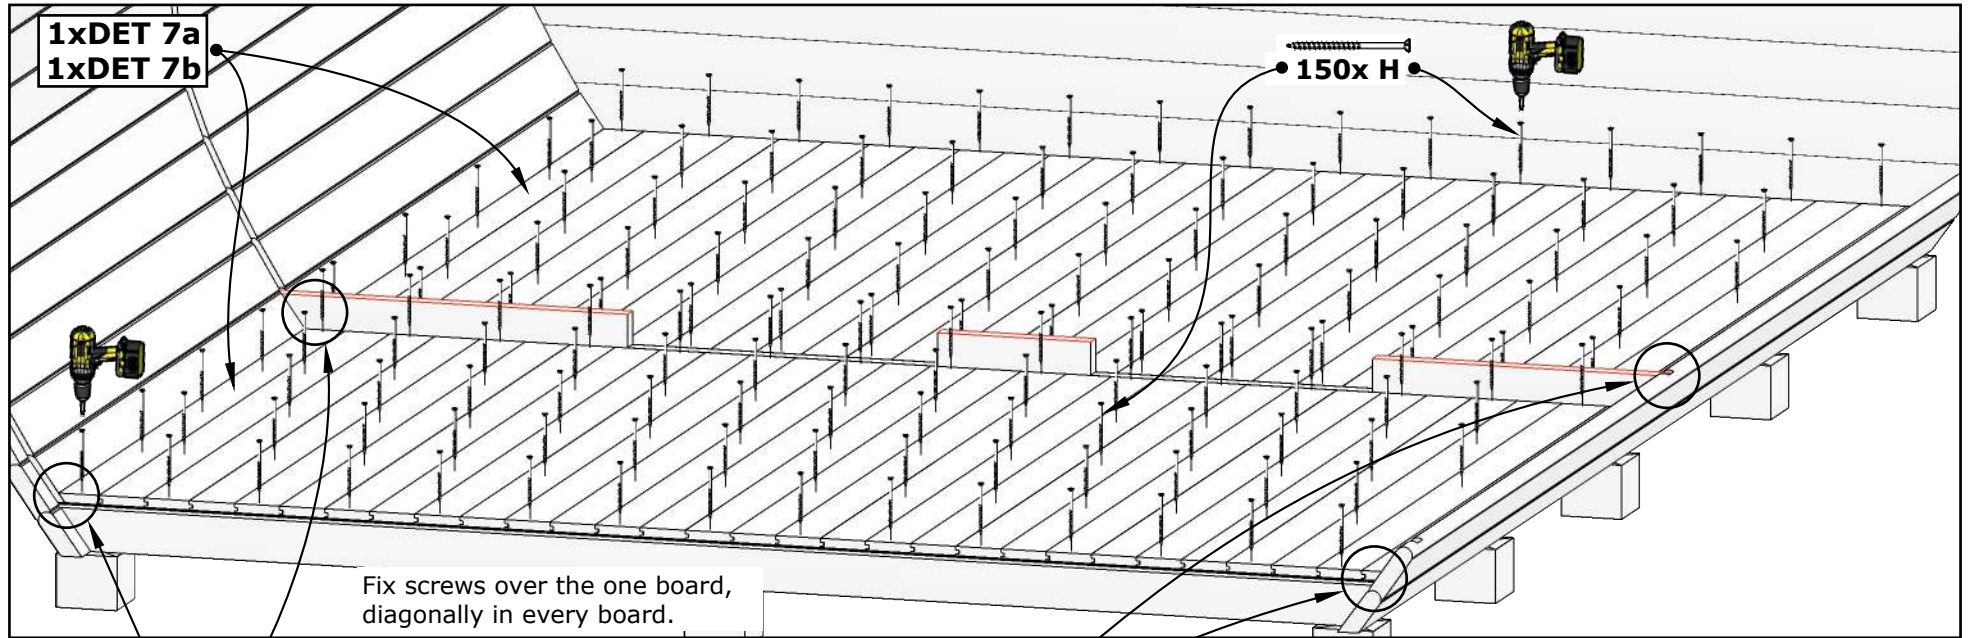


I

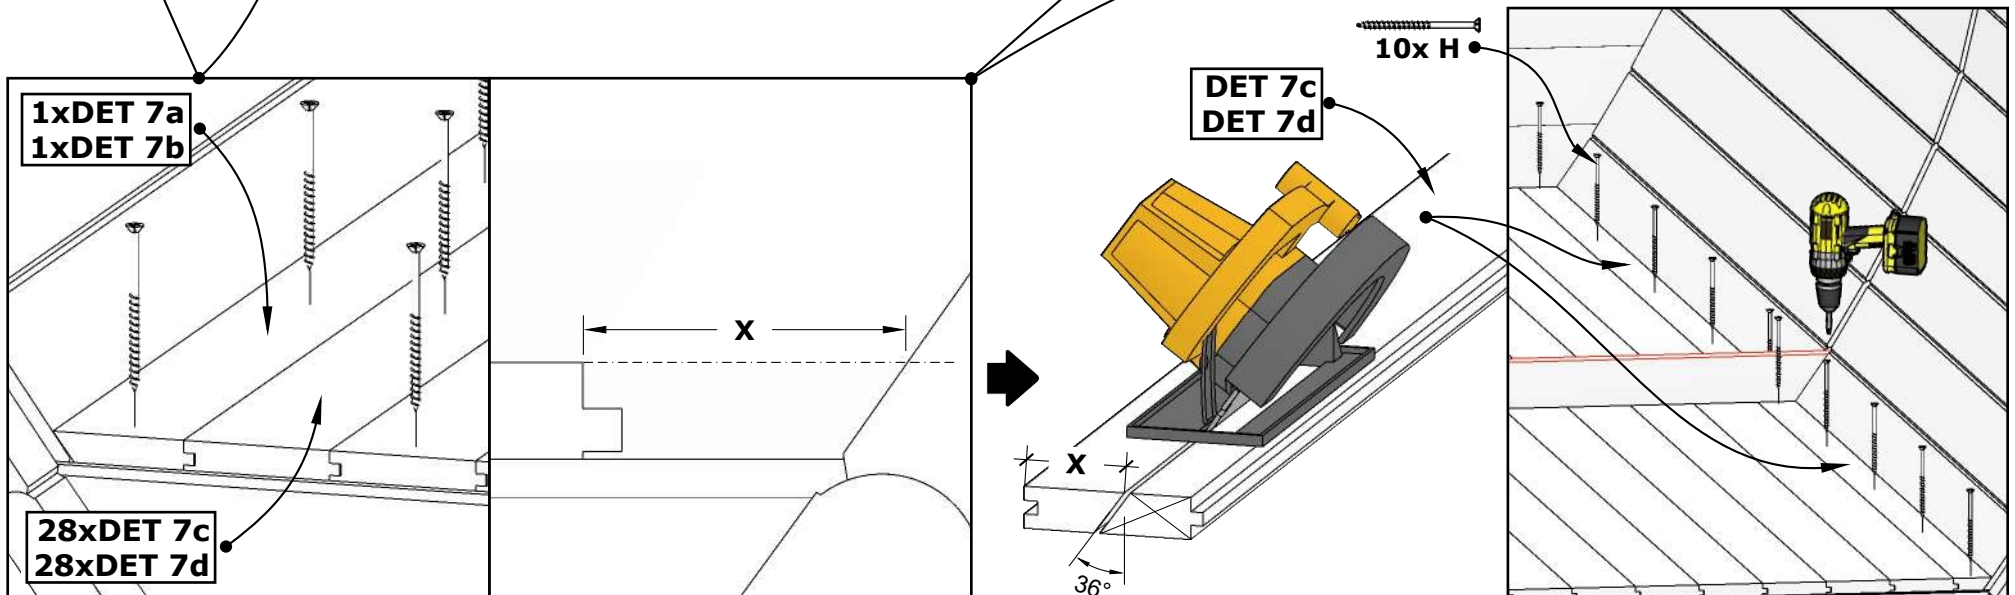


II

# Frodo 500

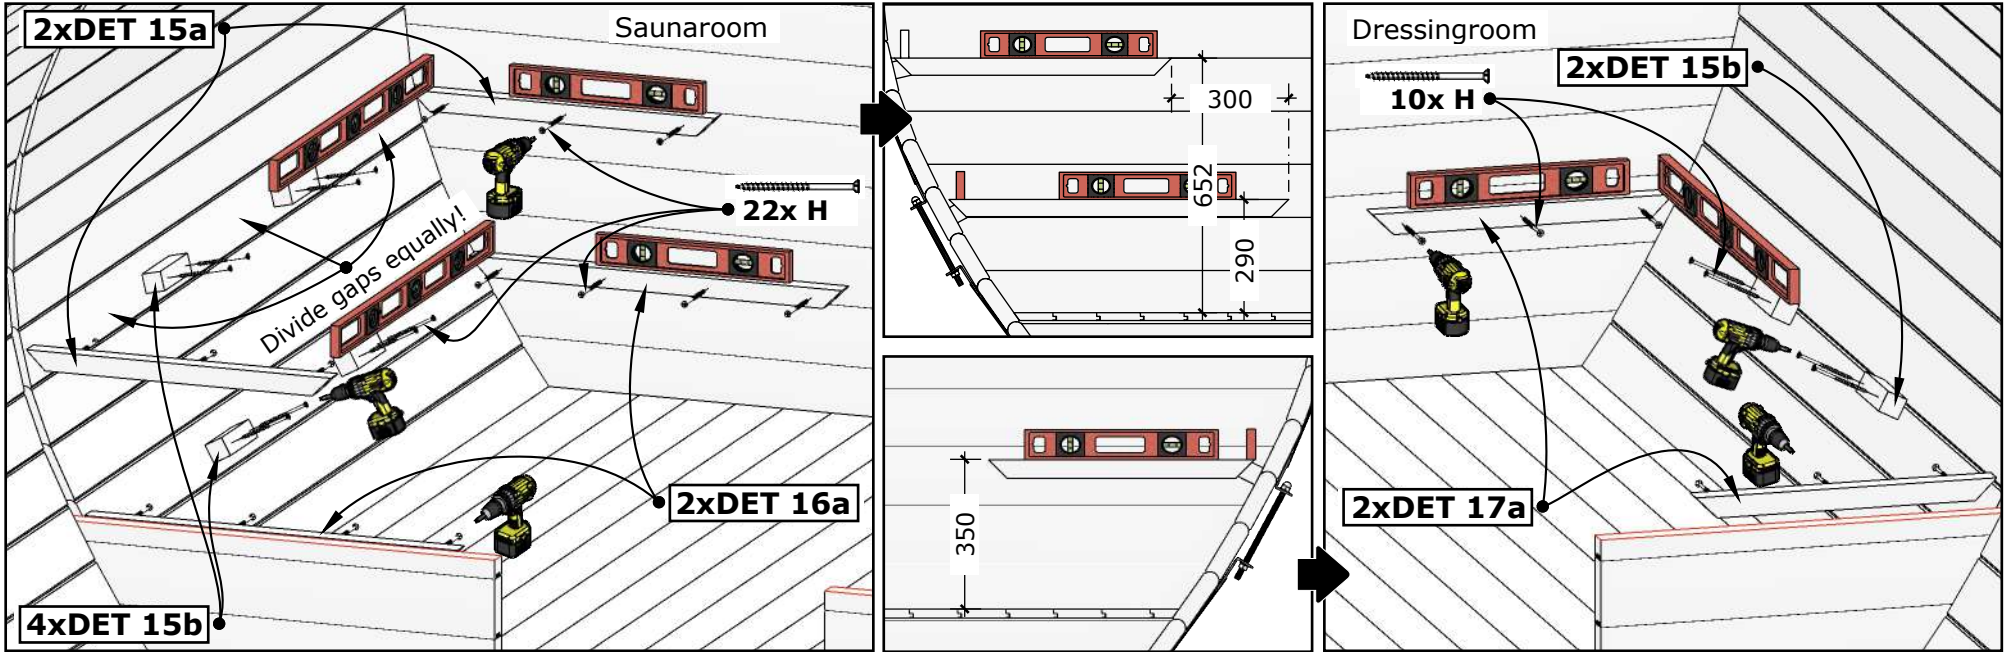


I


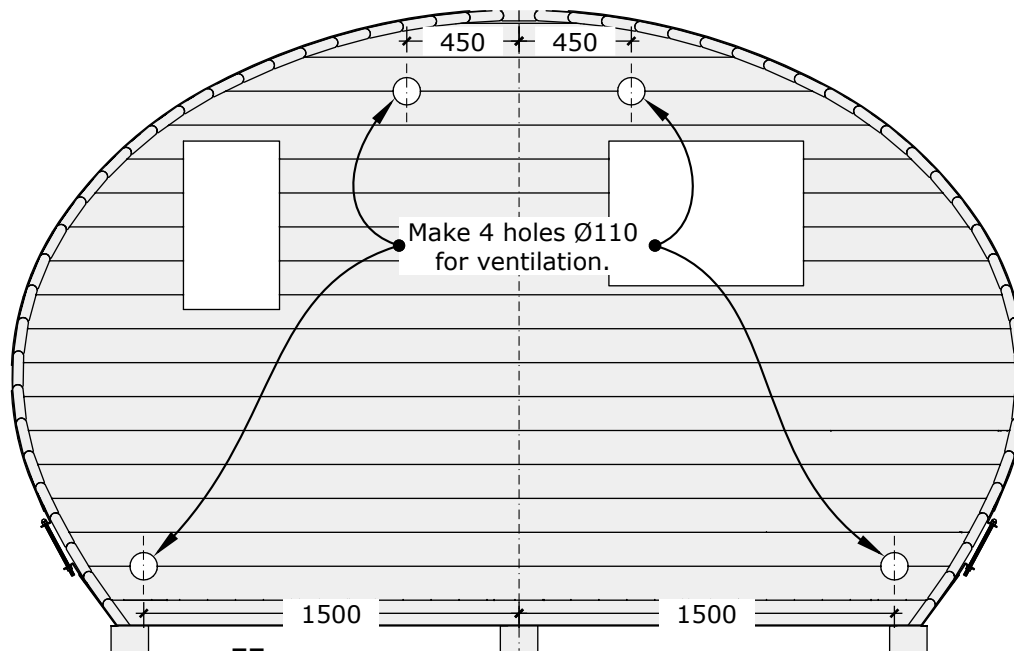


II


( FRO-005 )

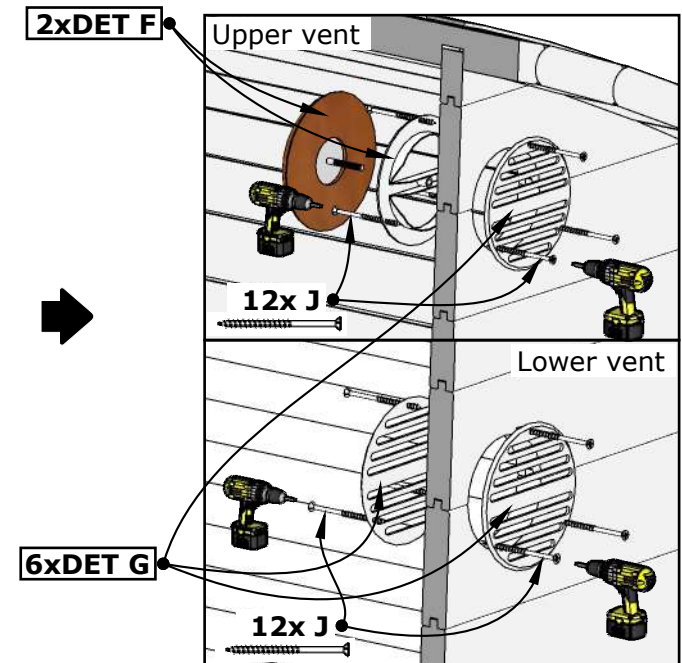




# Frodo 500

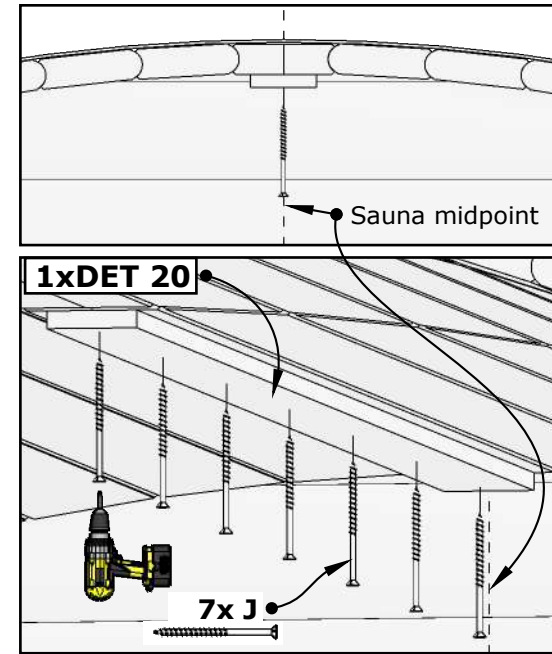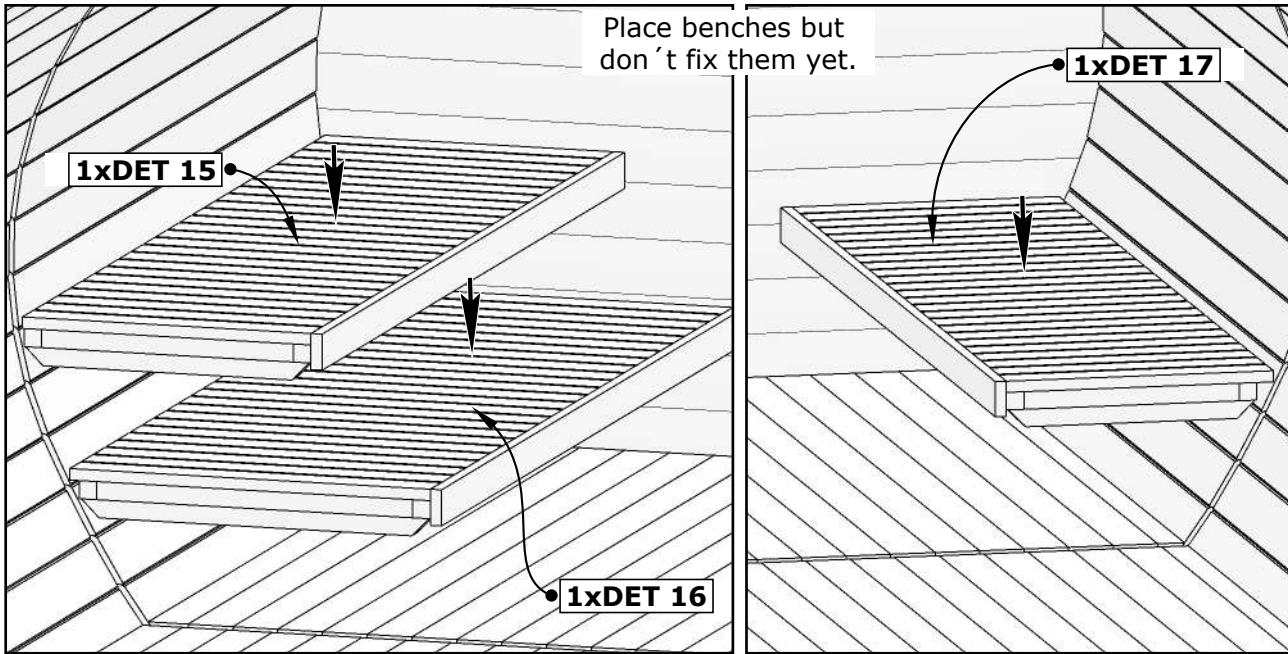

I

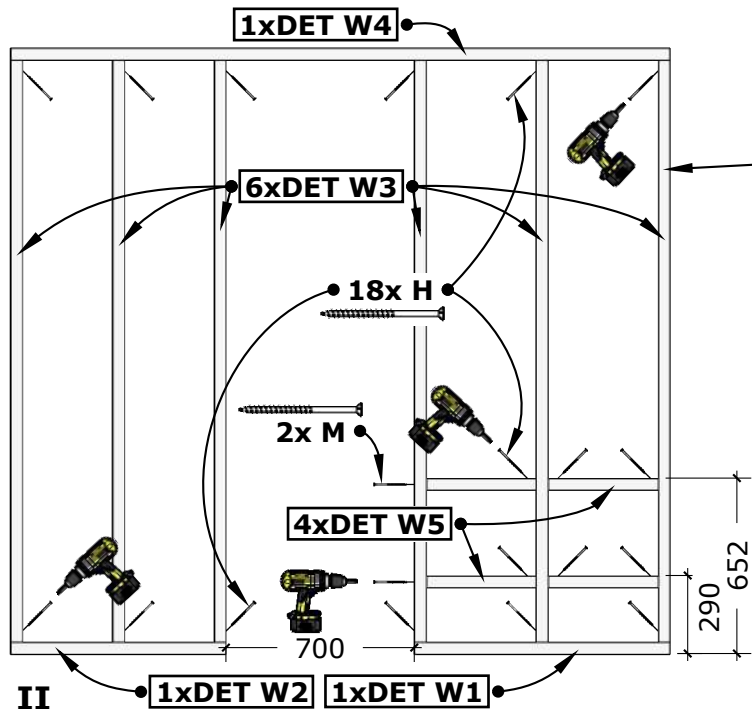


12. II

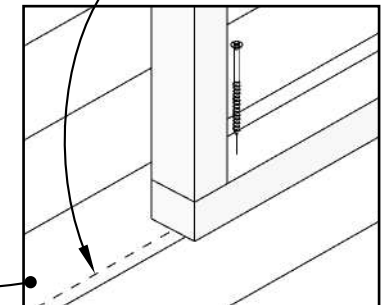
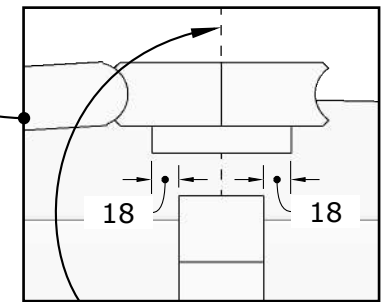
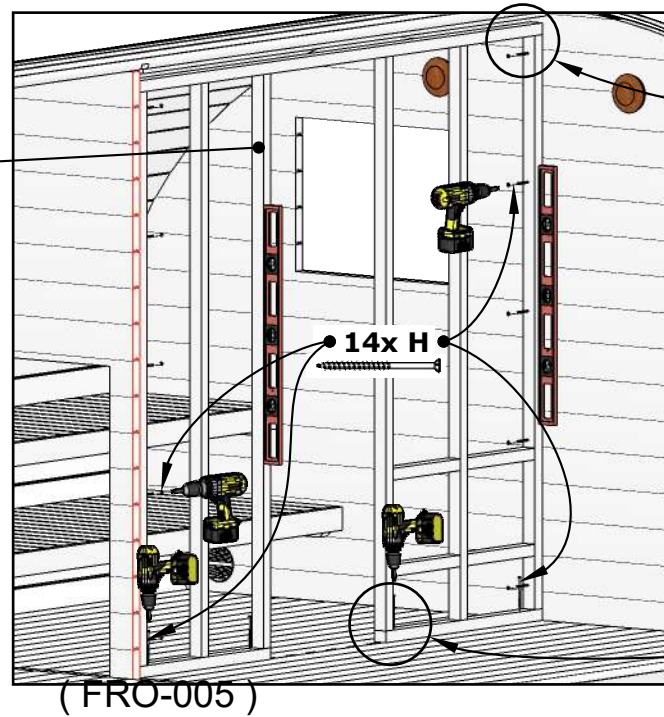




# Frodo 500

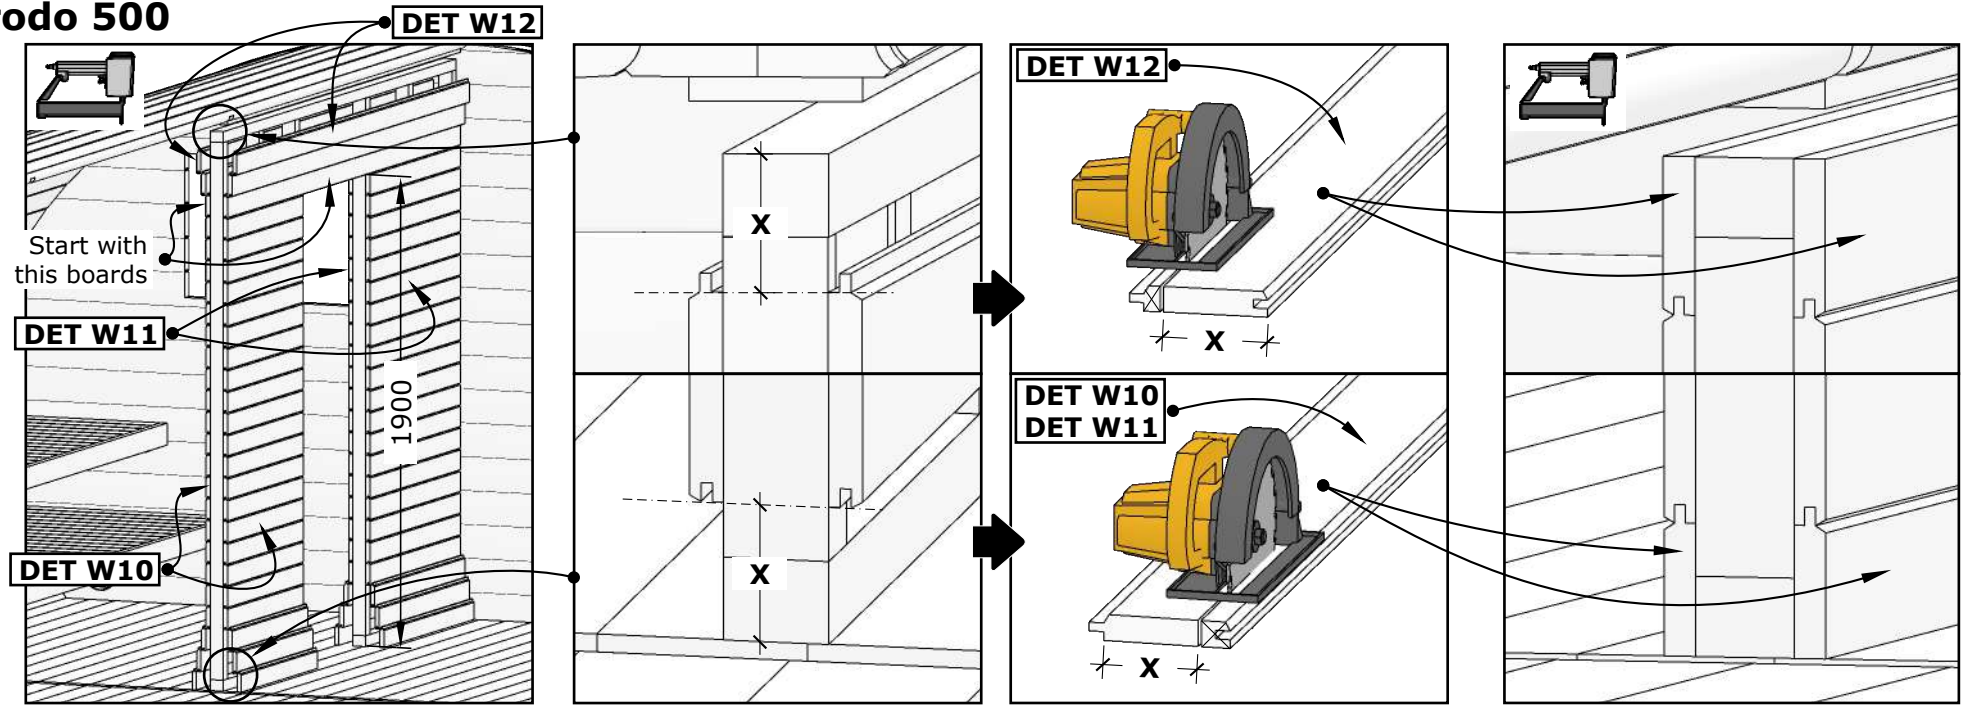



I

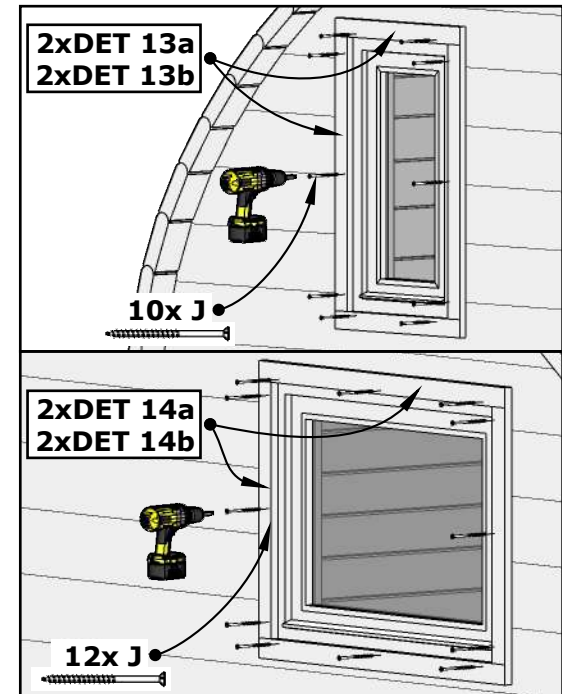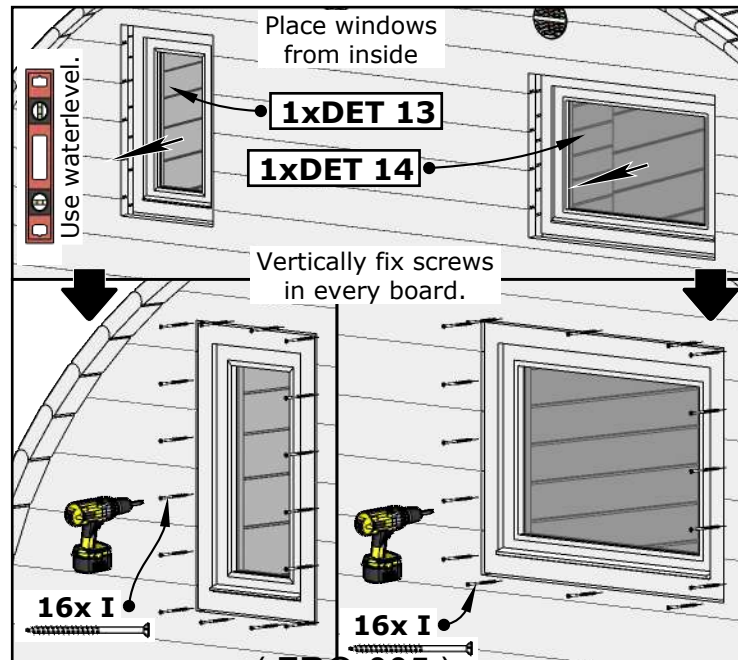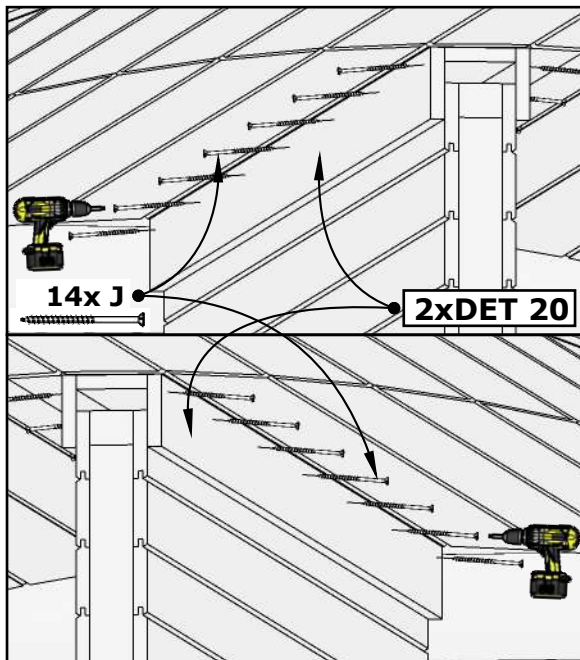


13. II

(FRO-005)


# Frodo 500

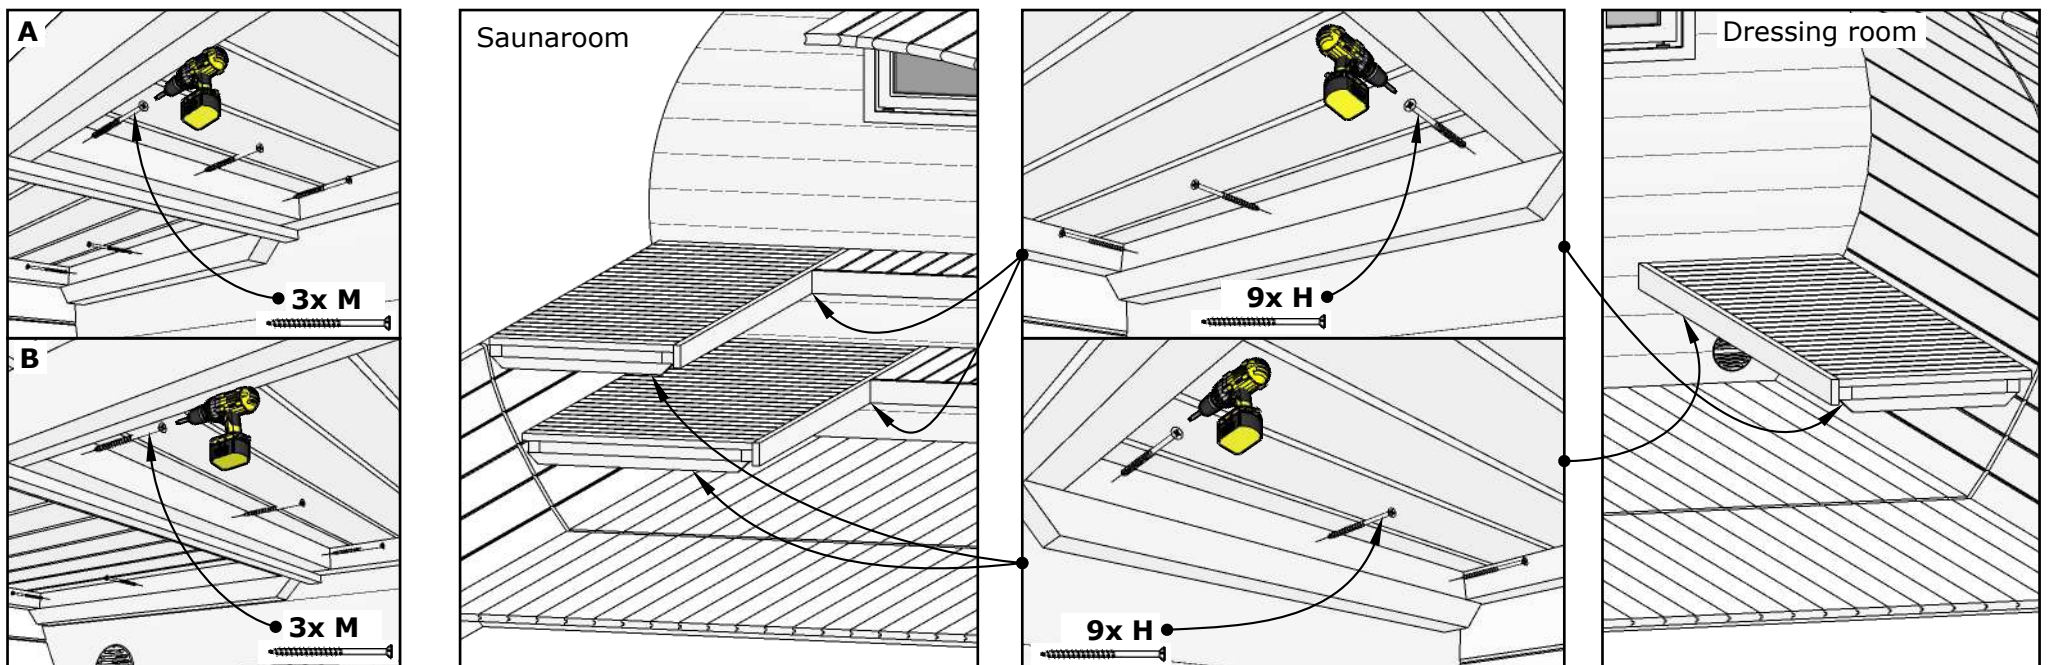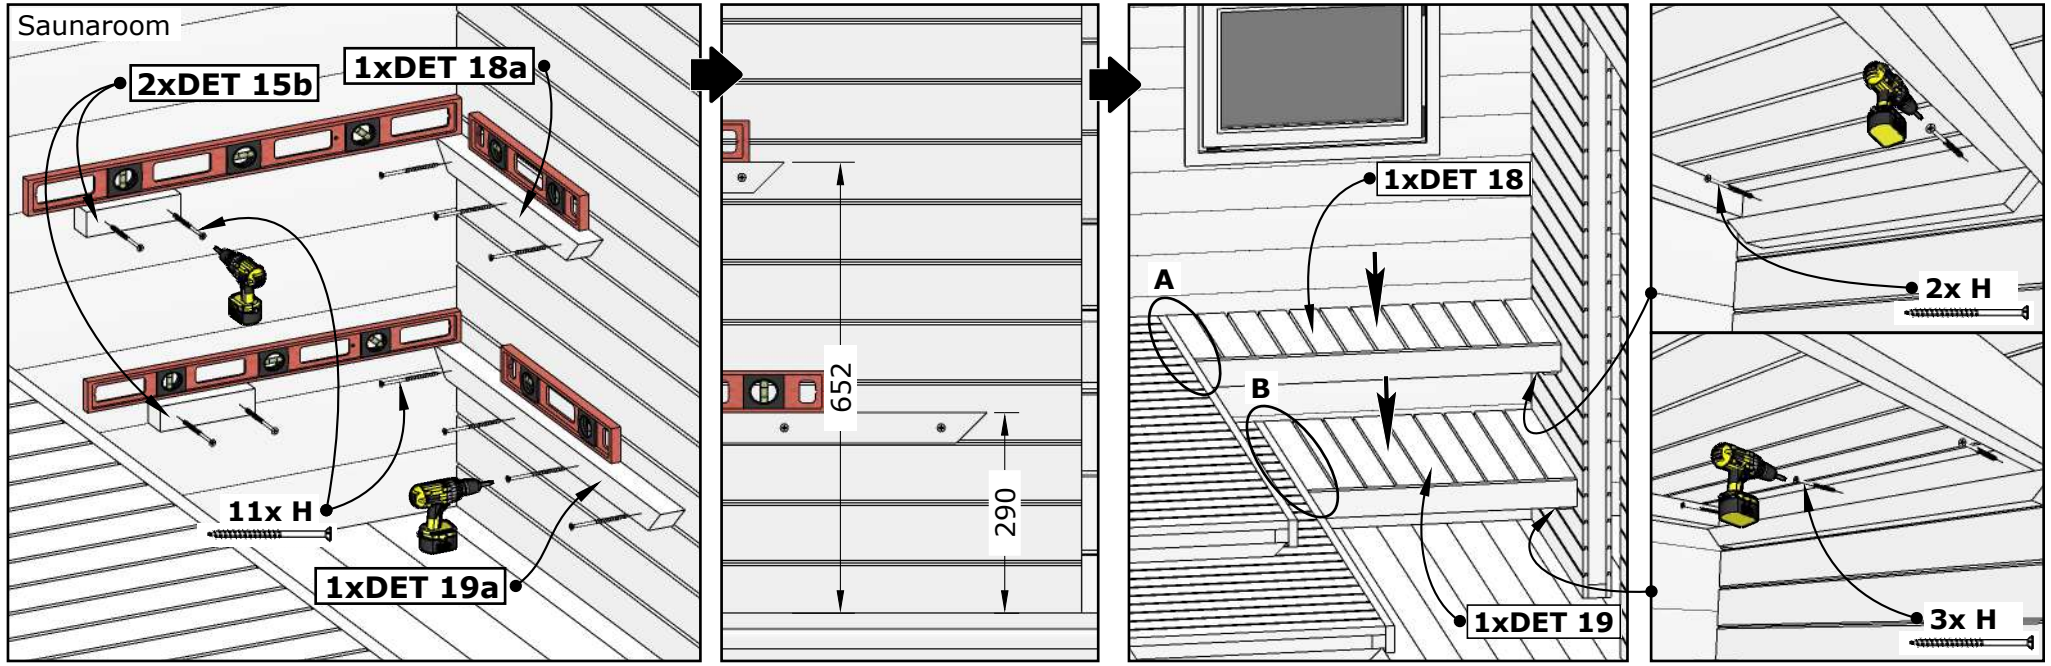










# Frodo 500

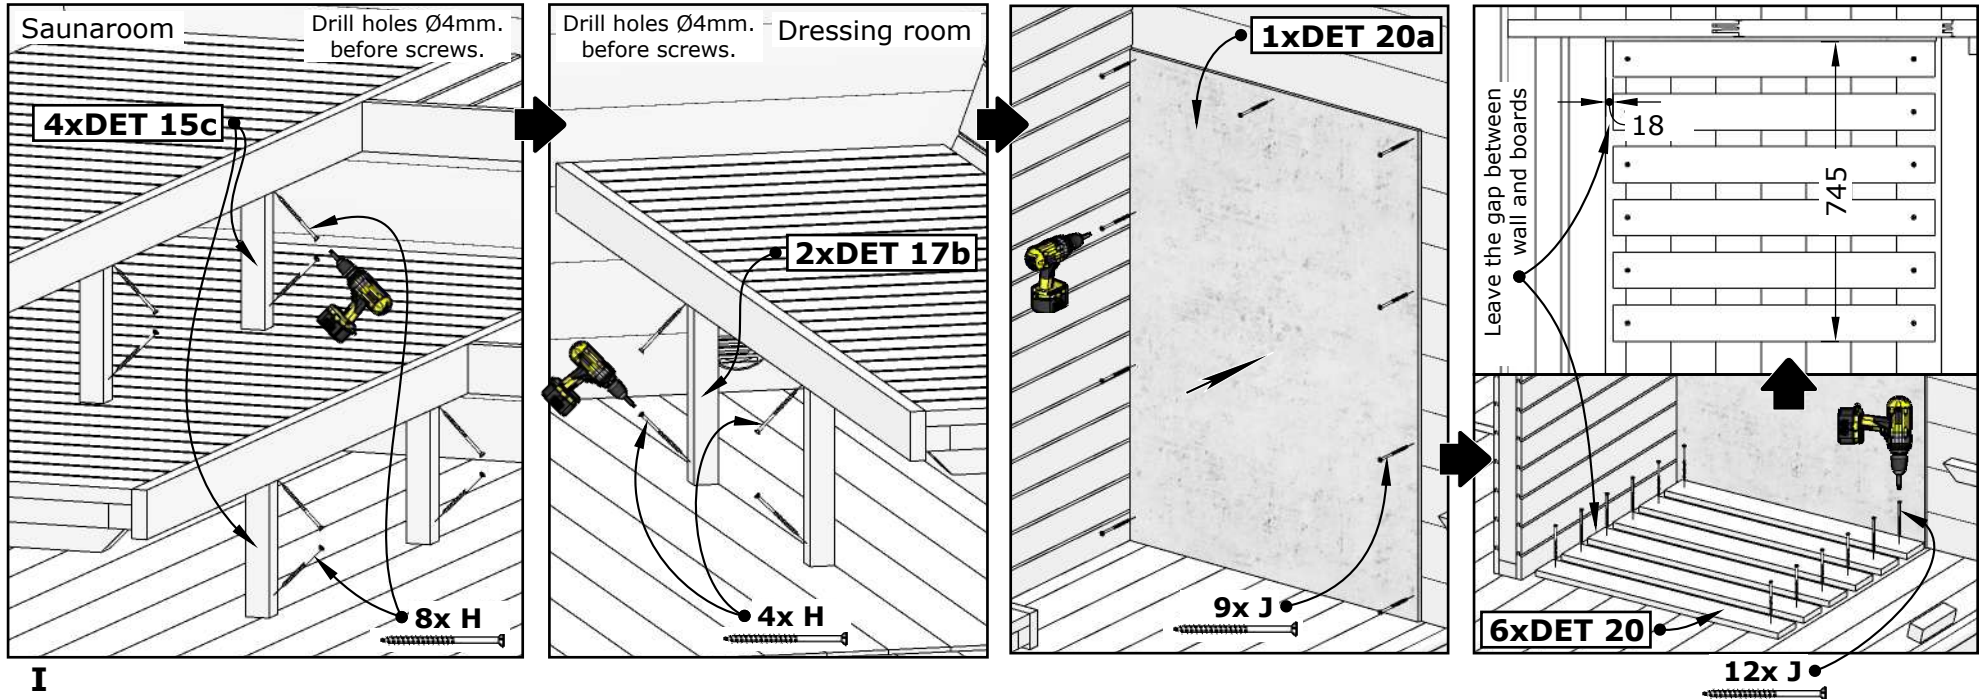

I

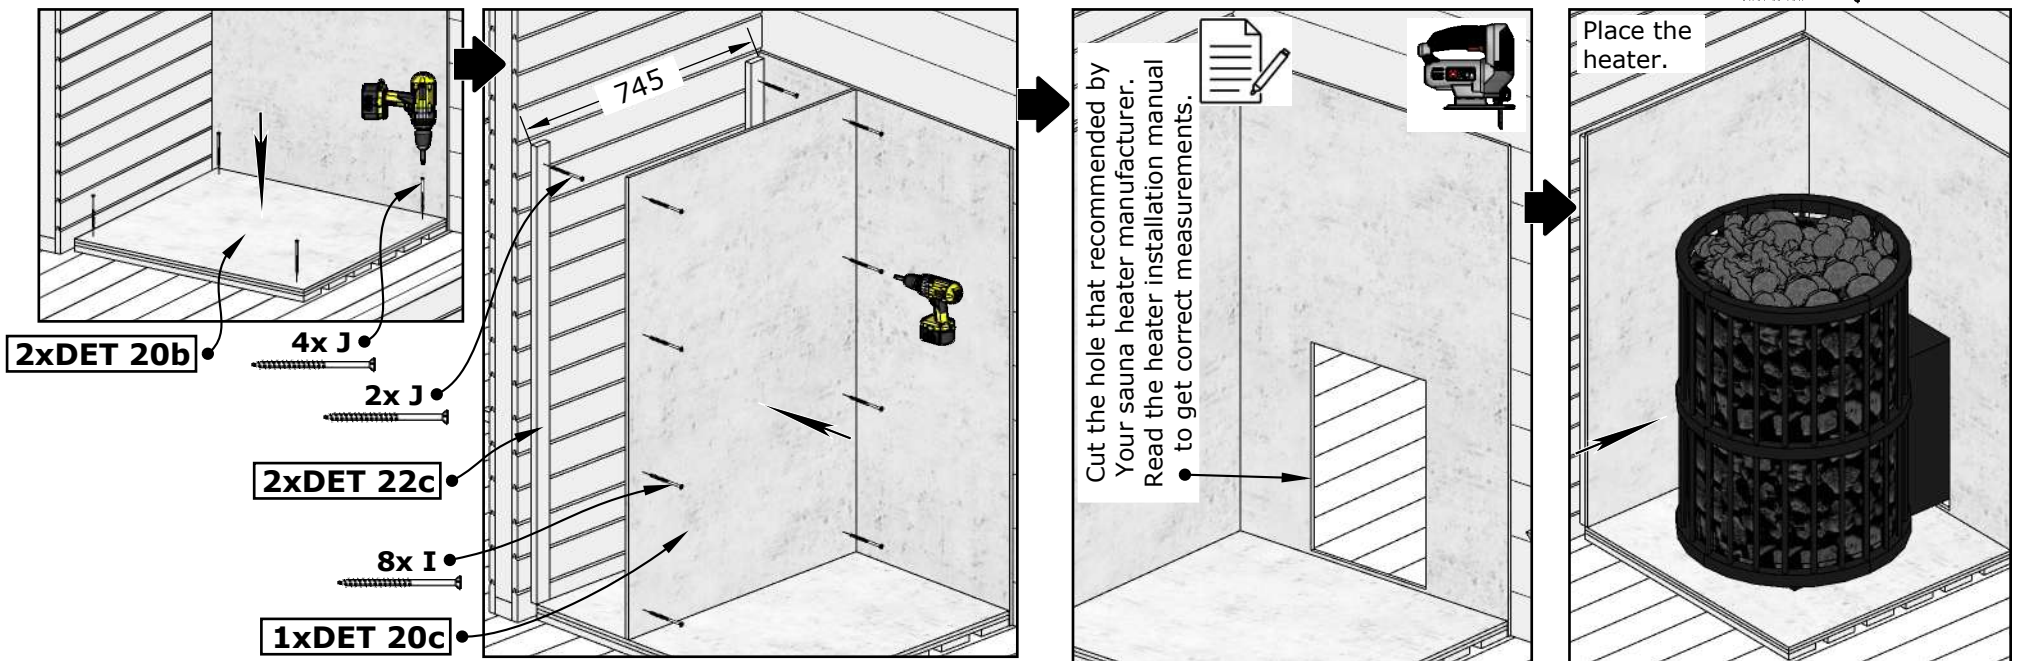






# Frodo 500

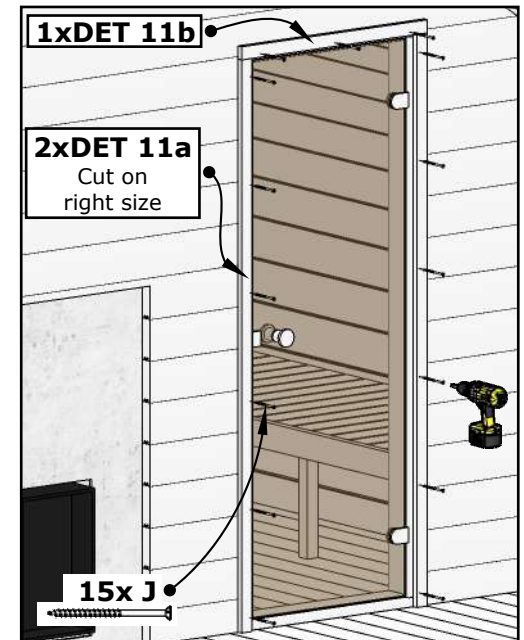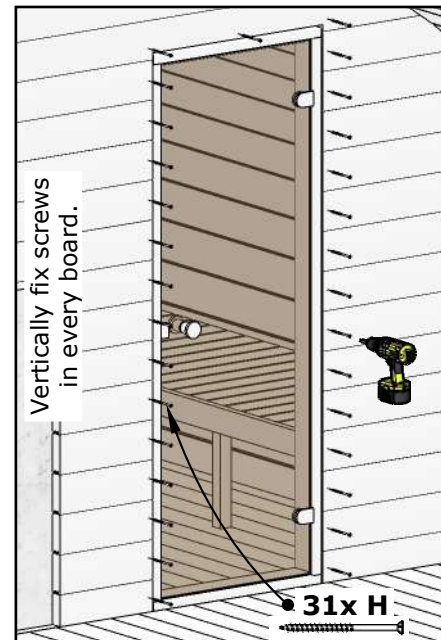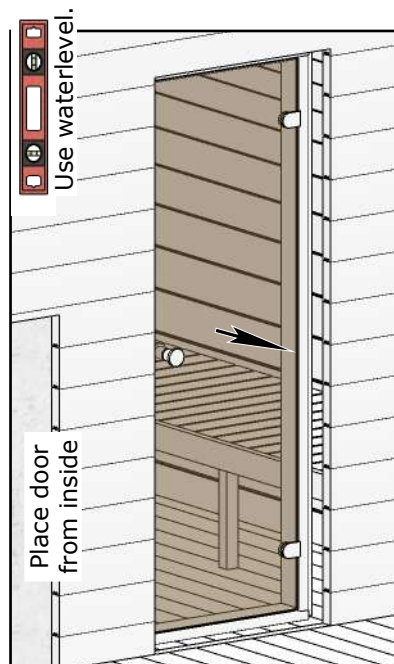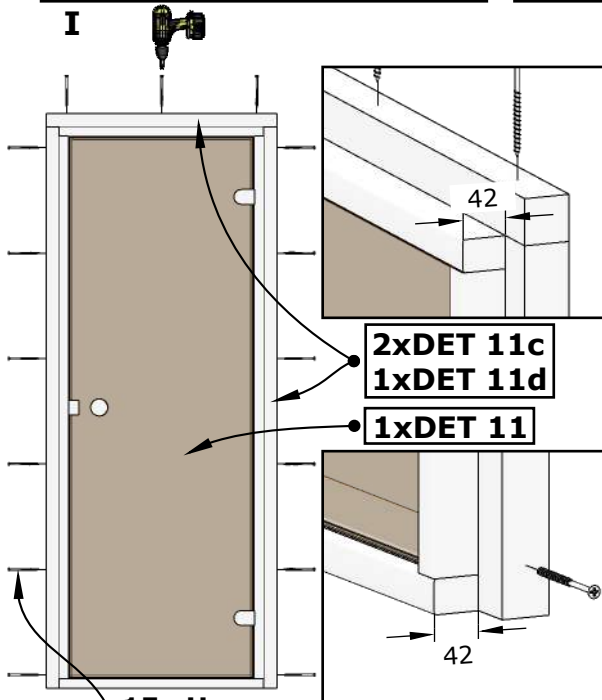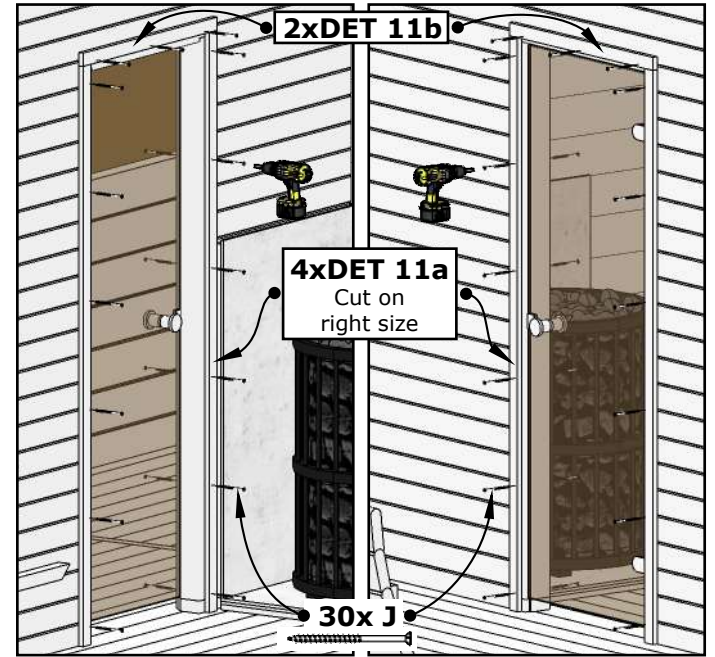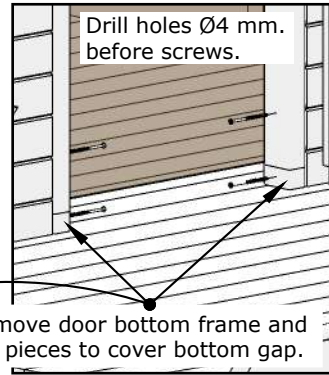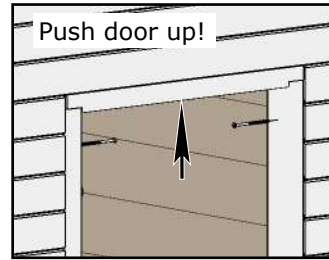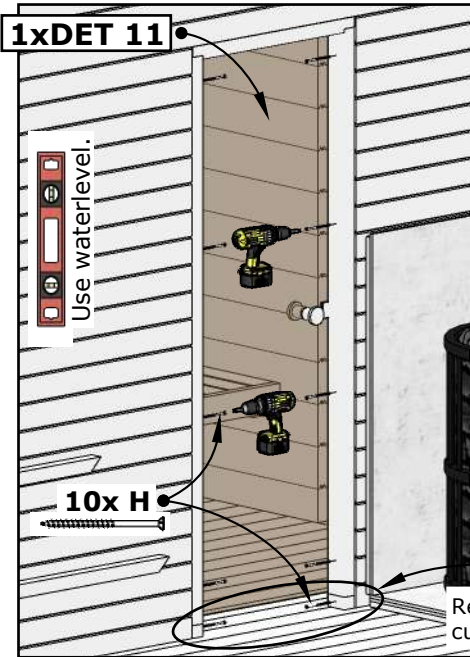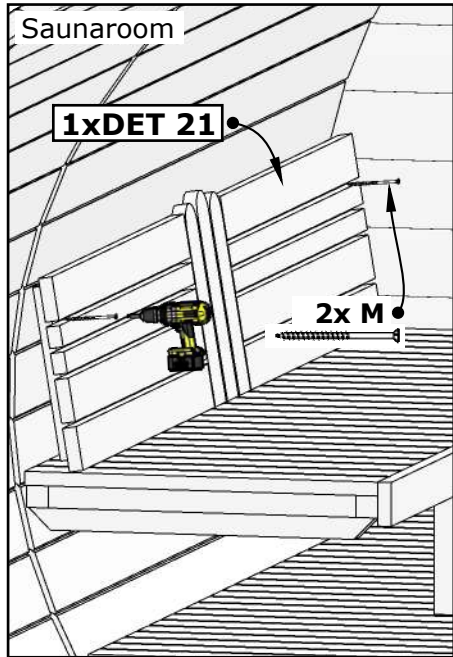







16. II • 15x H

( FRO-005 )


# Frodo 500

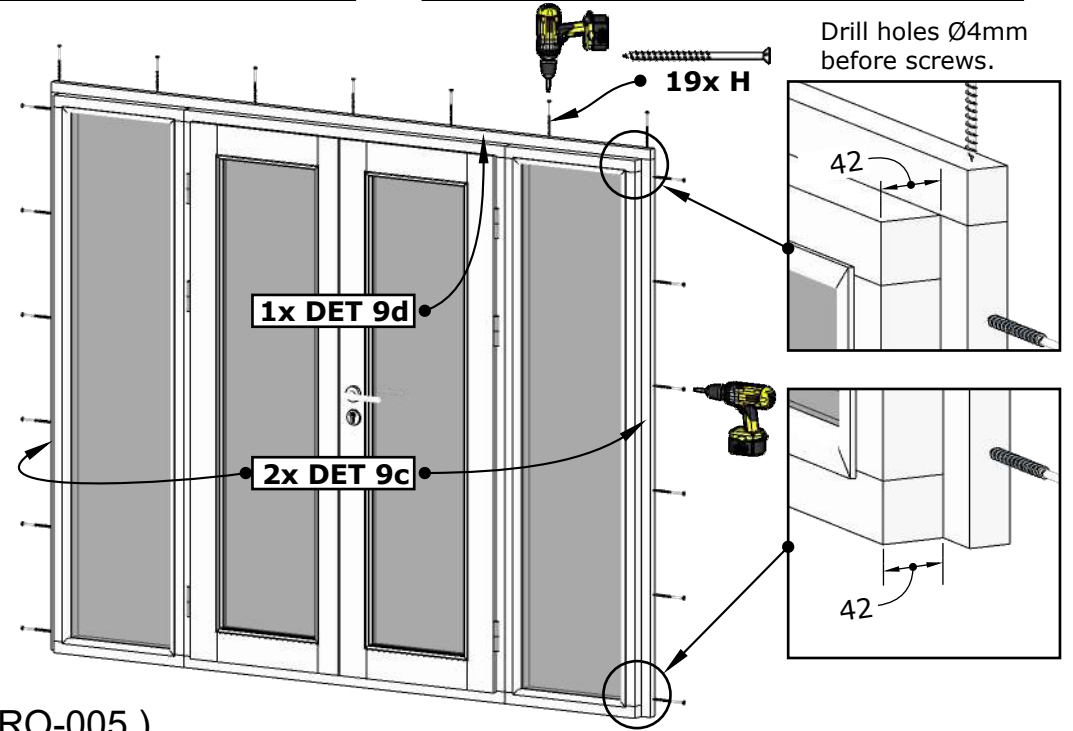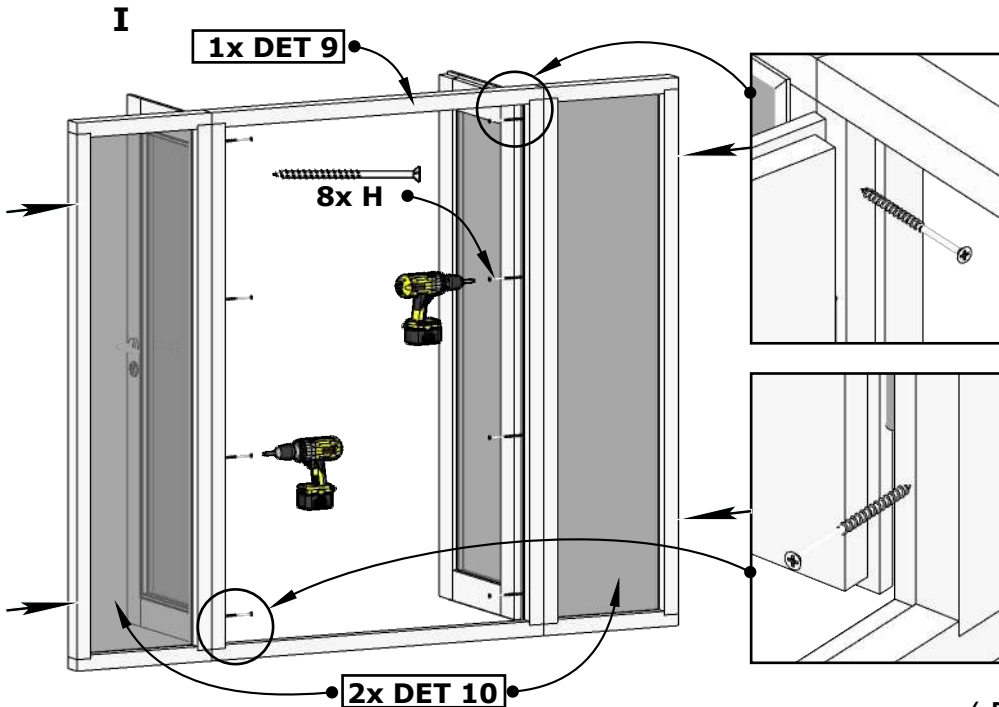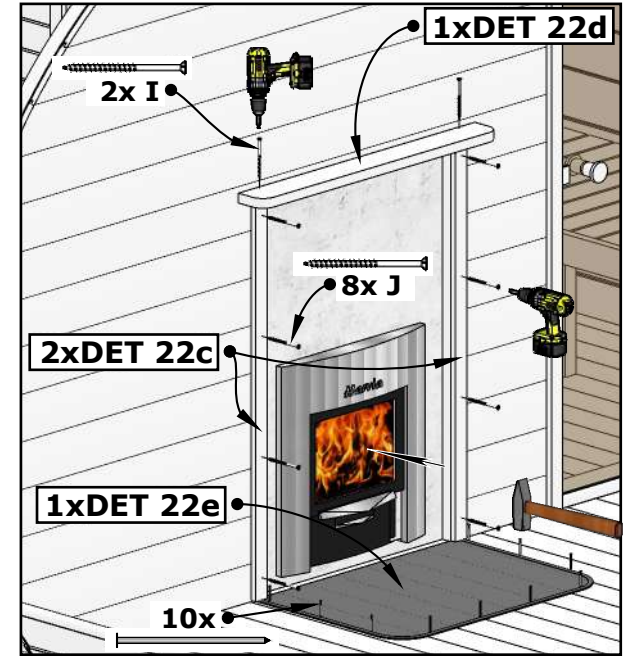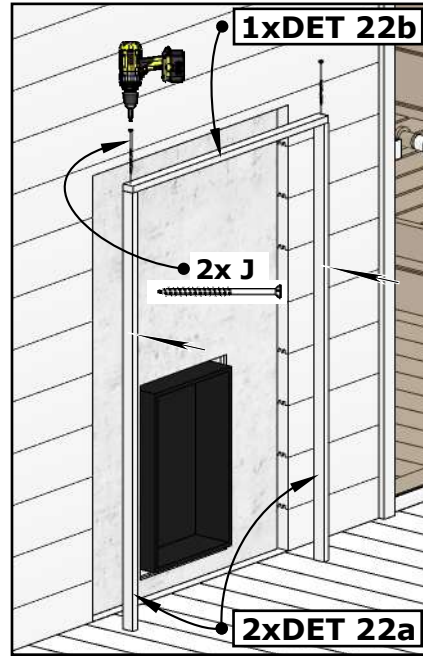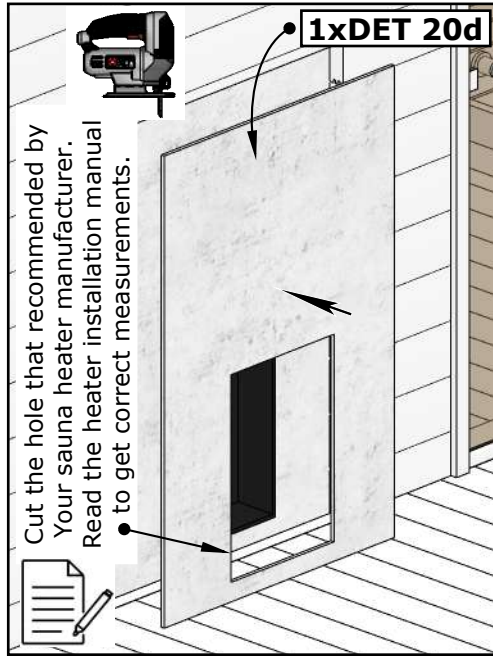



# Frodo 500

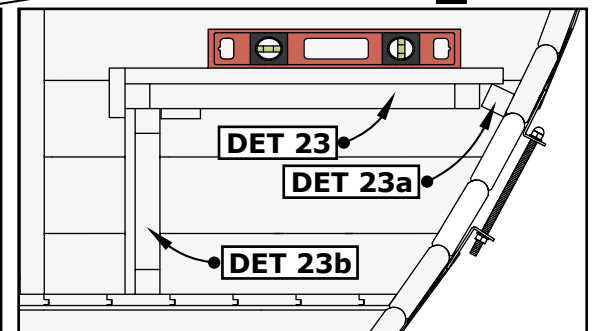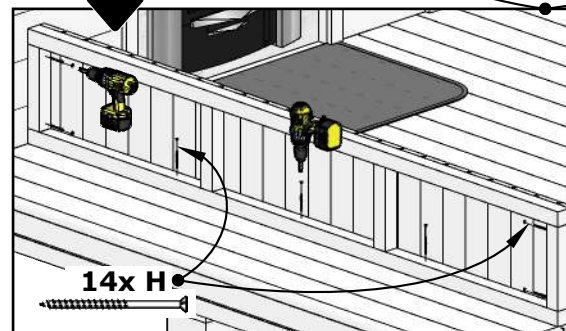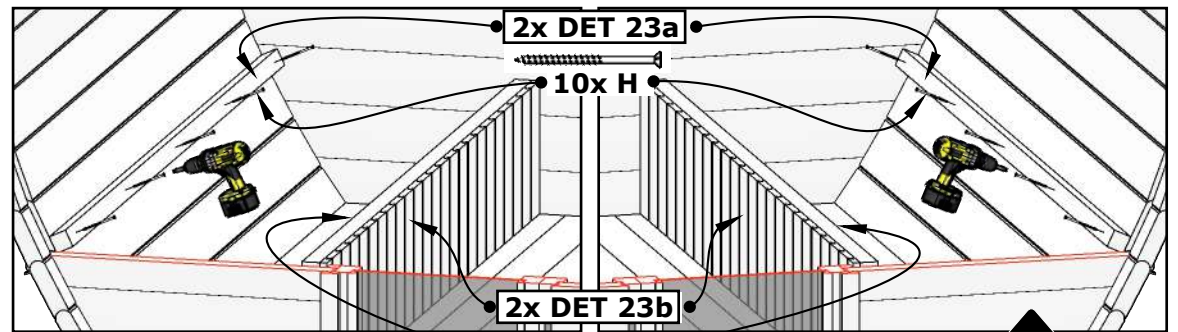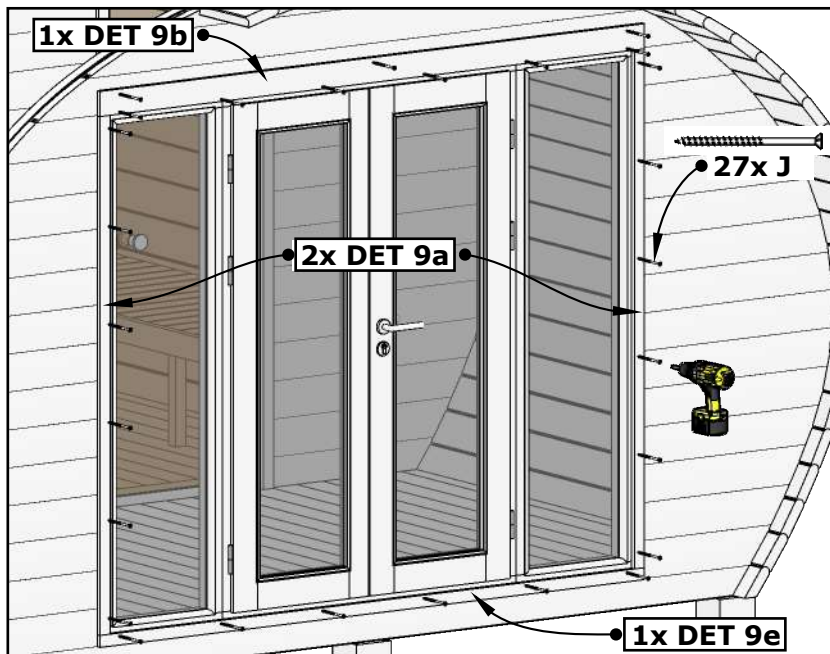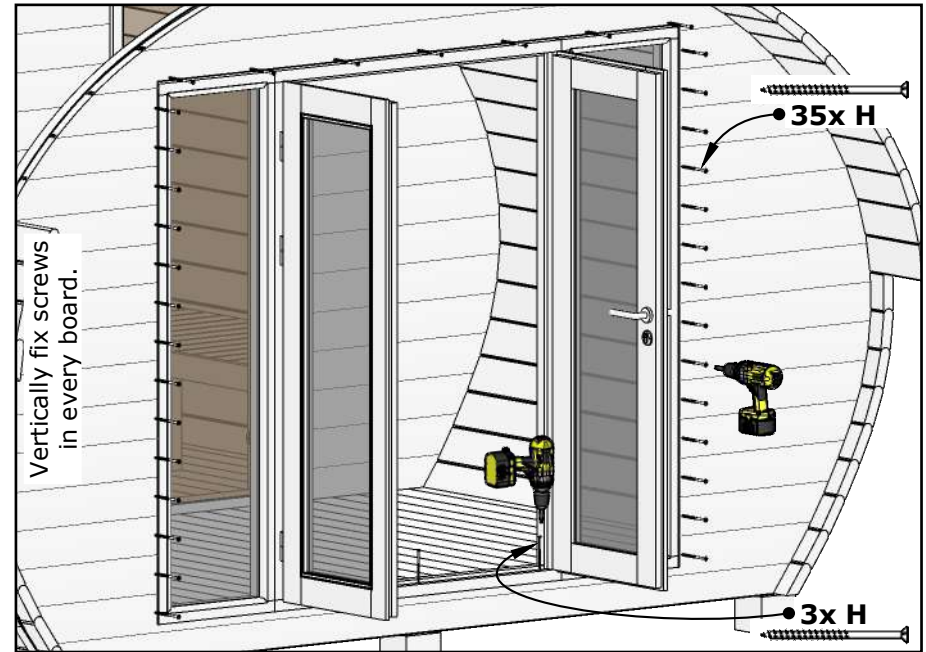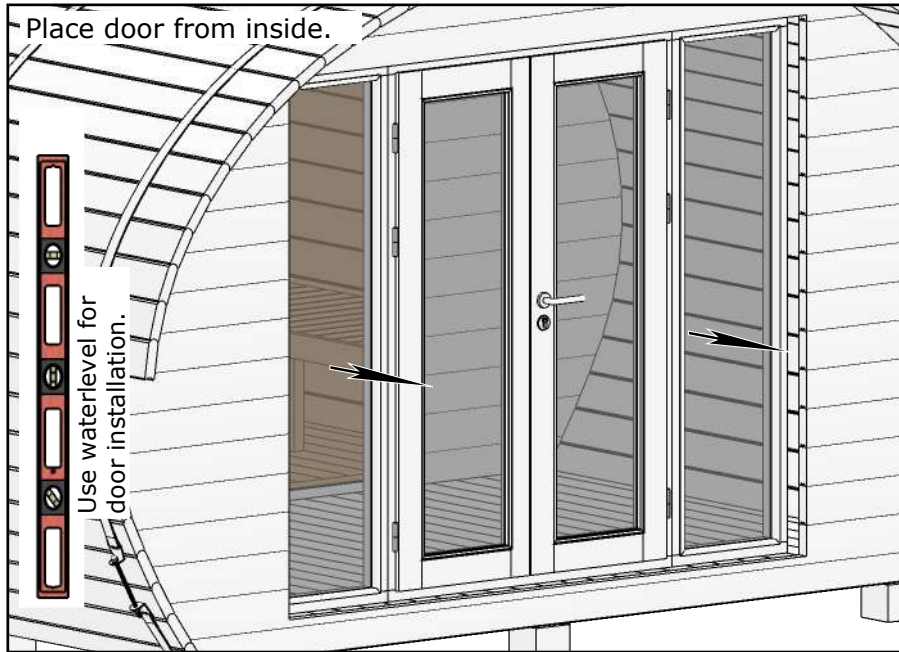


# Frodo 500

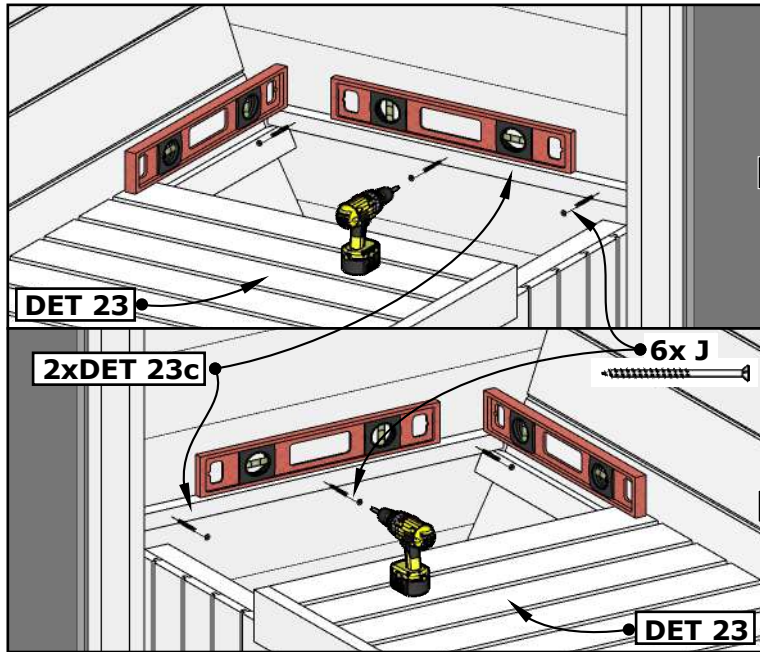

**I**

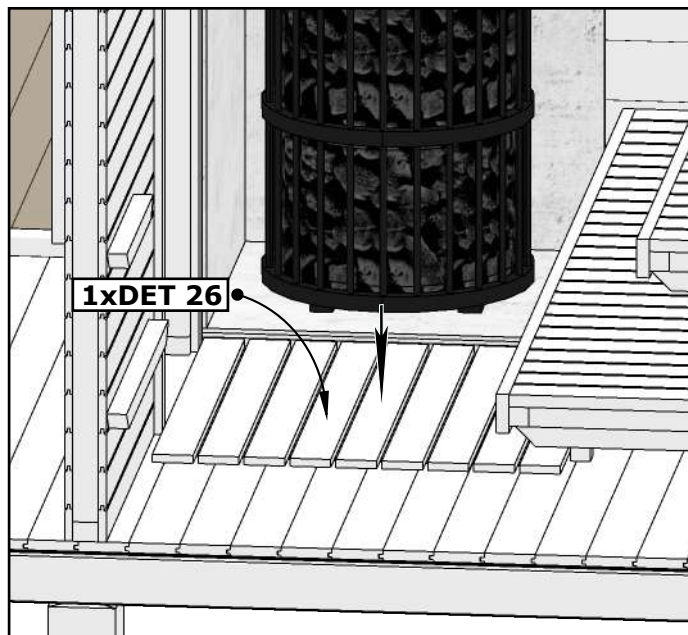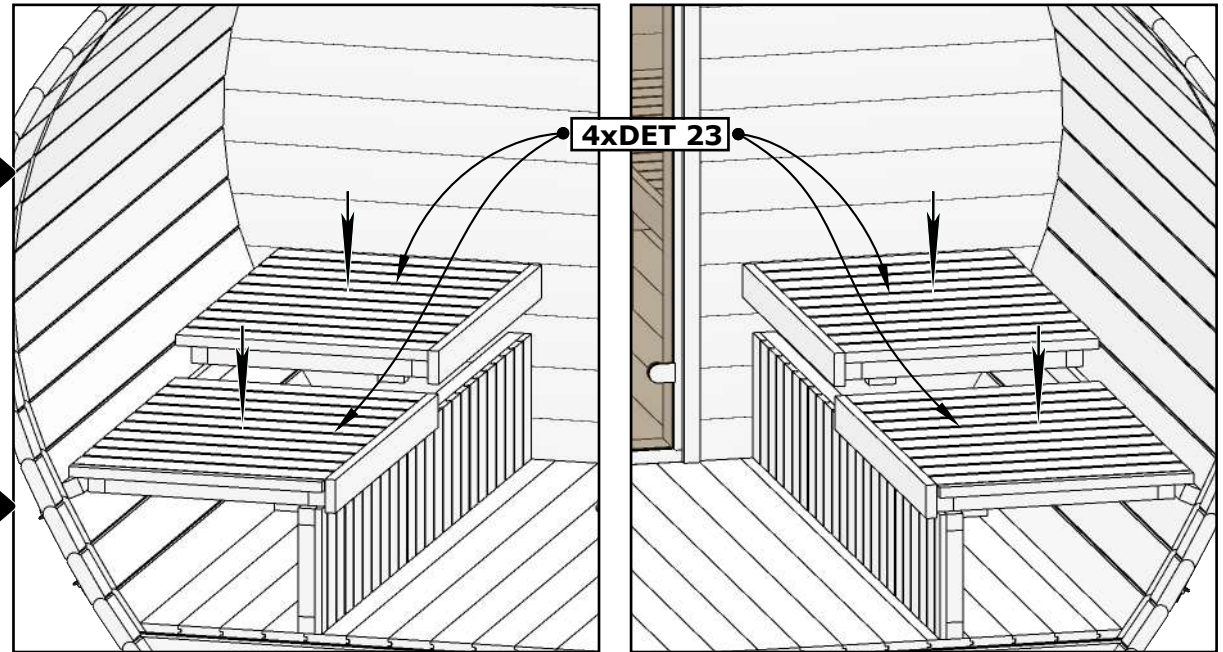


**II**

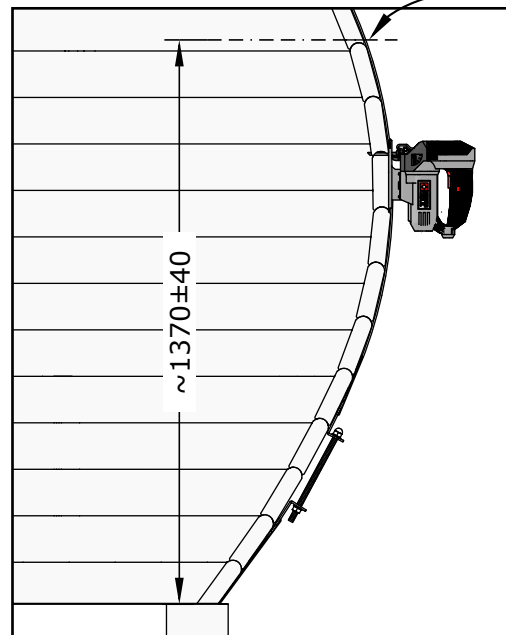


**III**

( FRO-005 )

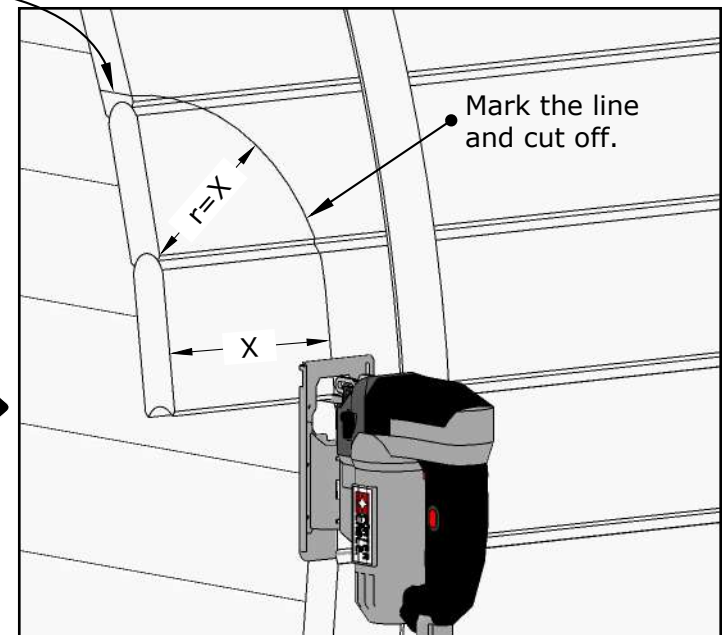


# Frodo 500

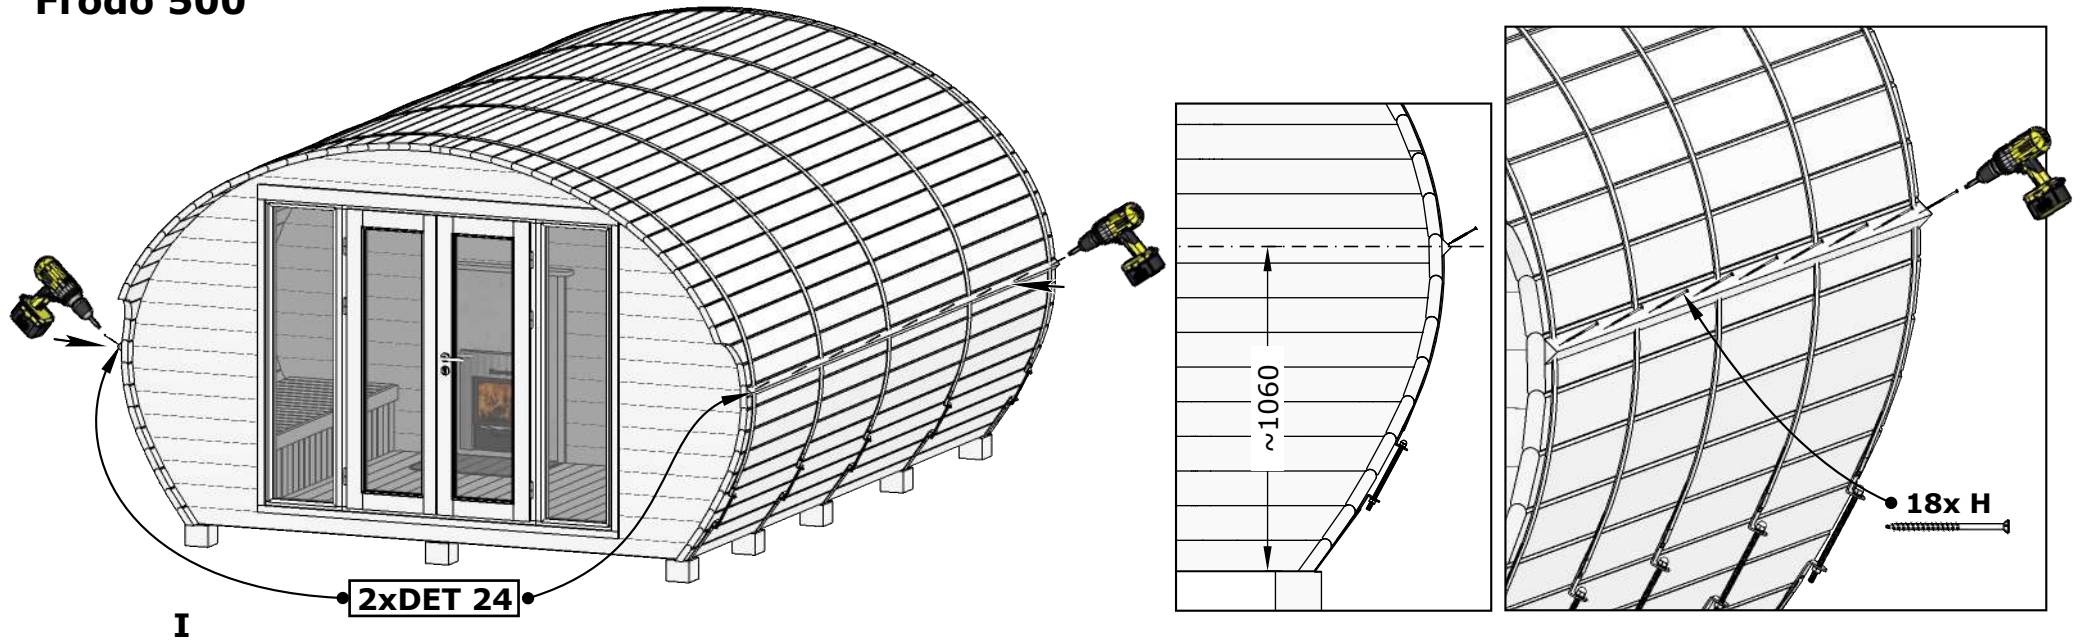




**NB!** Before roof shingles,  
install underlay felt.  
Check underlay felt installation  
manual on extra pages.

Check also roof shingles  
installation manual inside package.

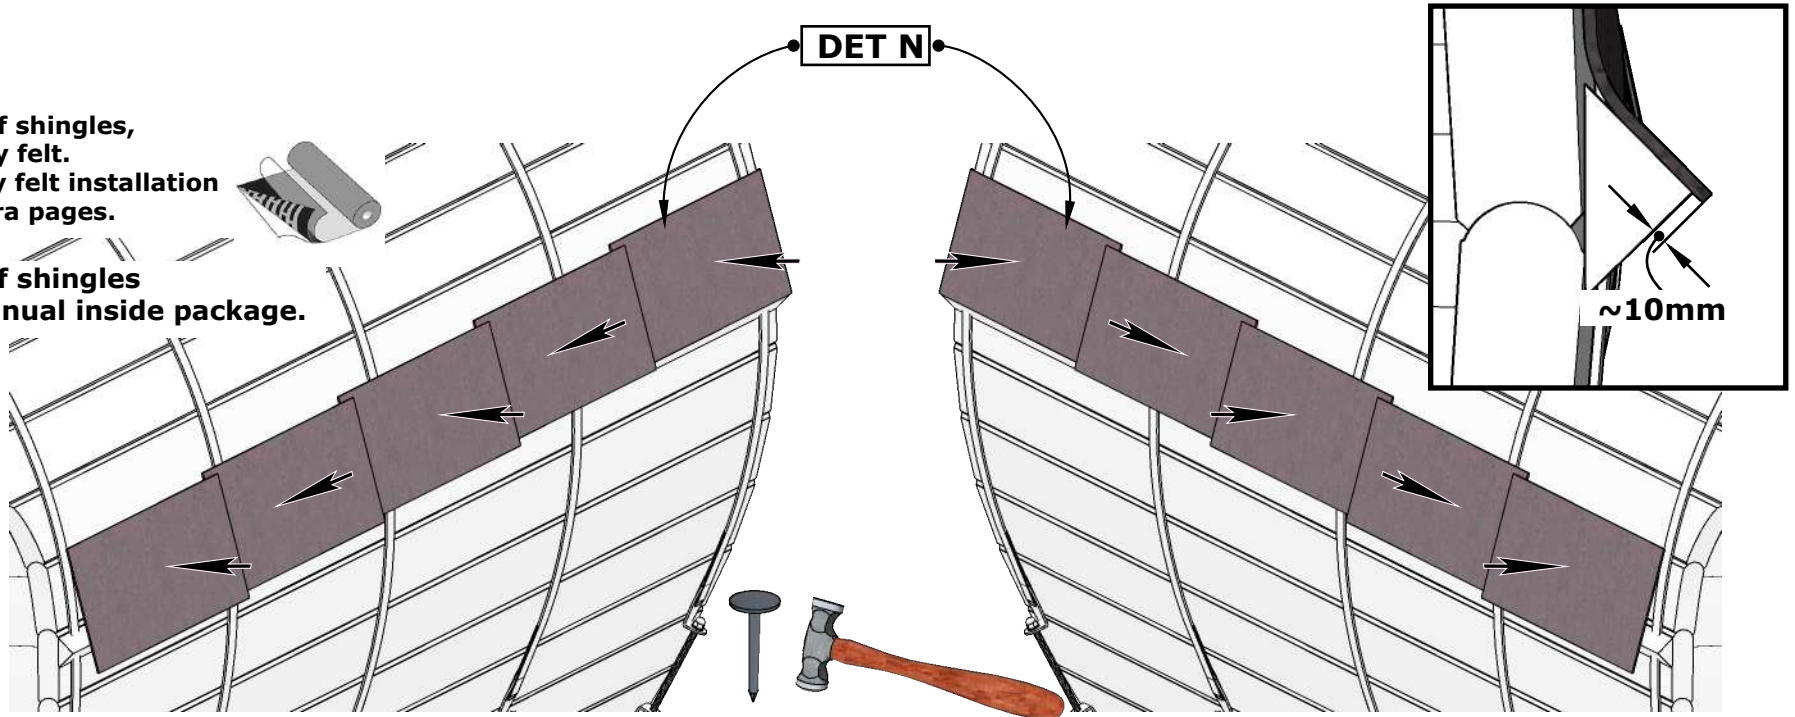




# Frodo 500

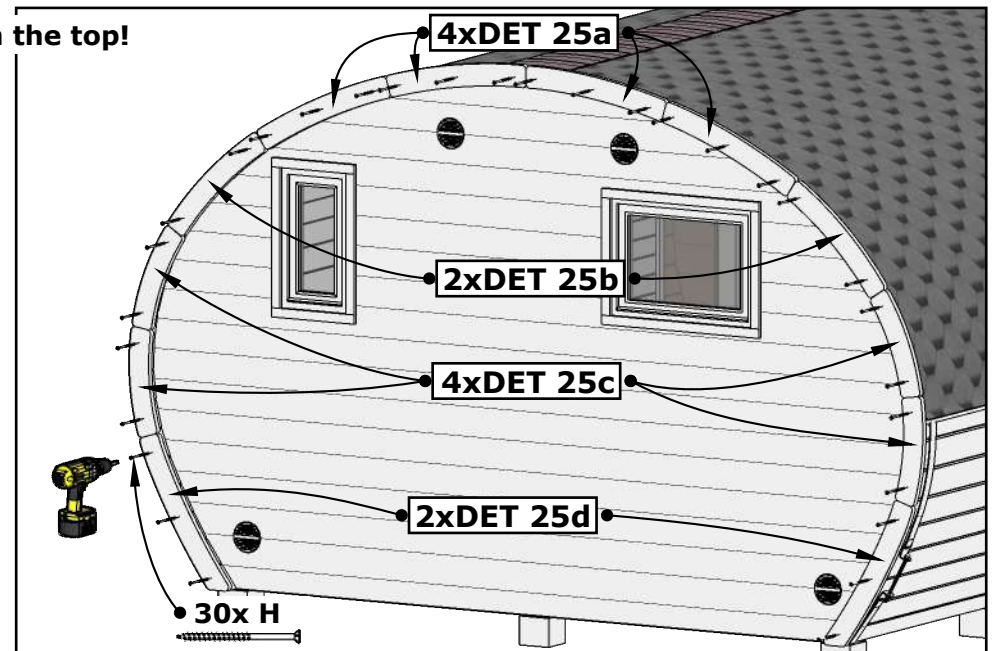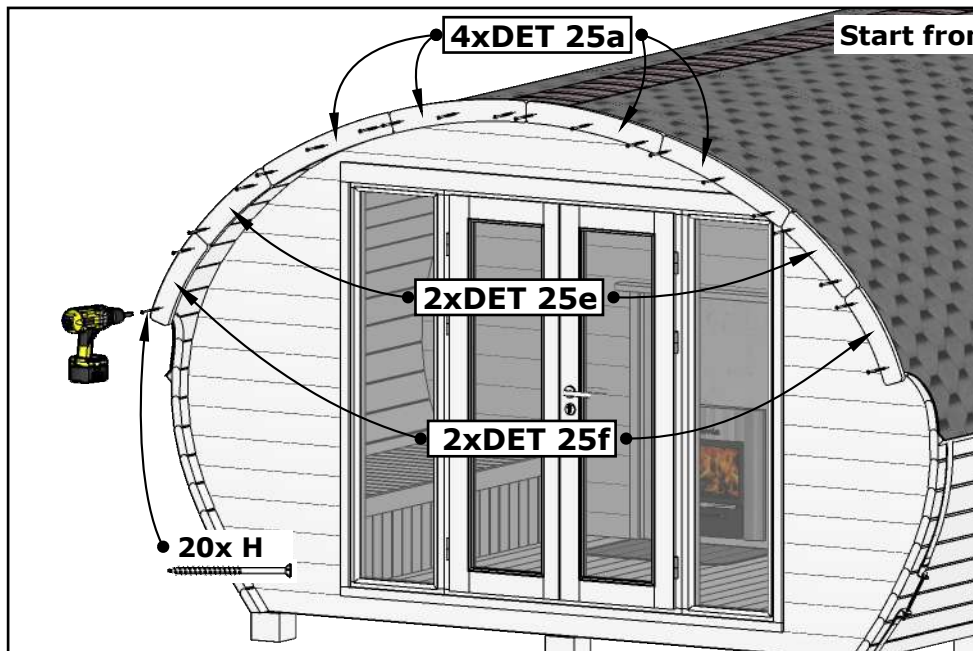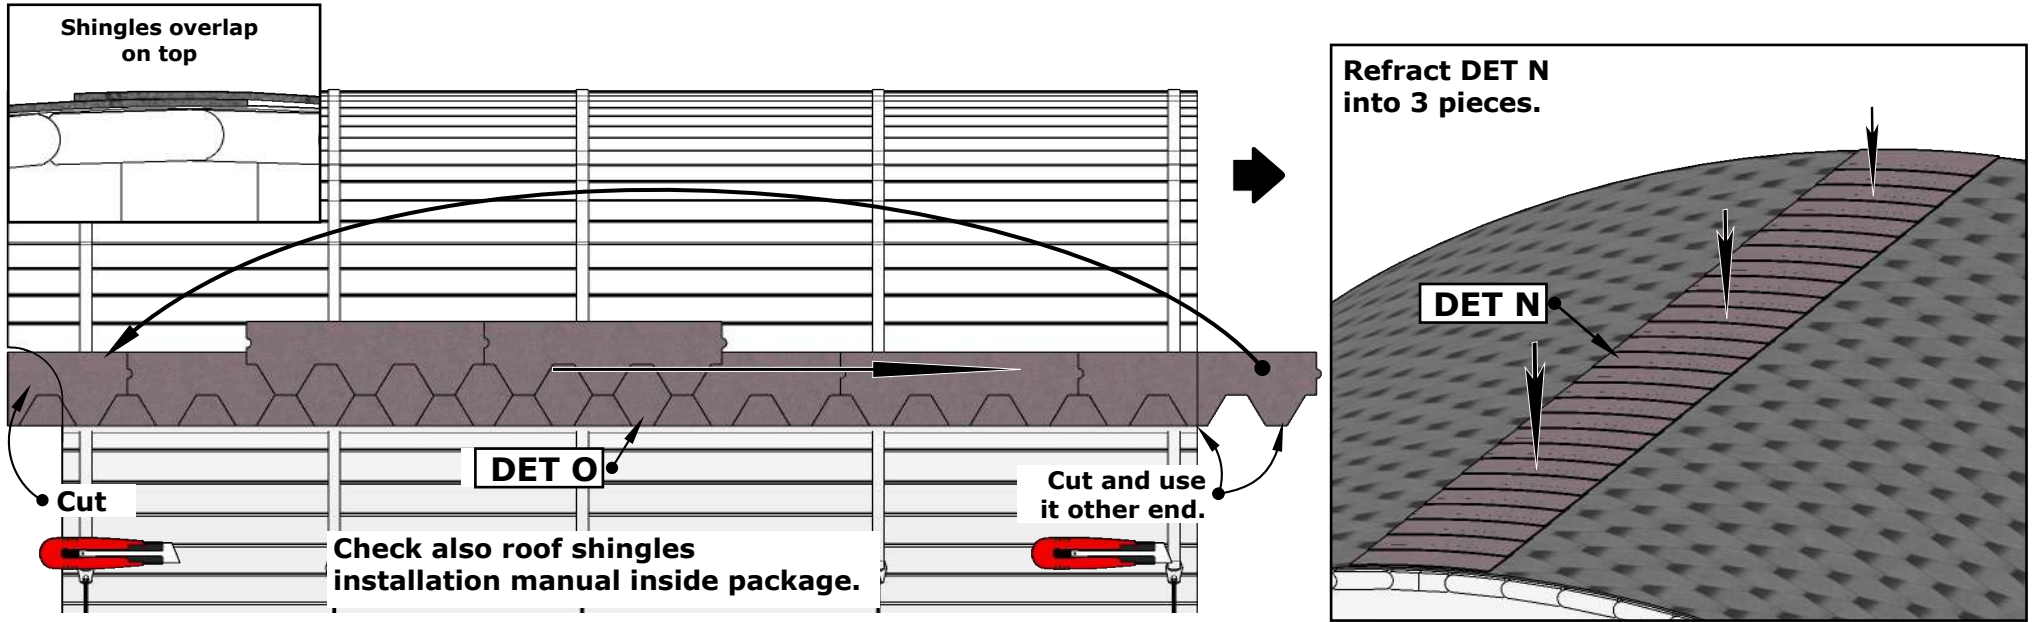

# Underlay felt installation manual.

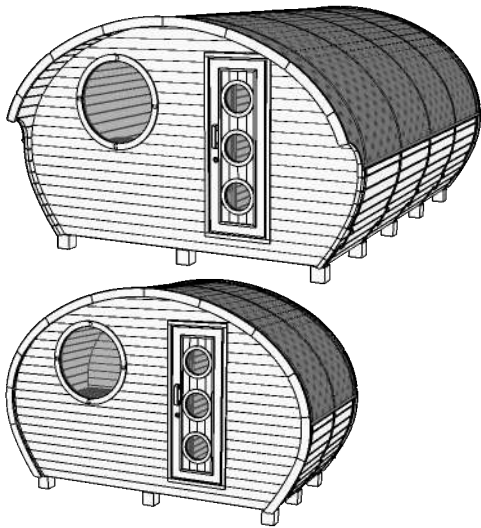

Check also underlay installation manual inside the package!

