



Lumikki Sauna 4x2,4m

Please read the whole manual
before You start.


All given measurements are in millimeters.

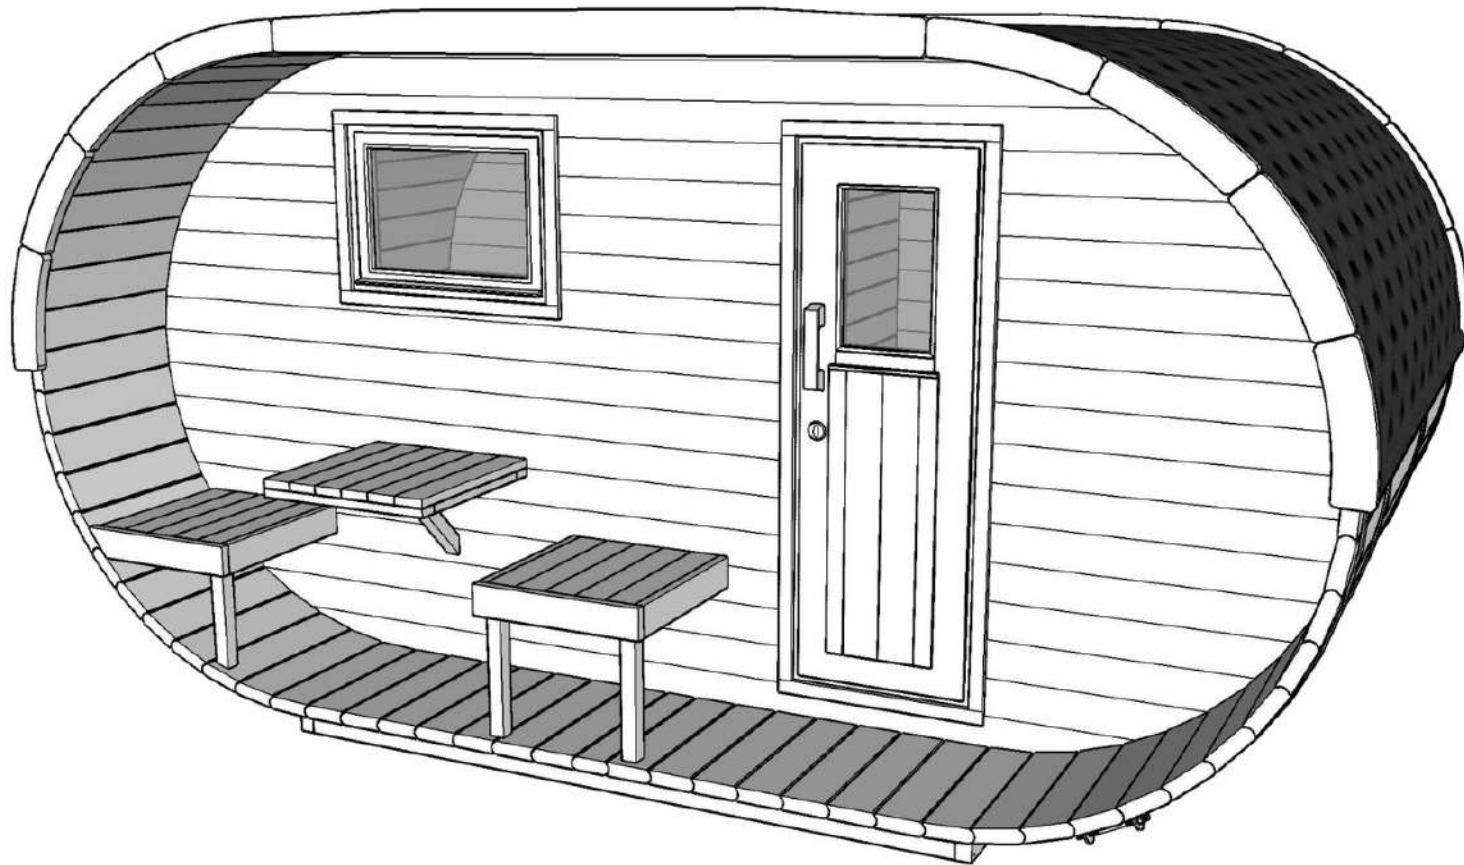


Details list. 1

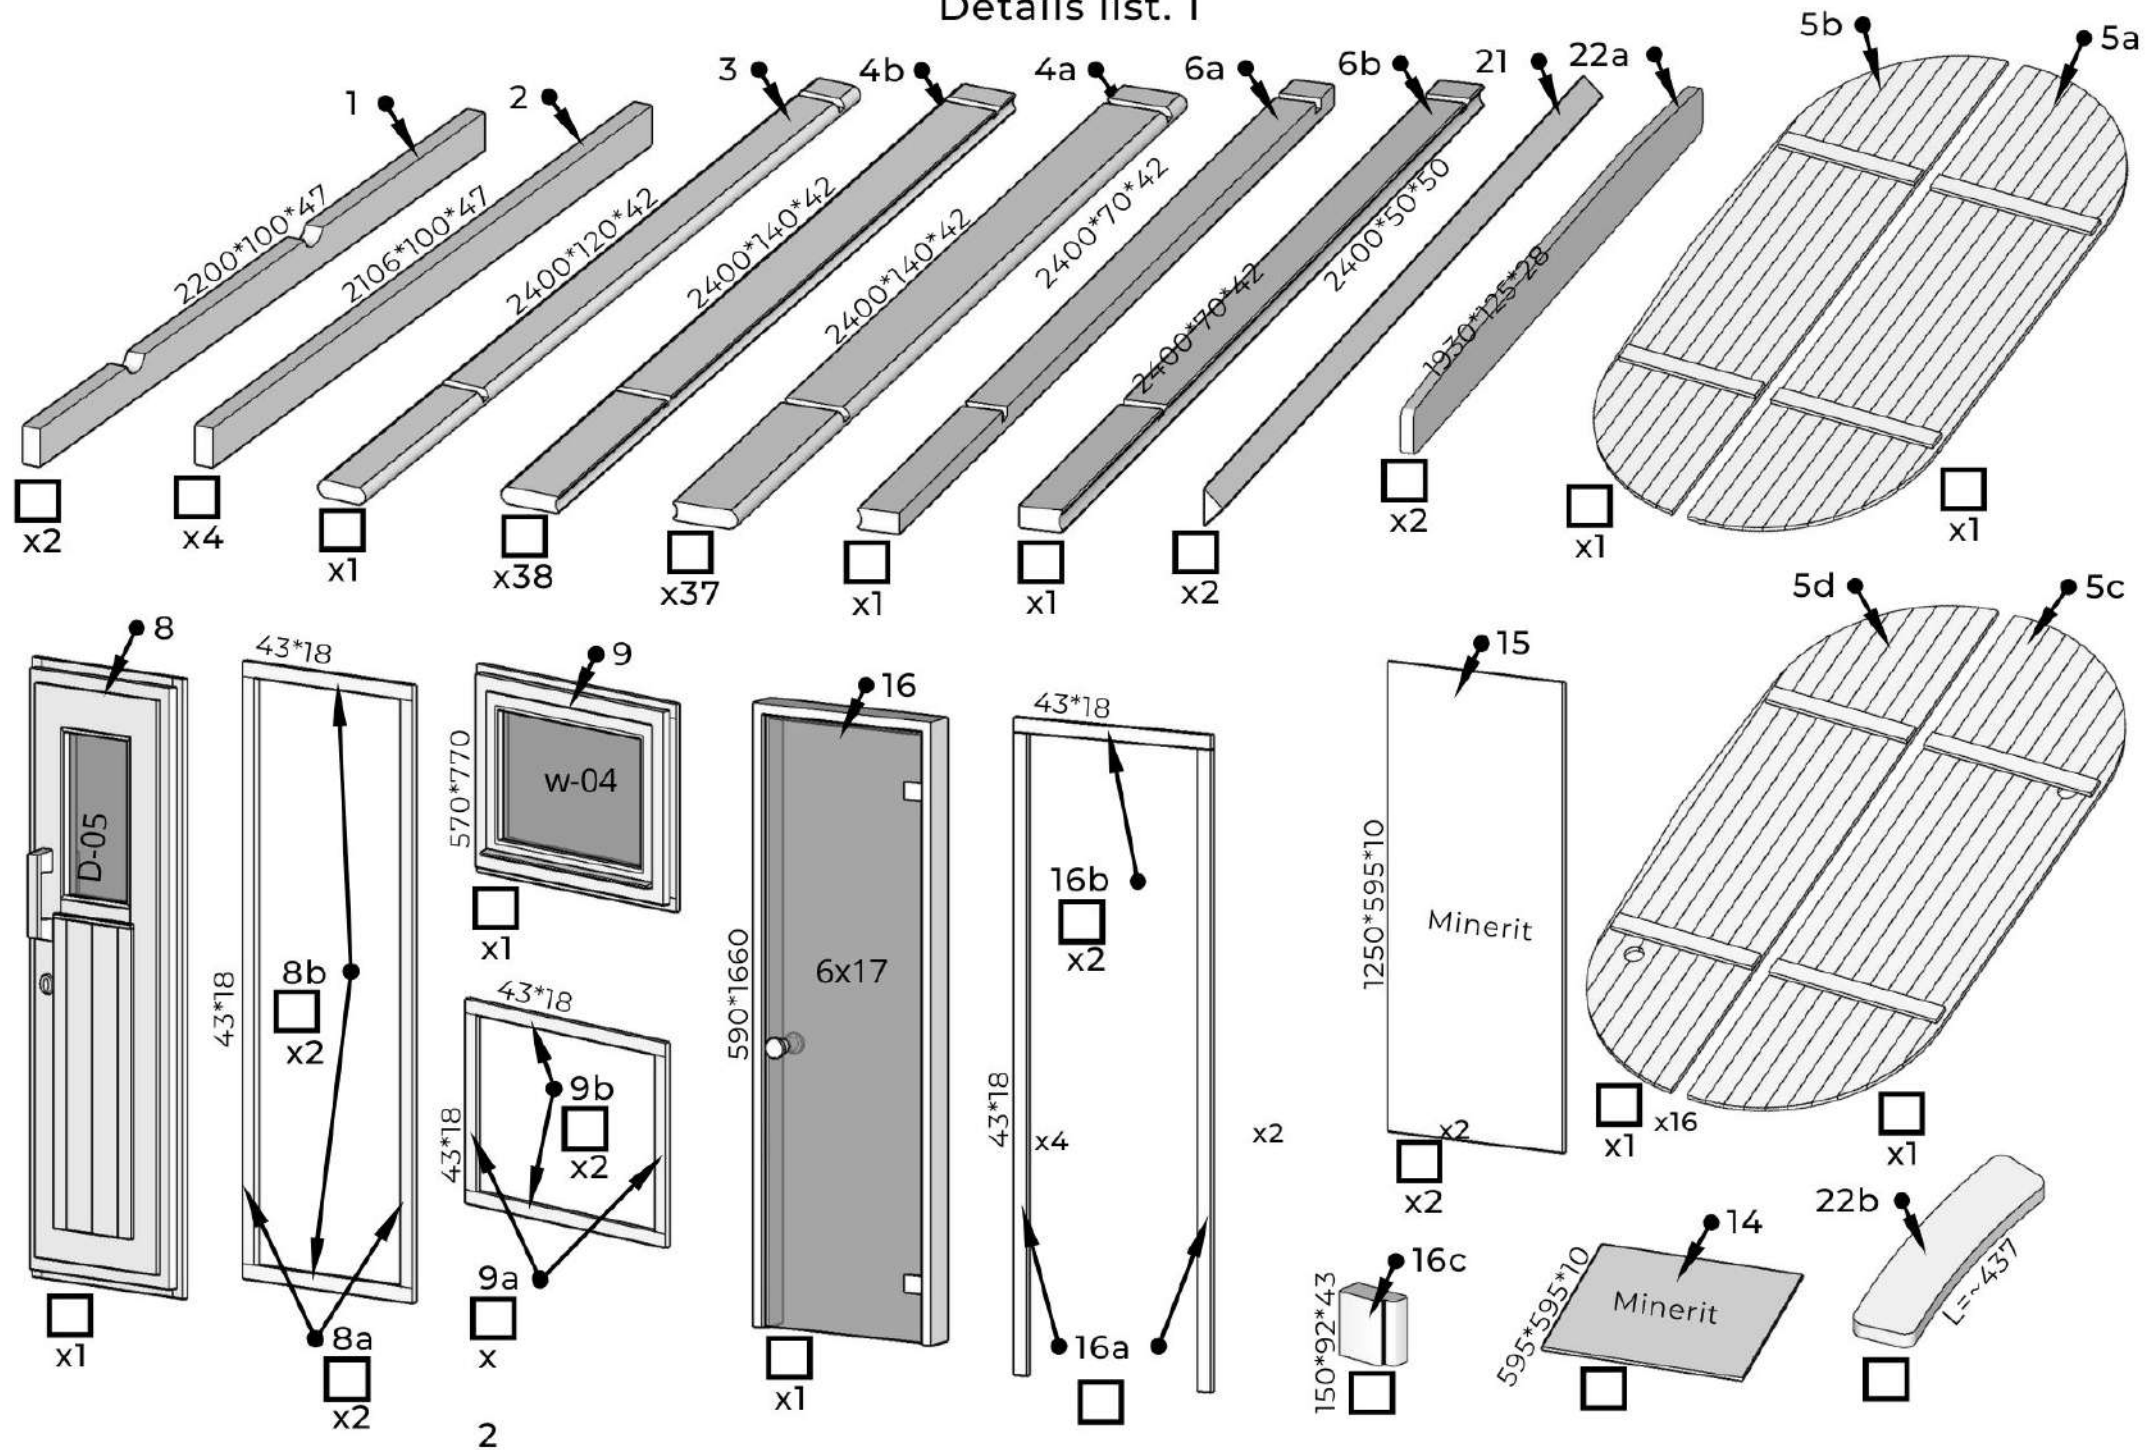


Details list. 2

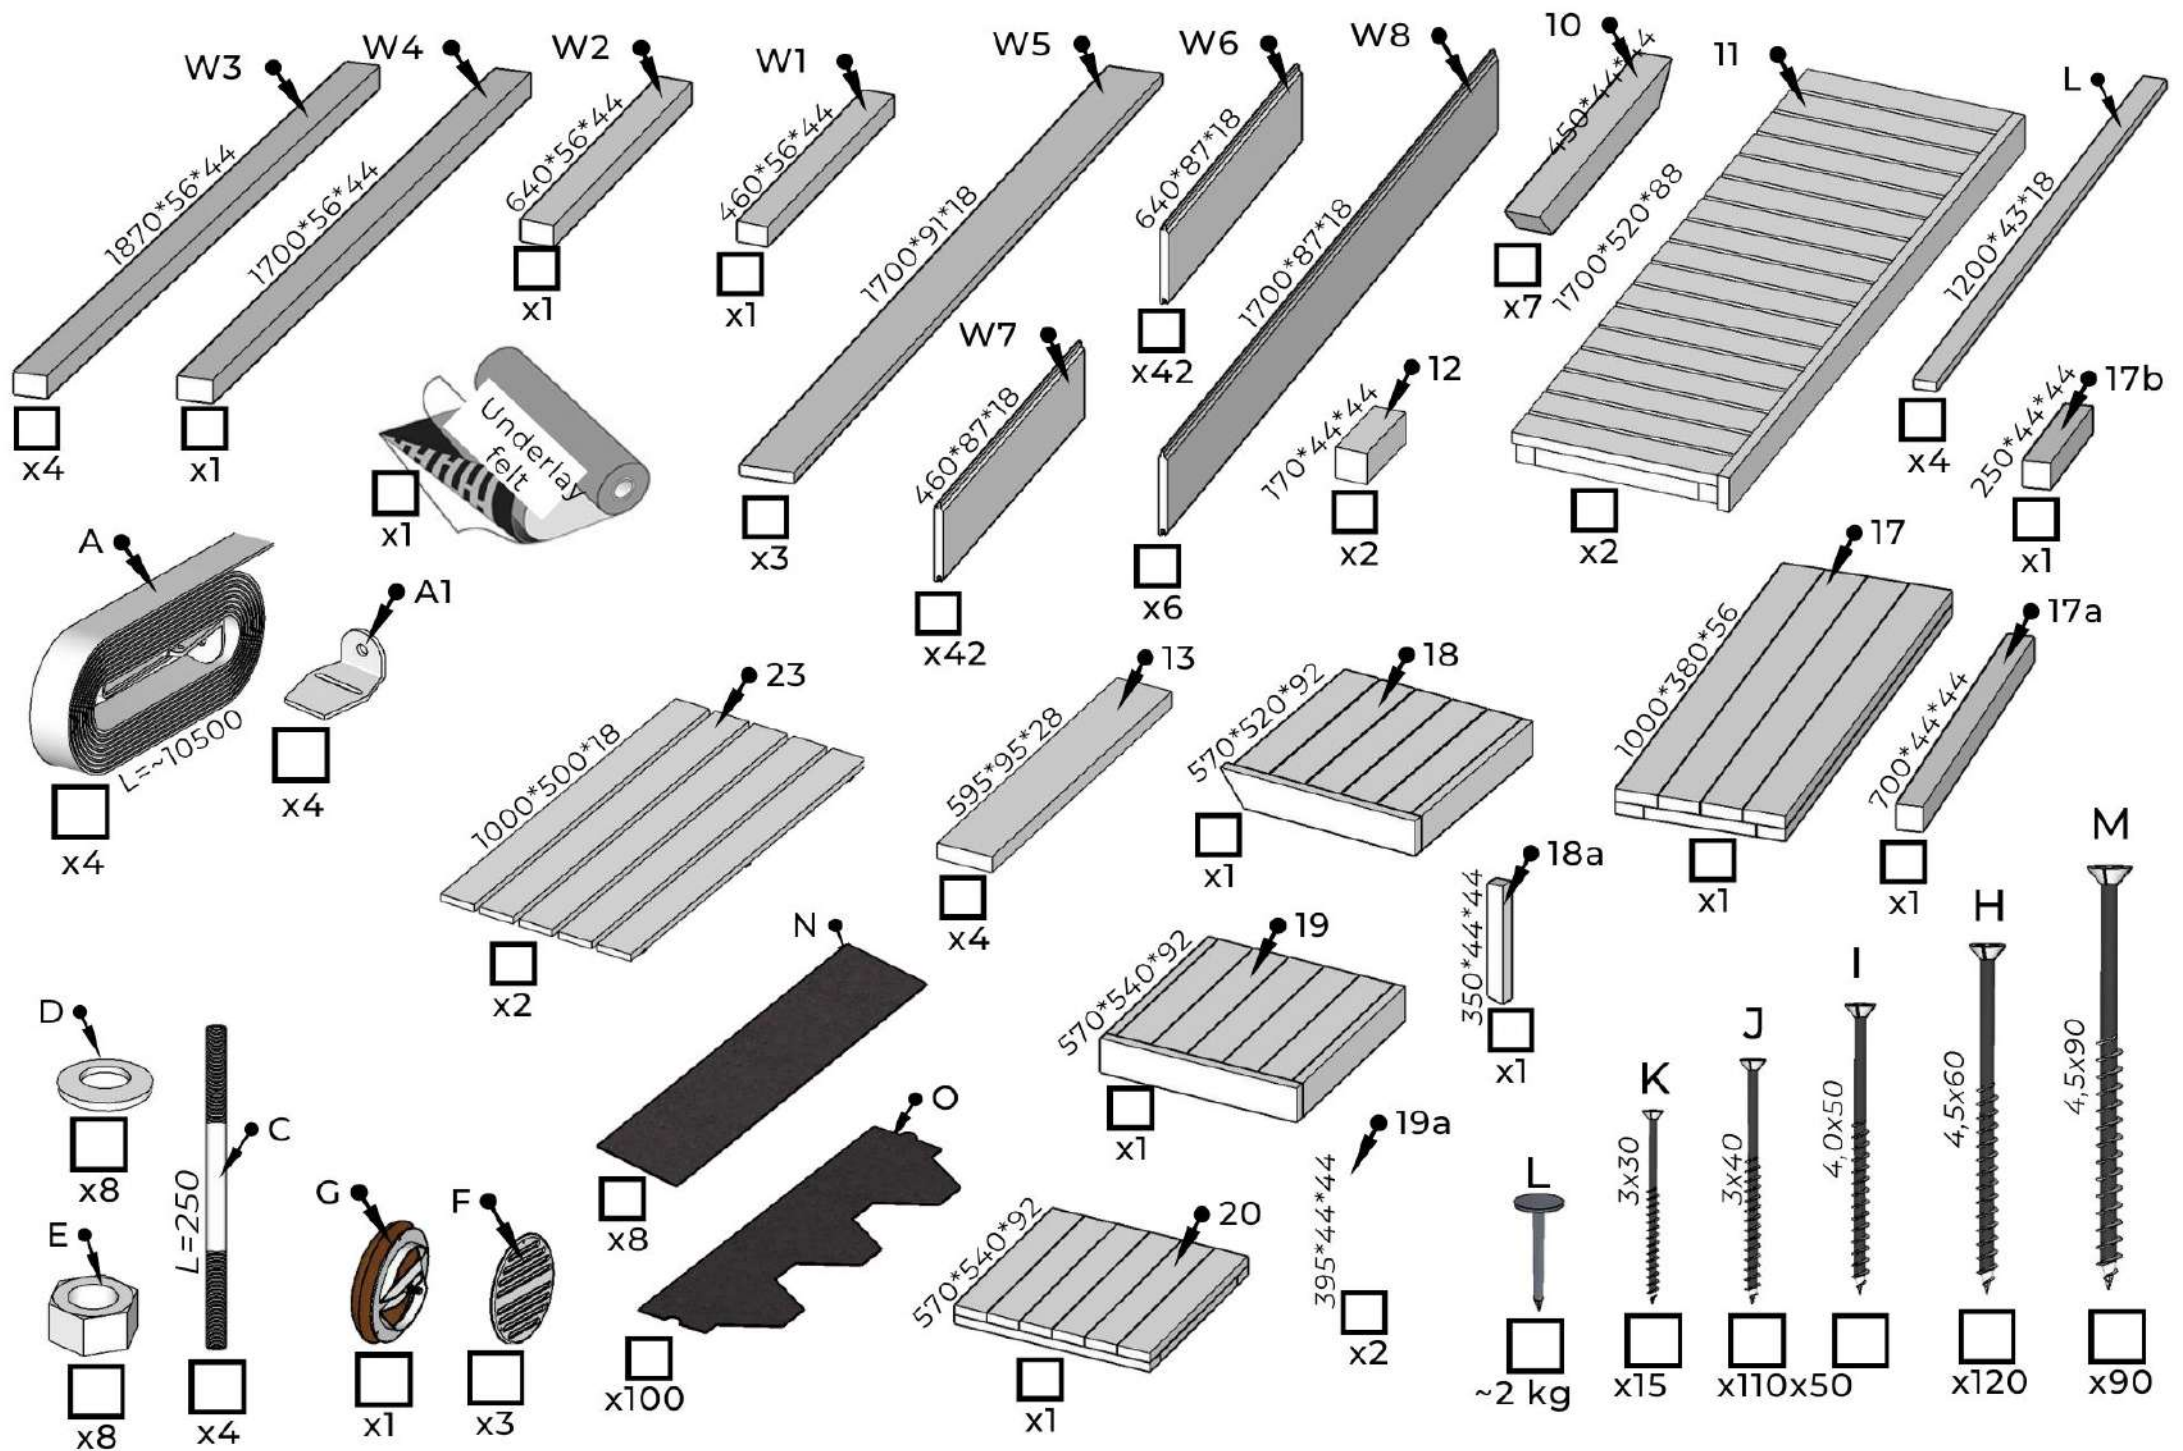




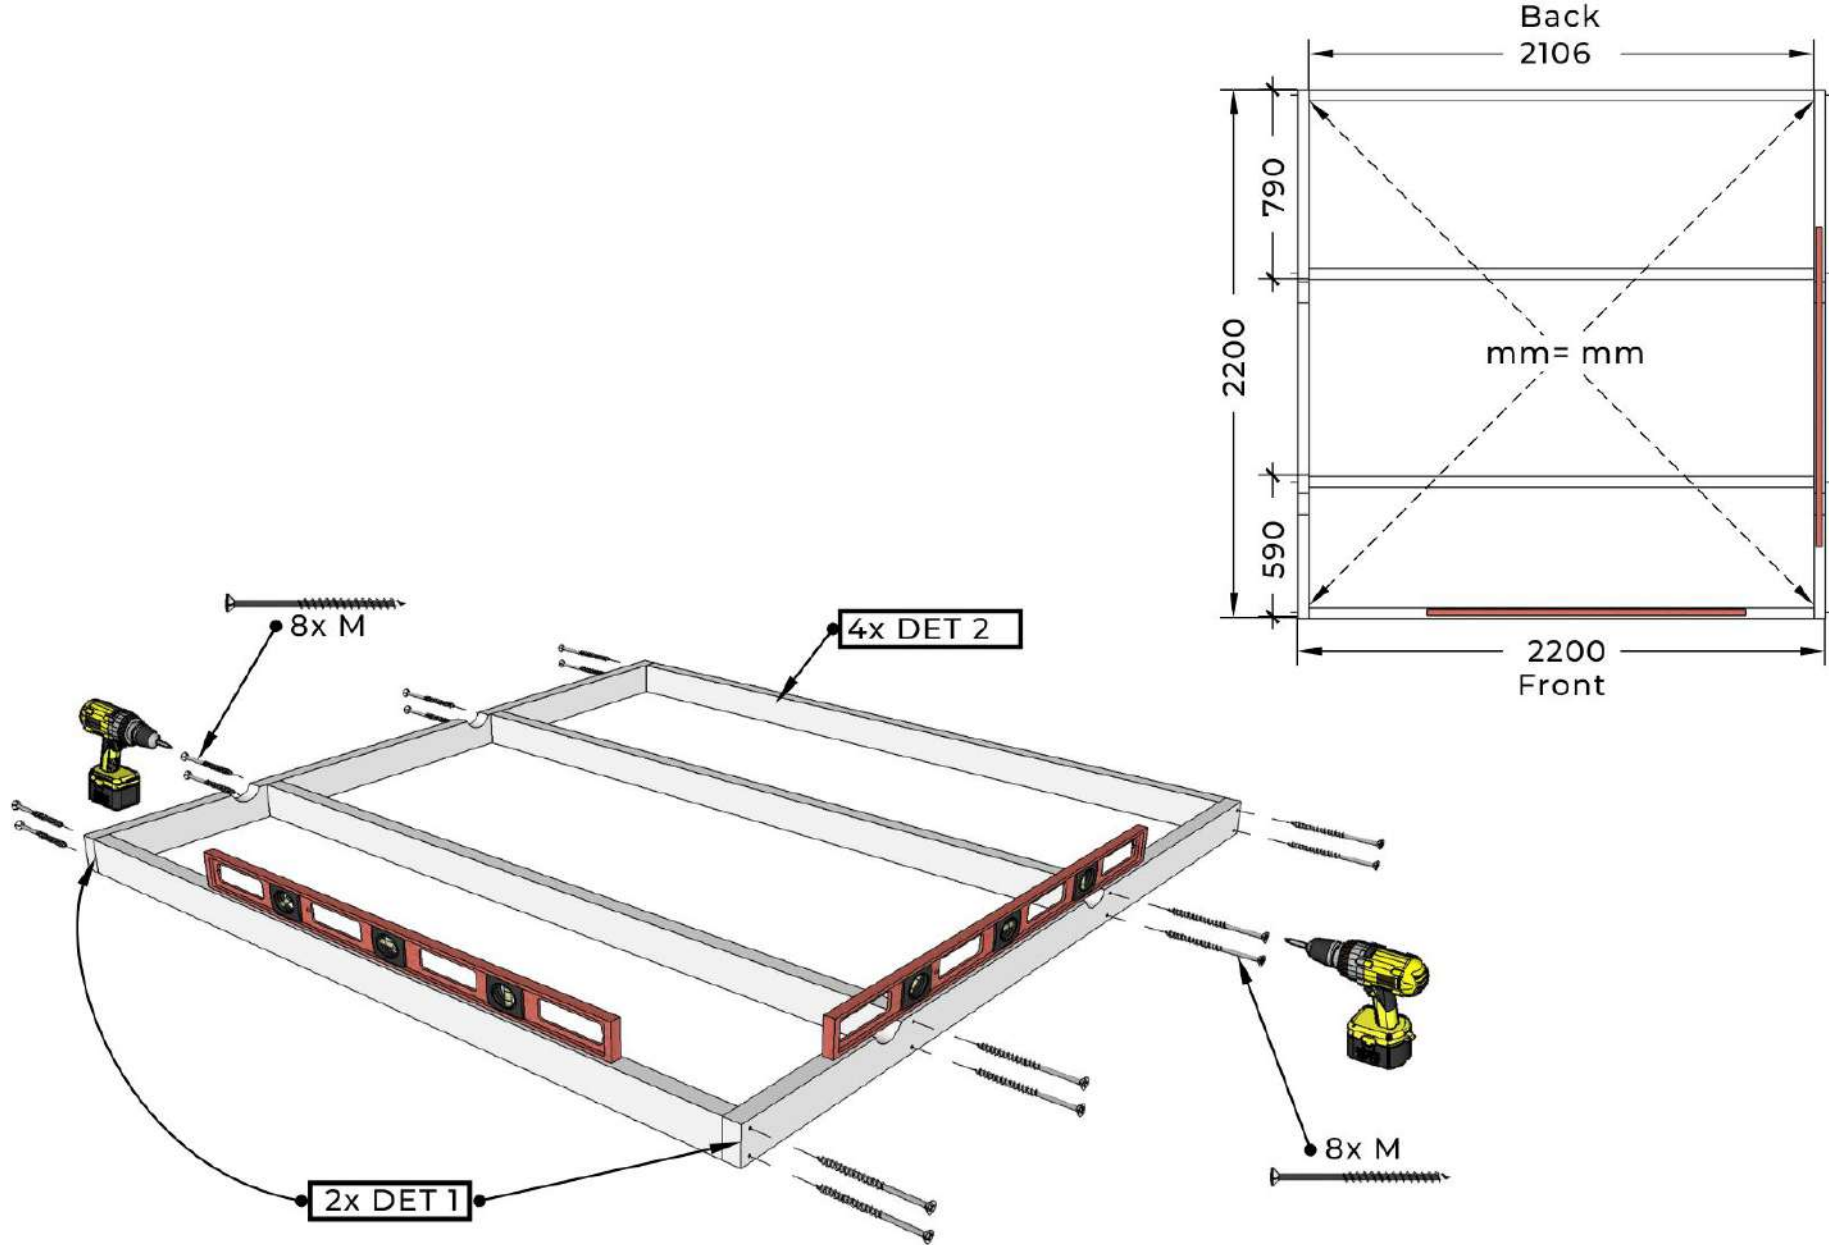


1.

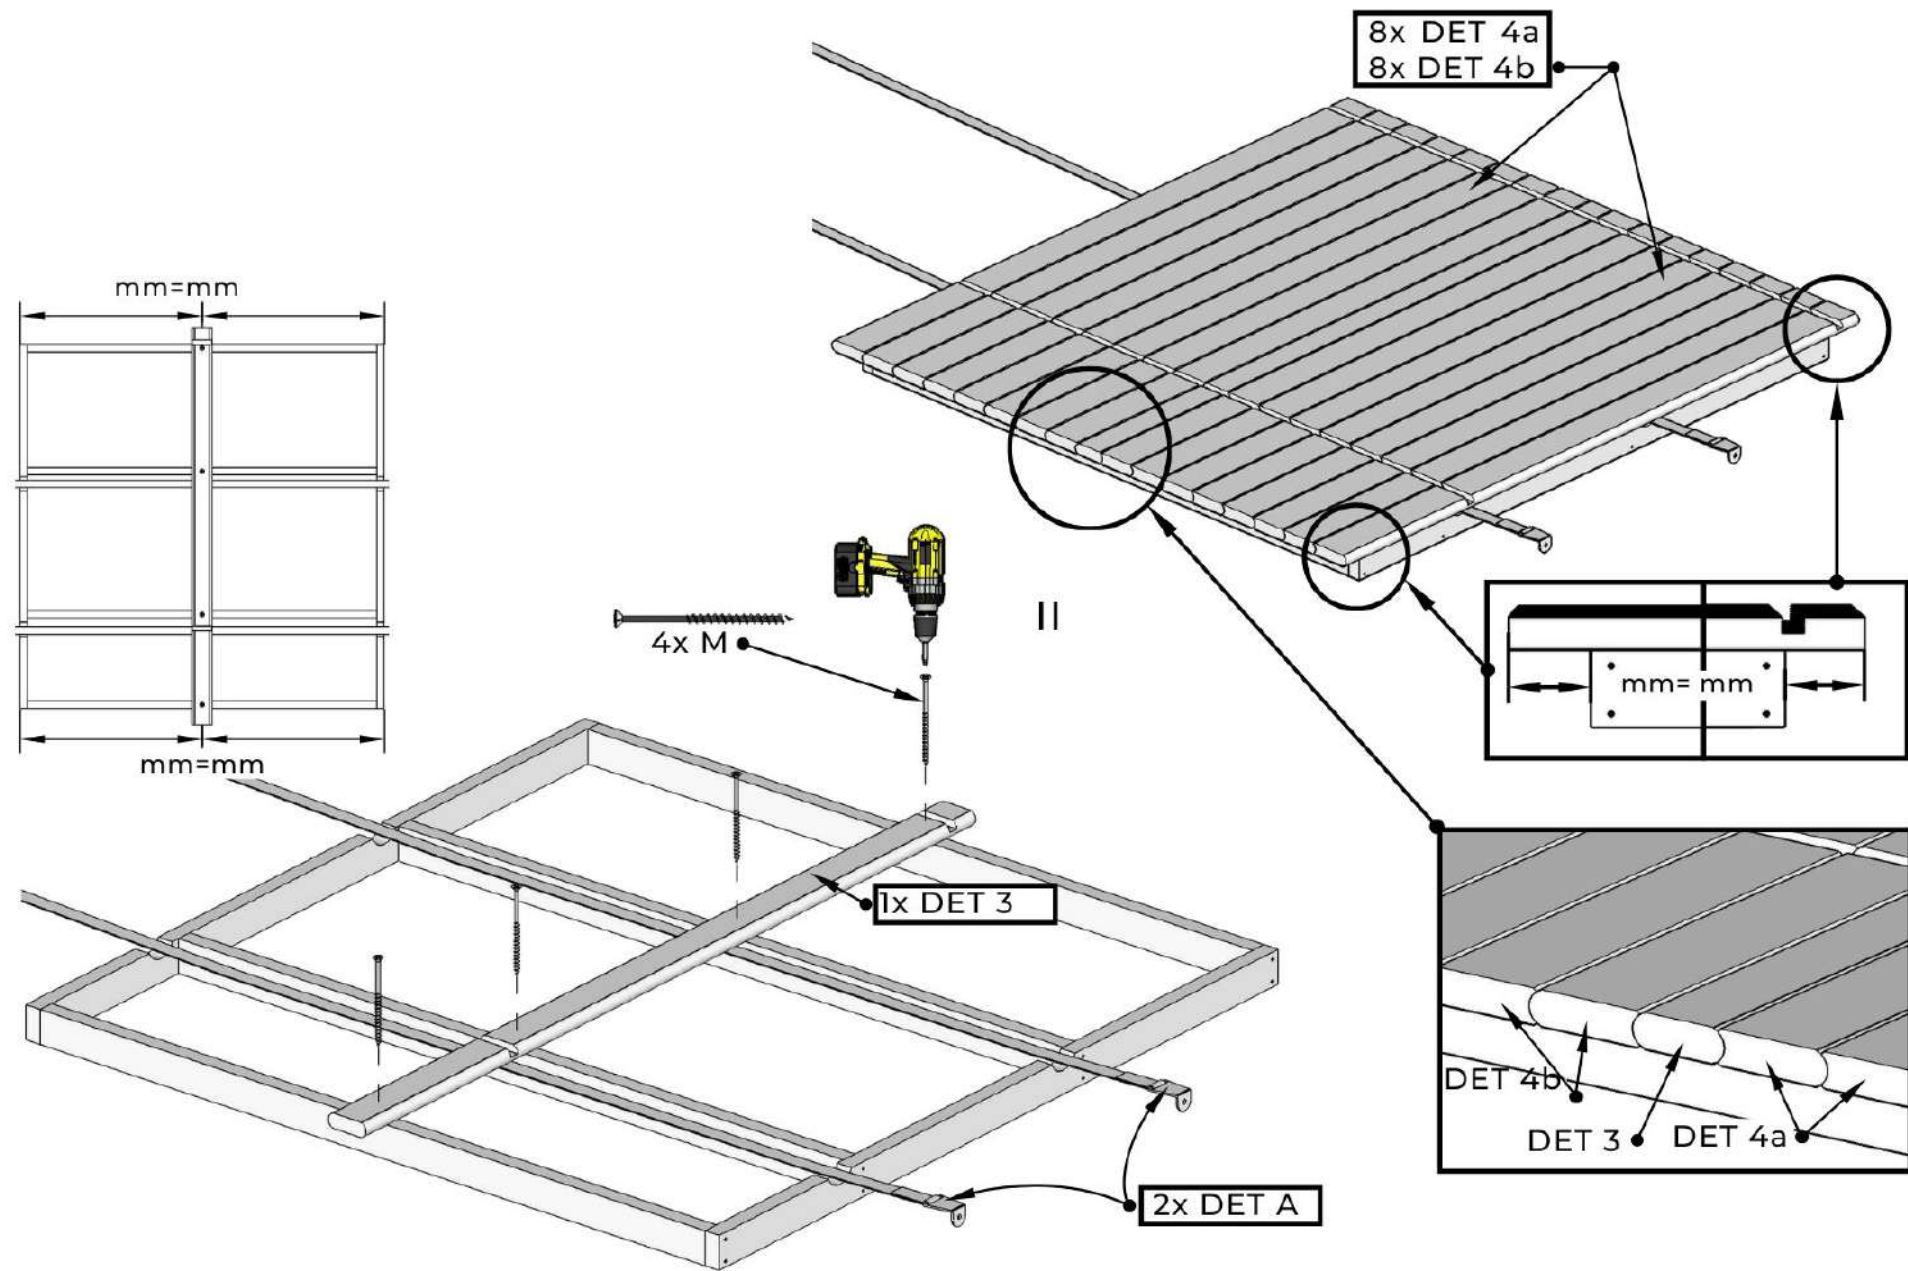


2.


Drill Hole Ø10 in every board, outside.

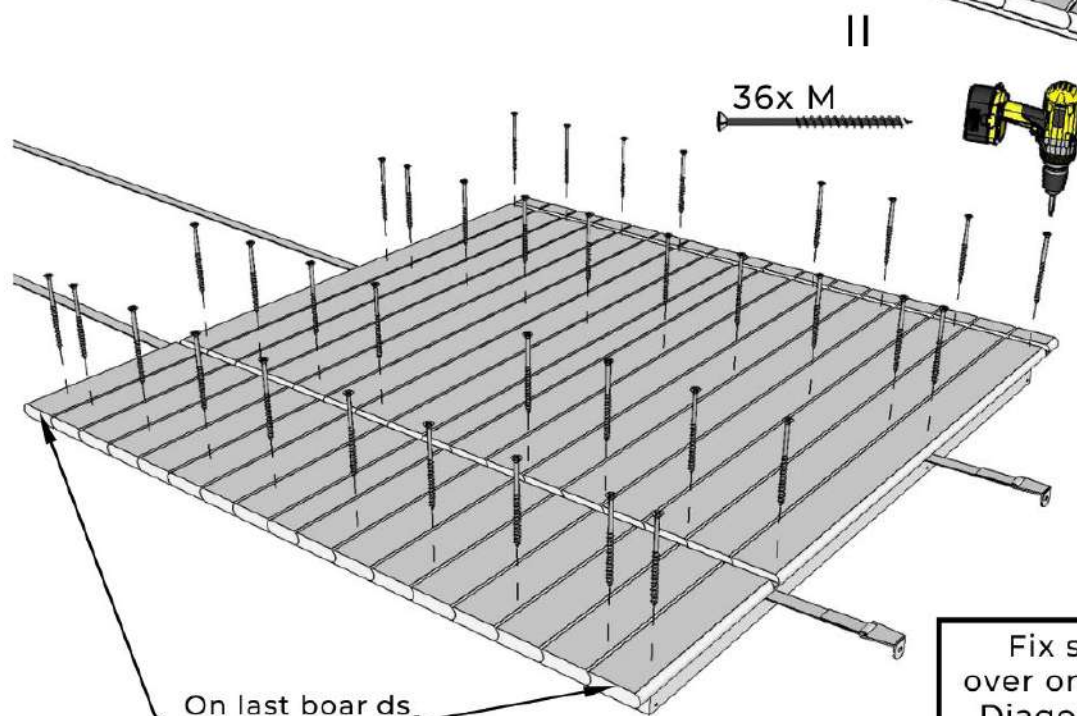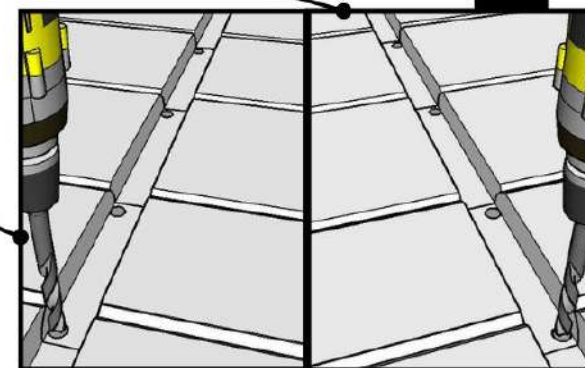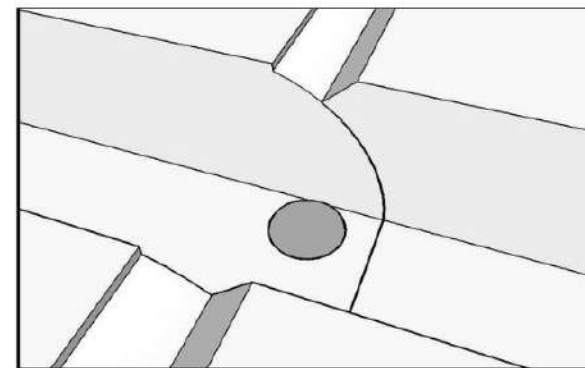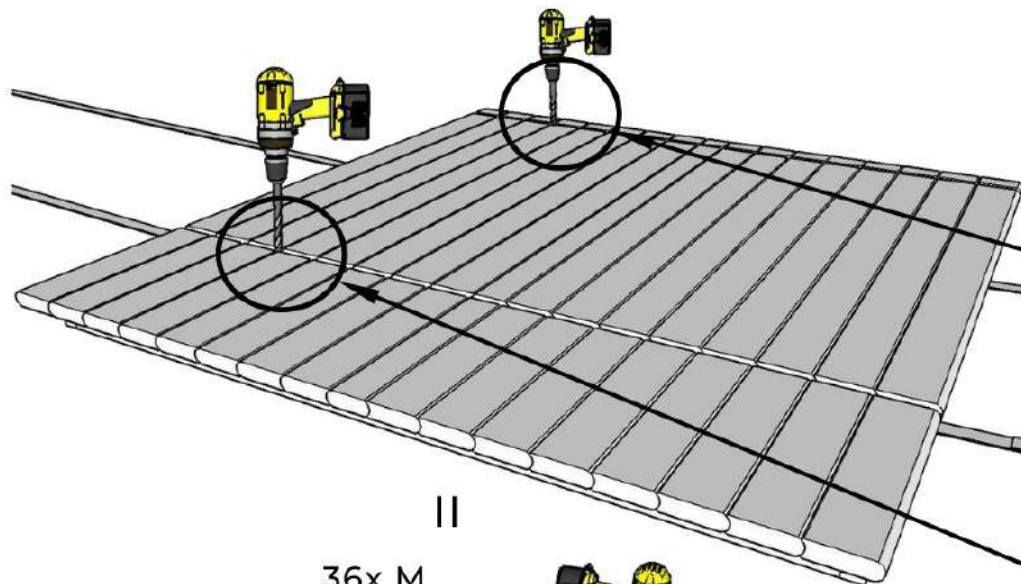


On last boards use 4 screws




Fix screws over one board! Diagonally on every board!

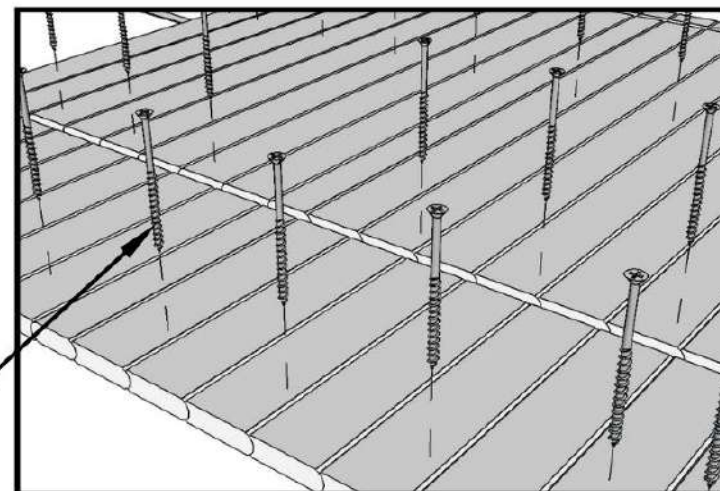

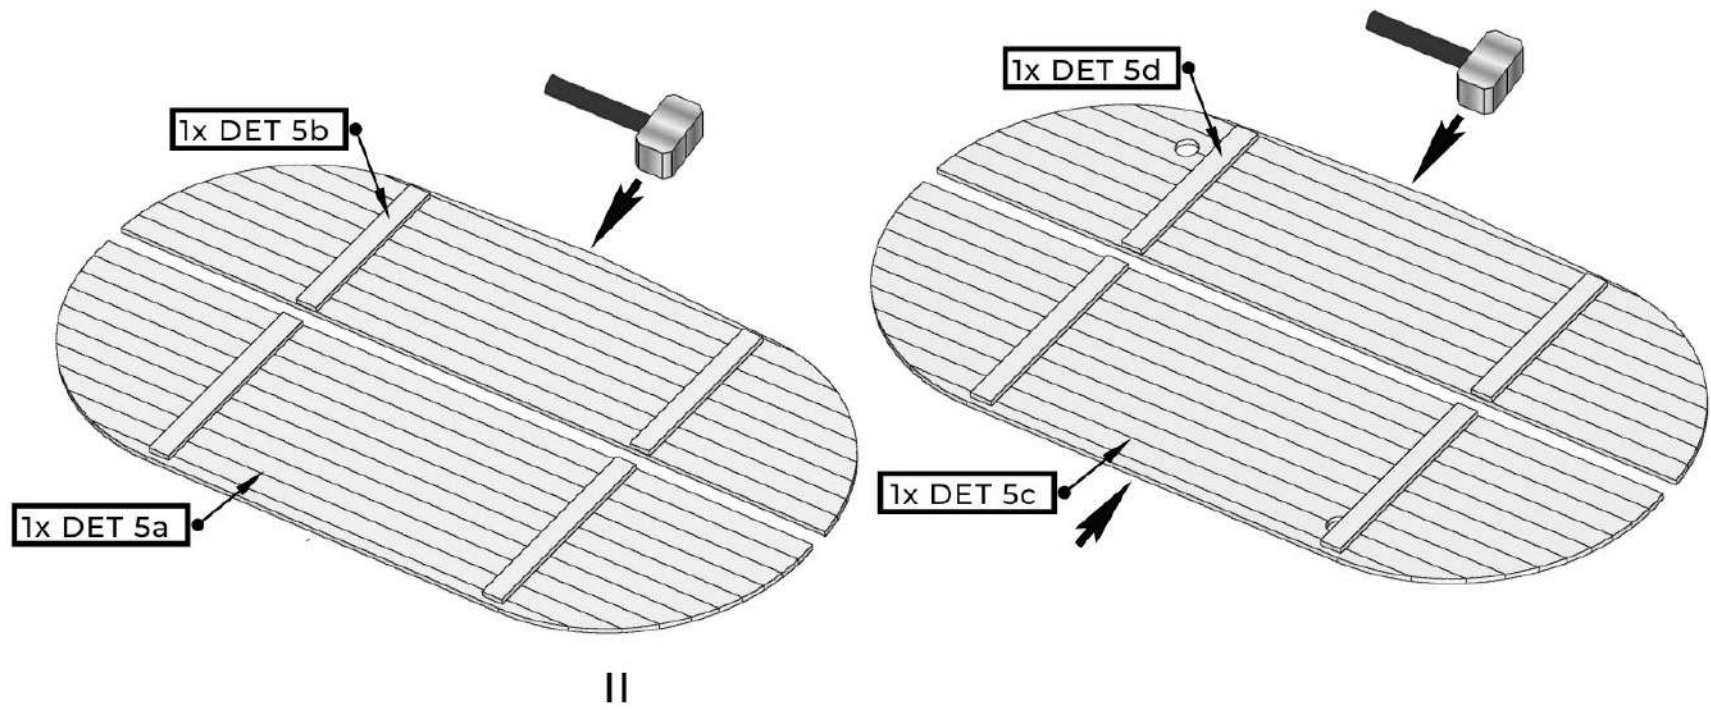

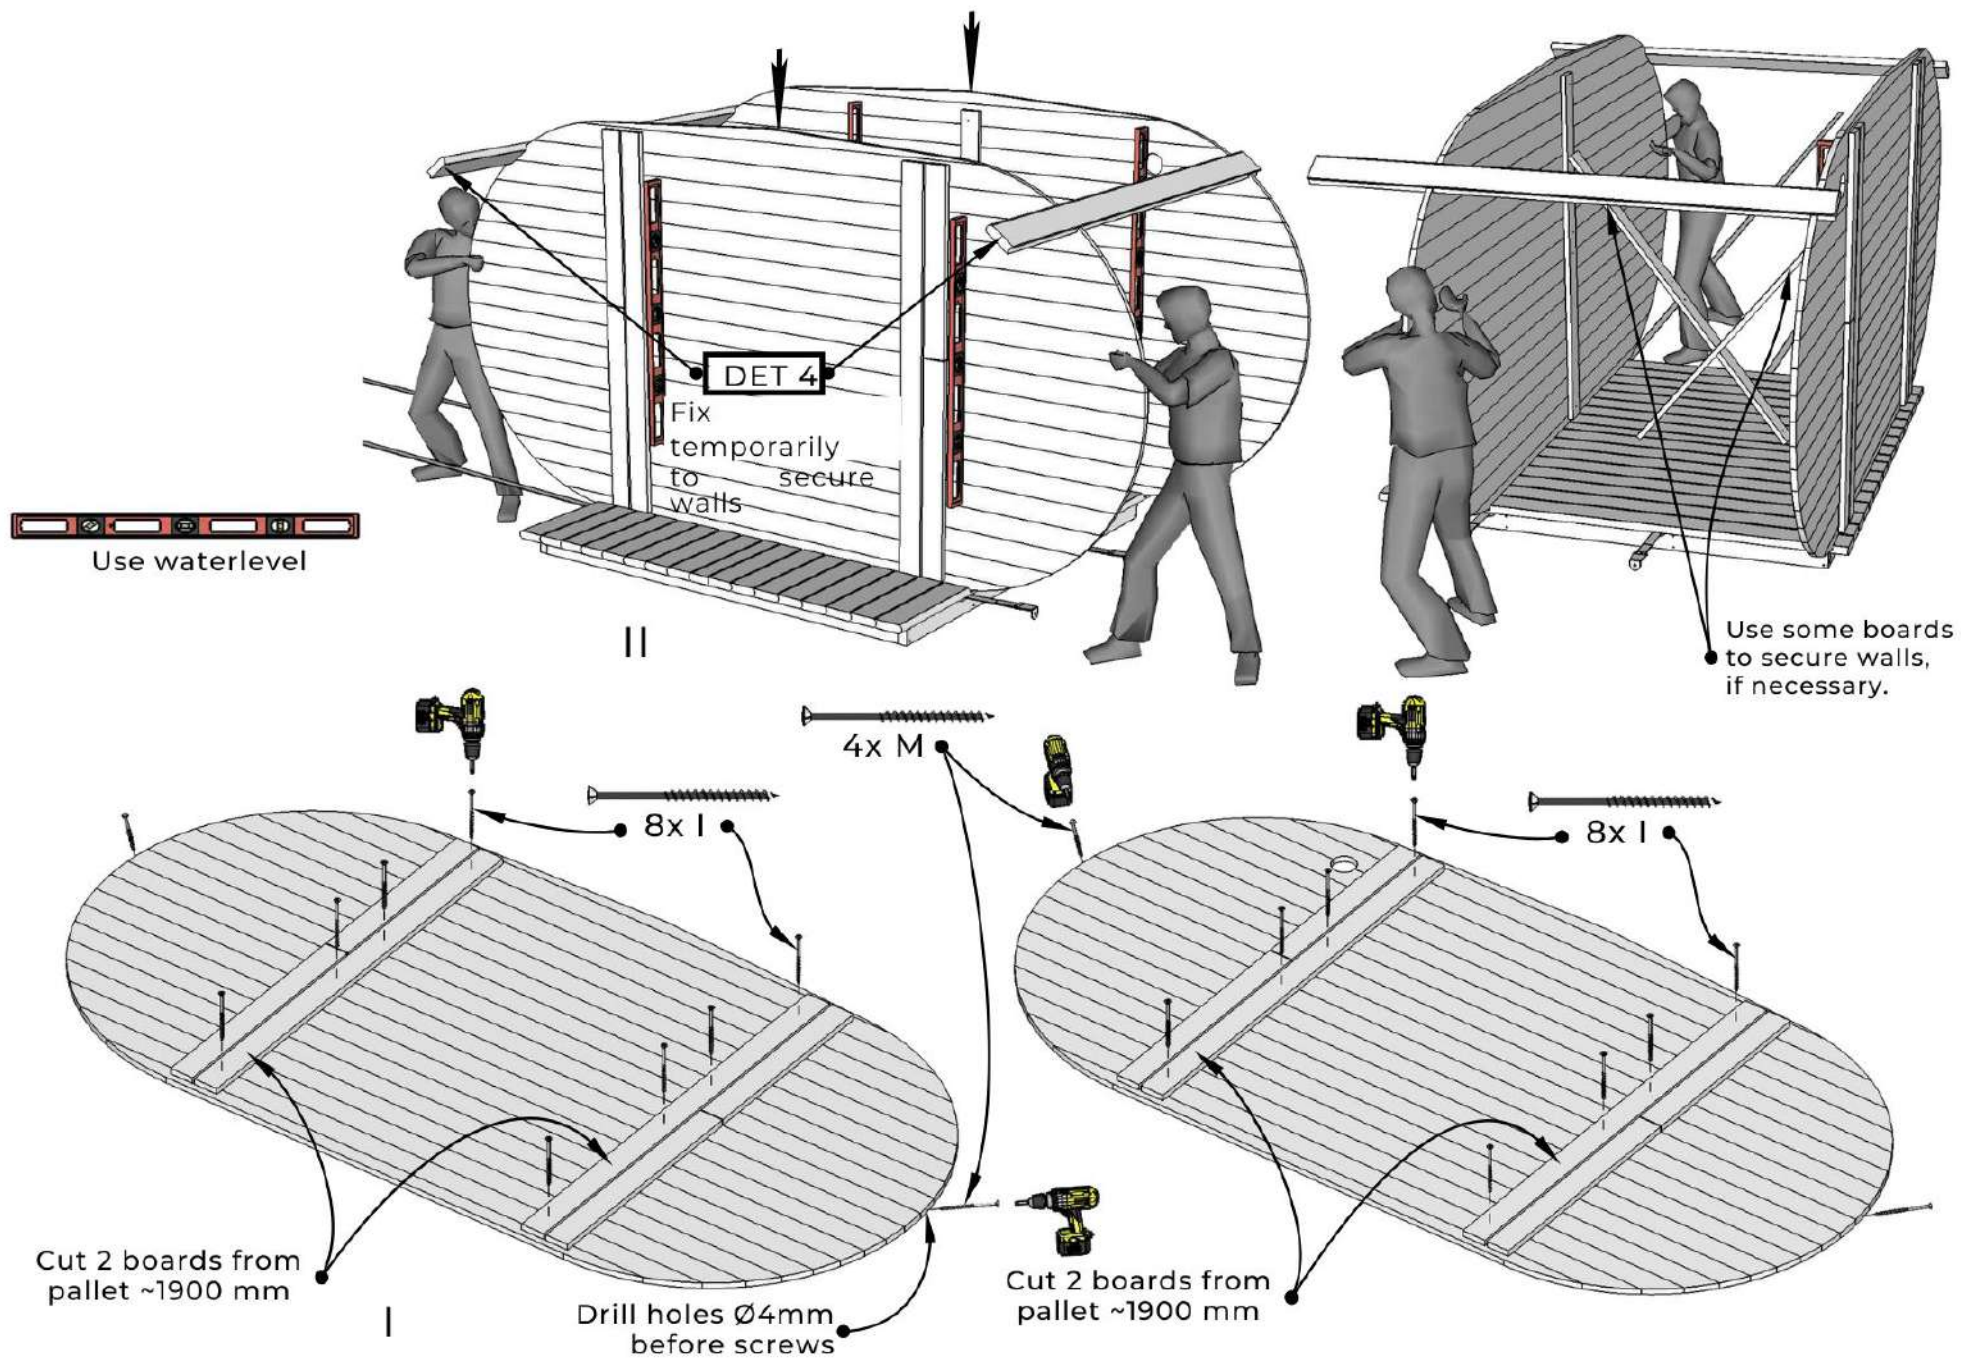


Watch Page 7

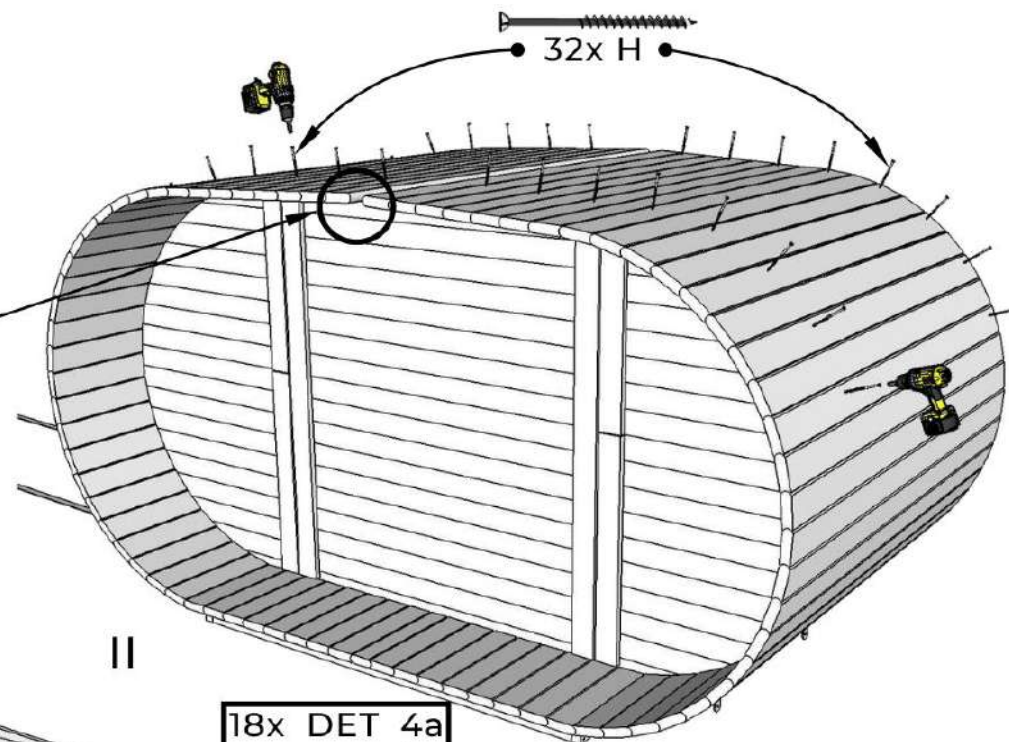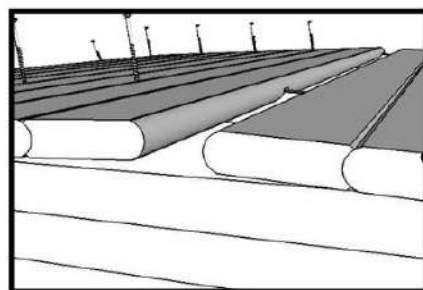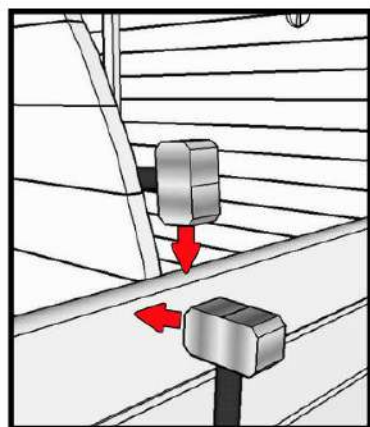


II

18x DET 4a
17x DET 4b

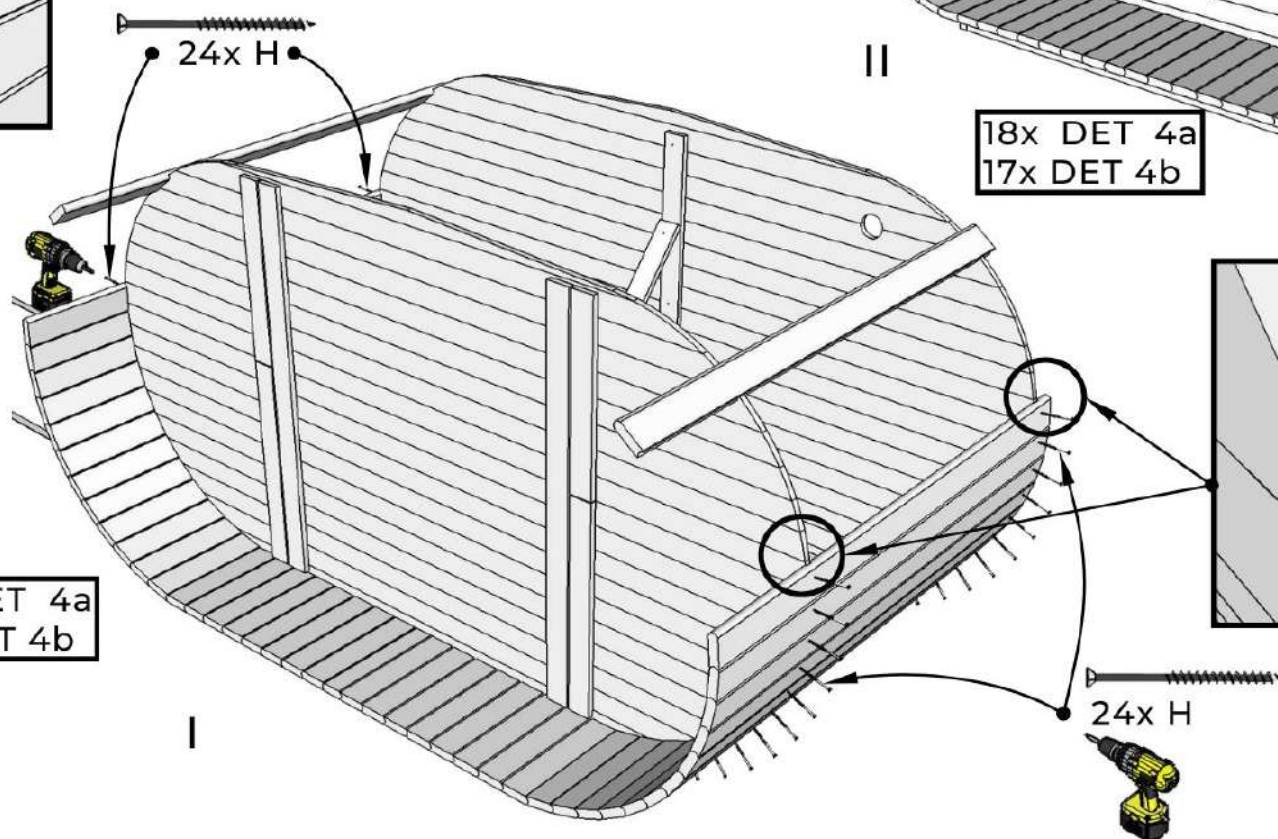

12x DET 4a
12x DET 4b





I

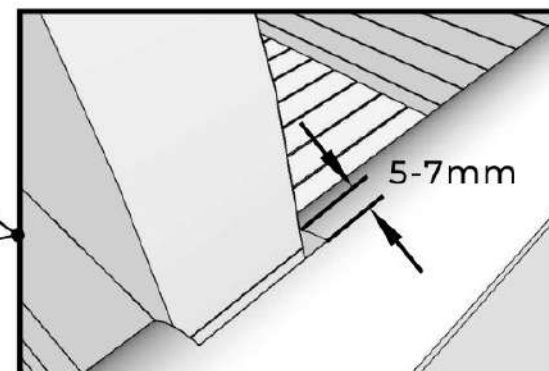


NB! Don't leave space,
if using thermal wood!!!




Important!!!

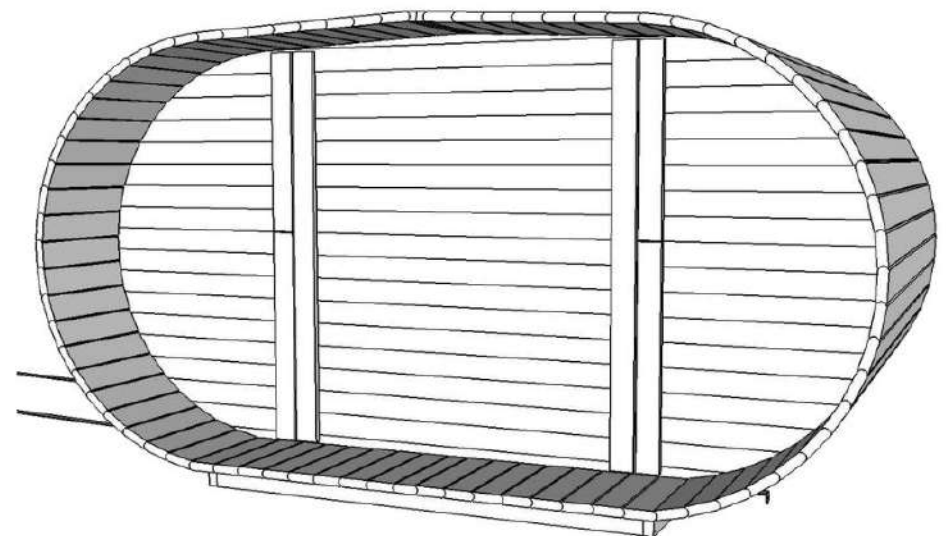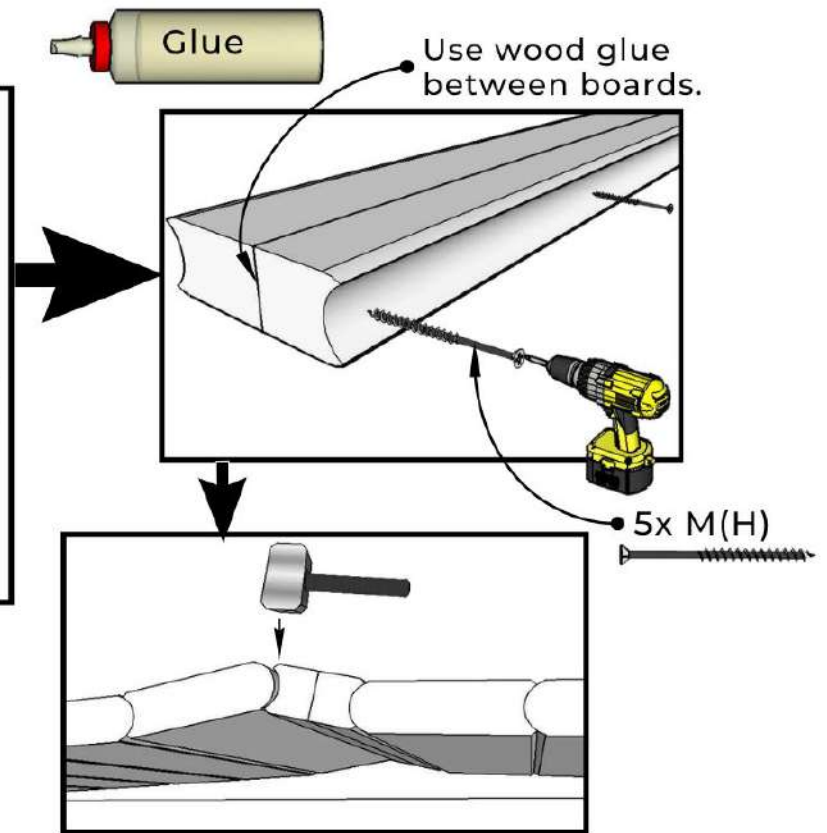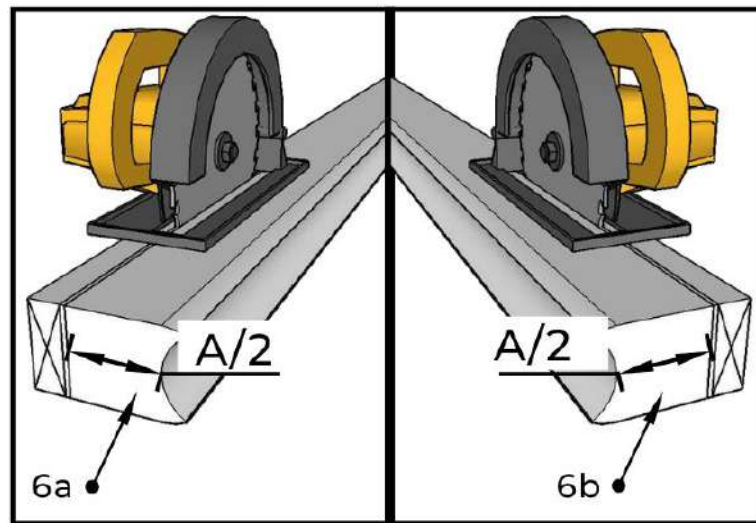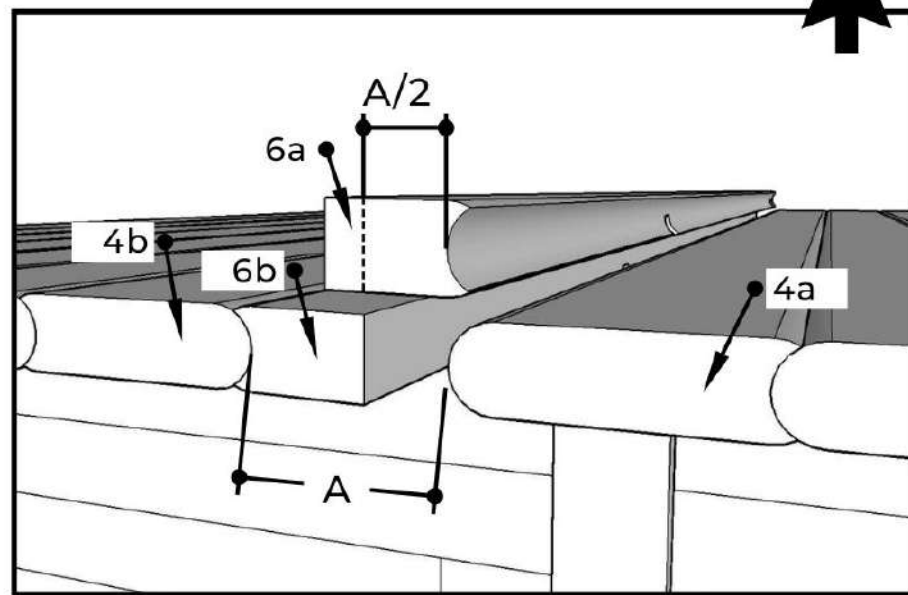


8.

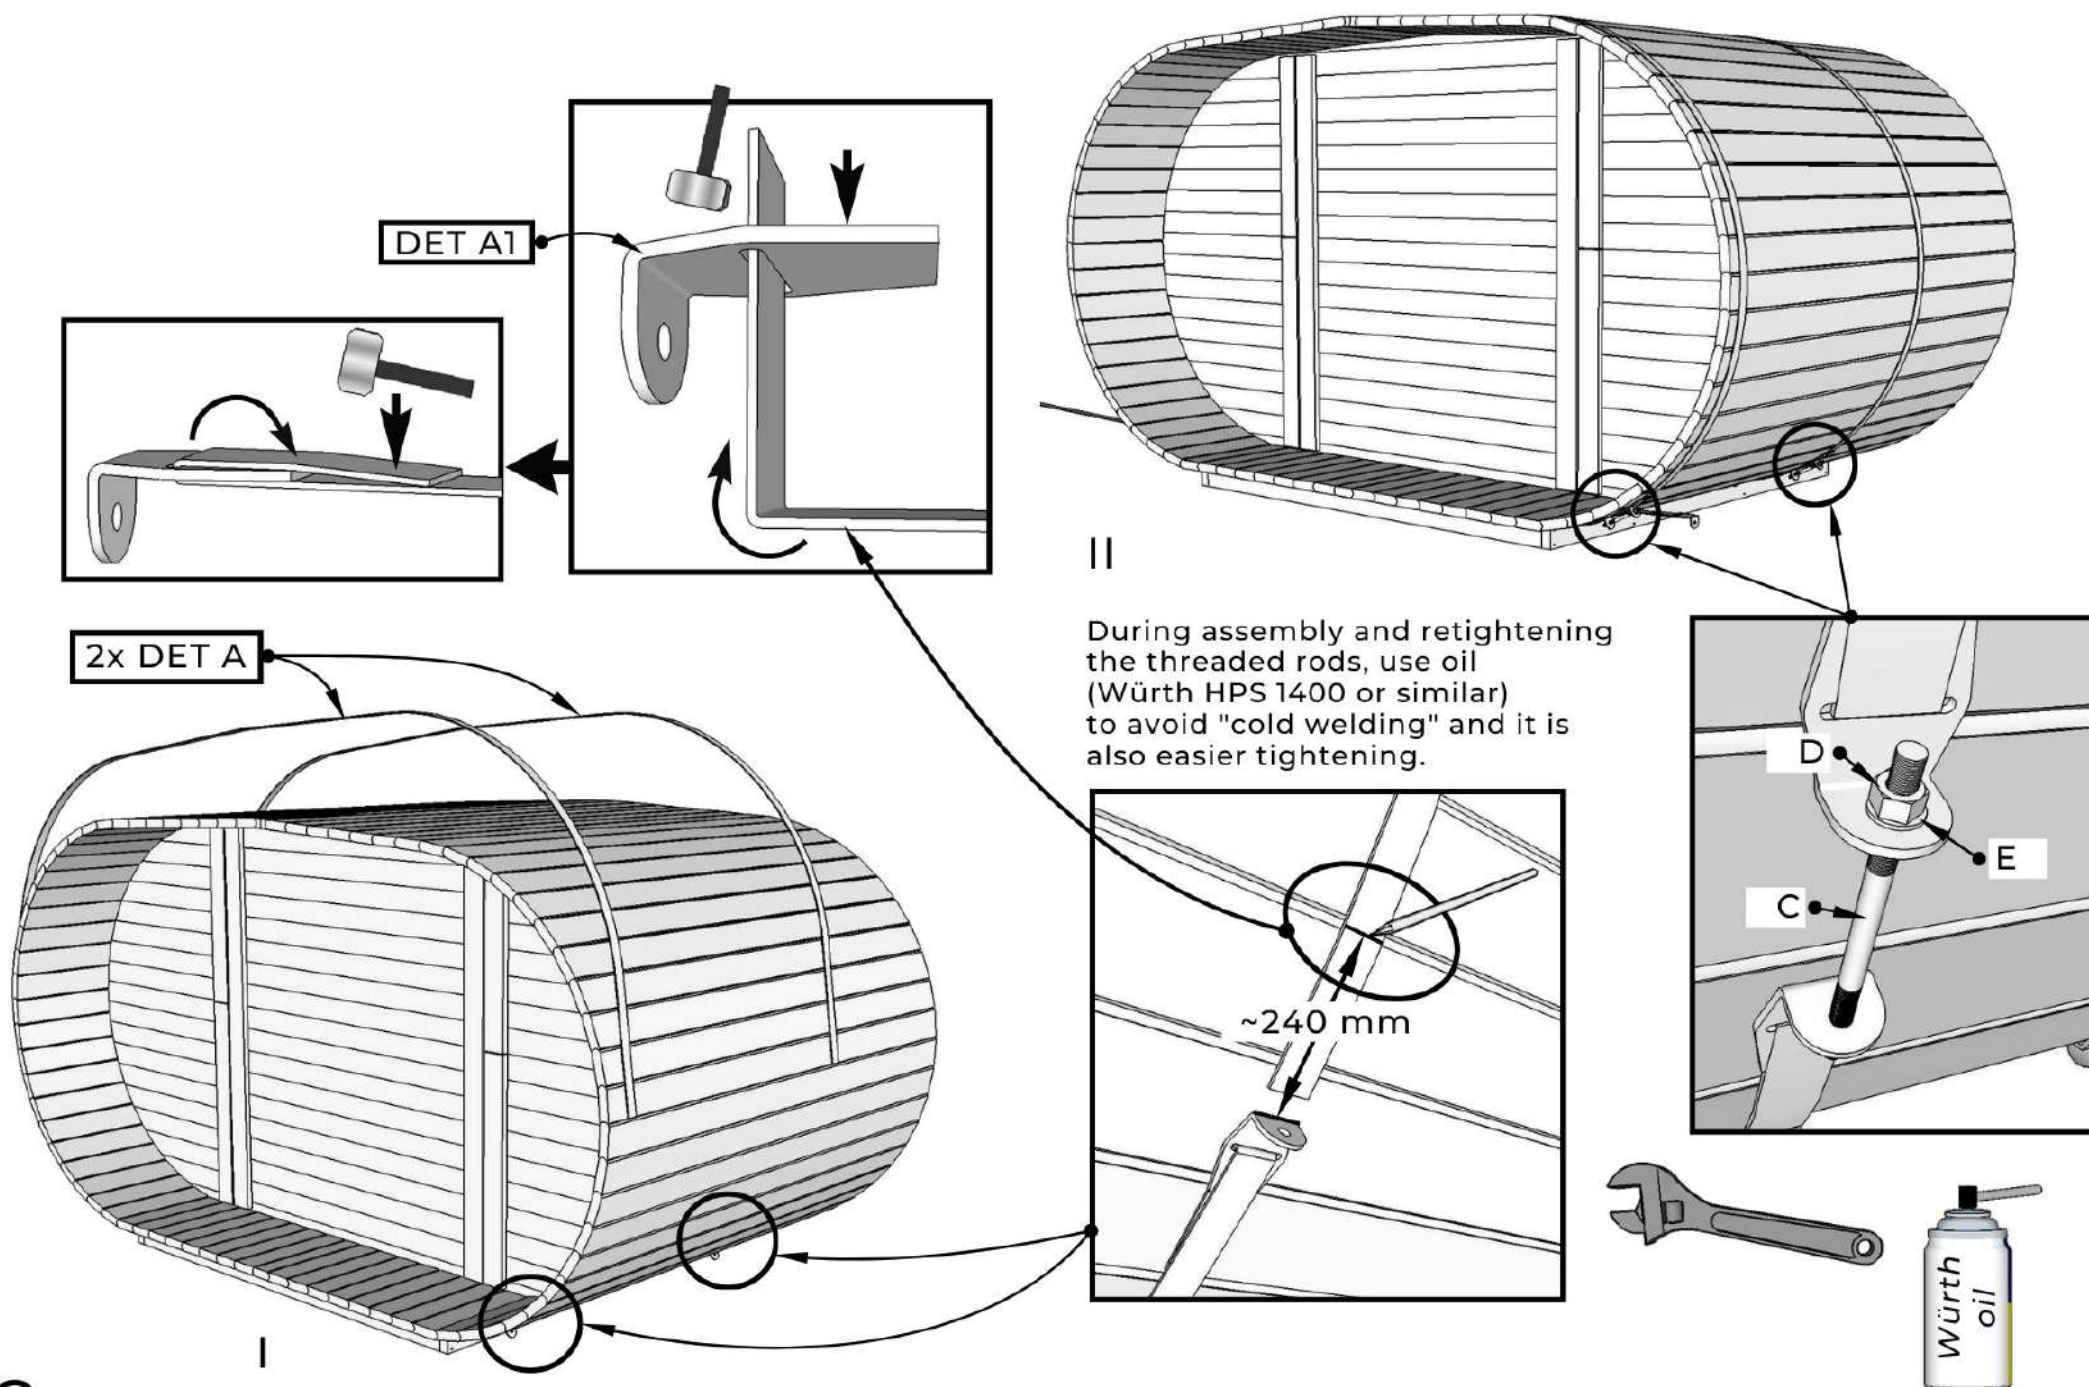


9.

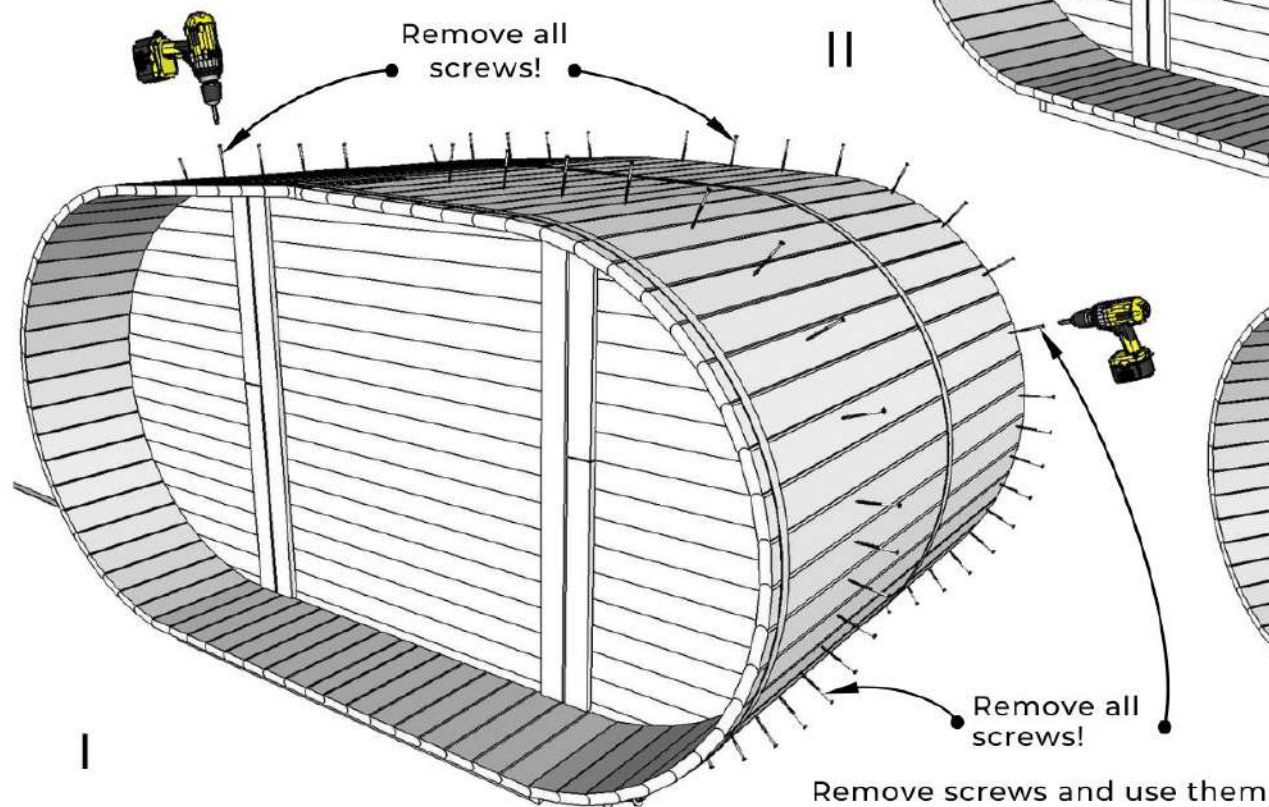

II

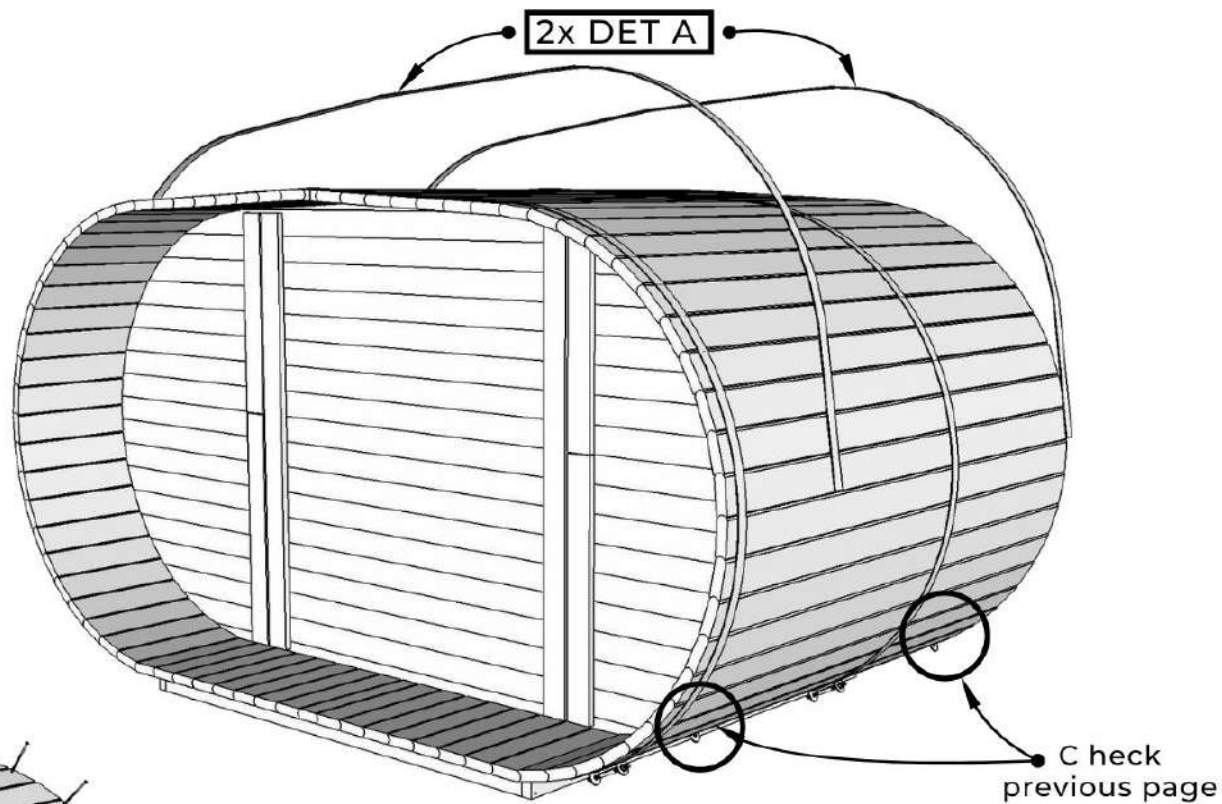


III

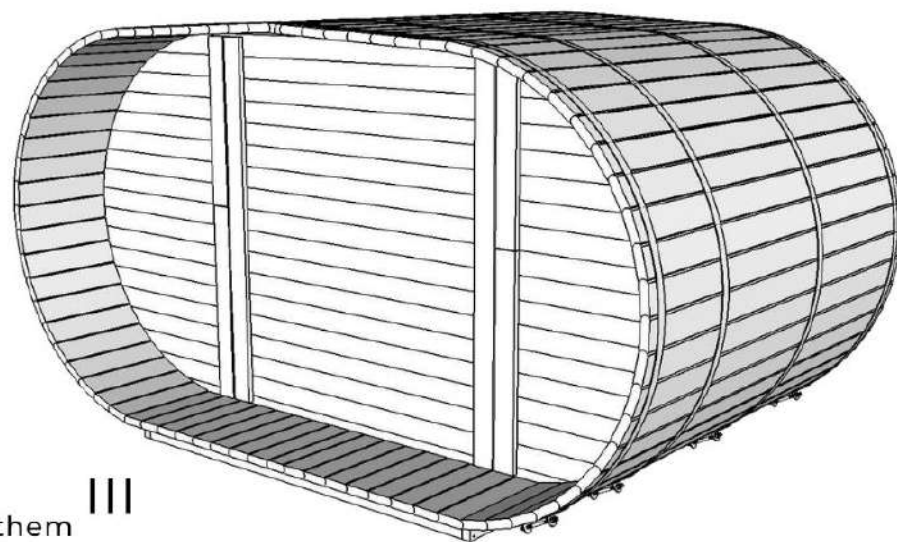


Remove screws and use them on further sauna installation.


(TU 103)

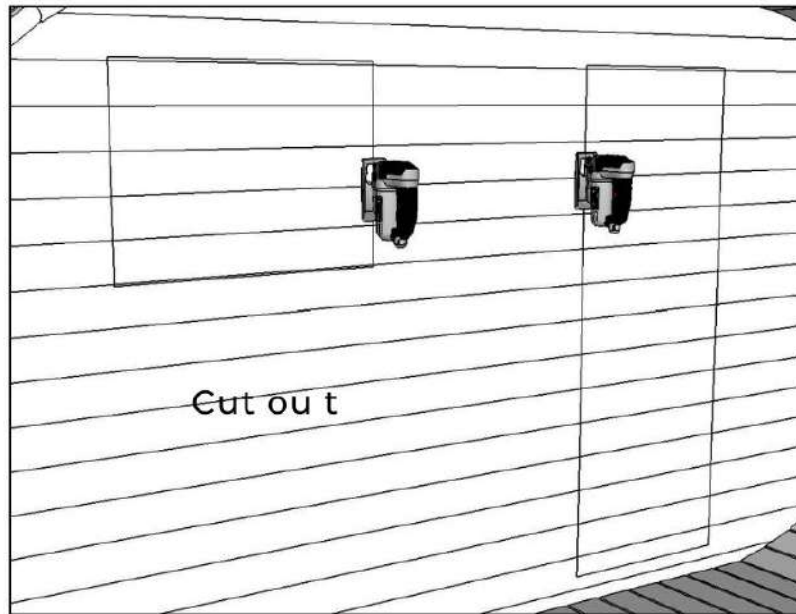


III

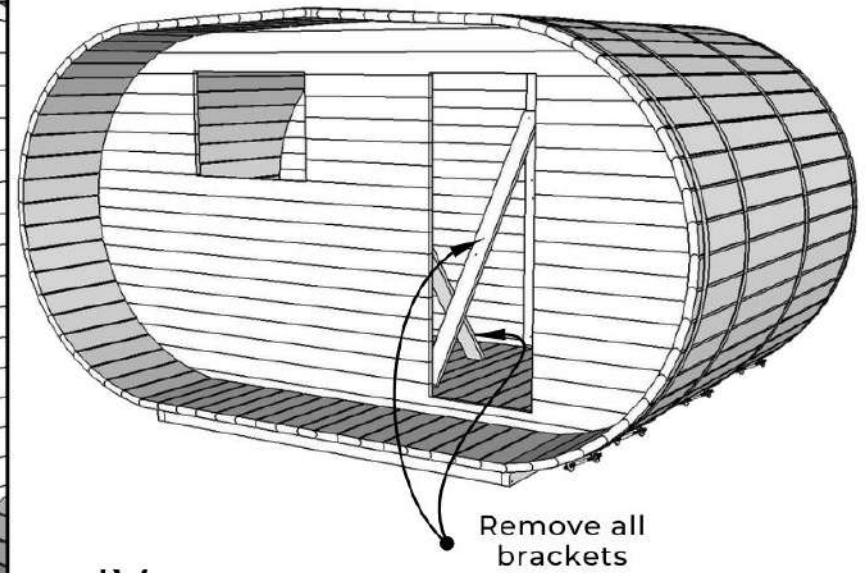




IV

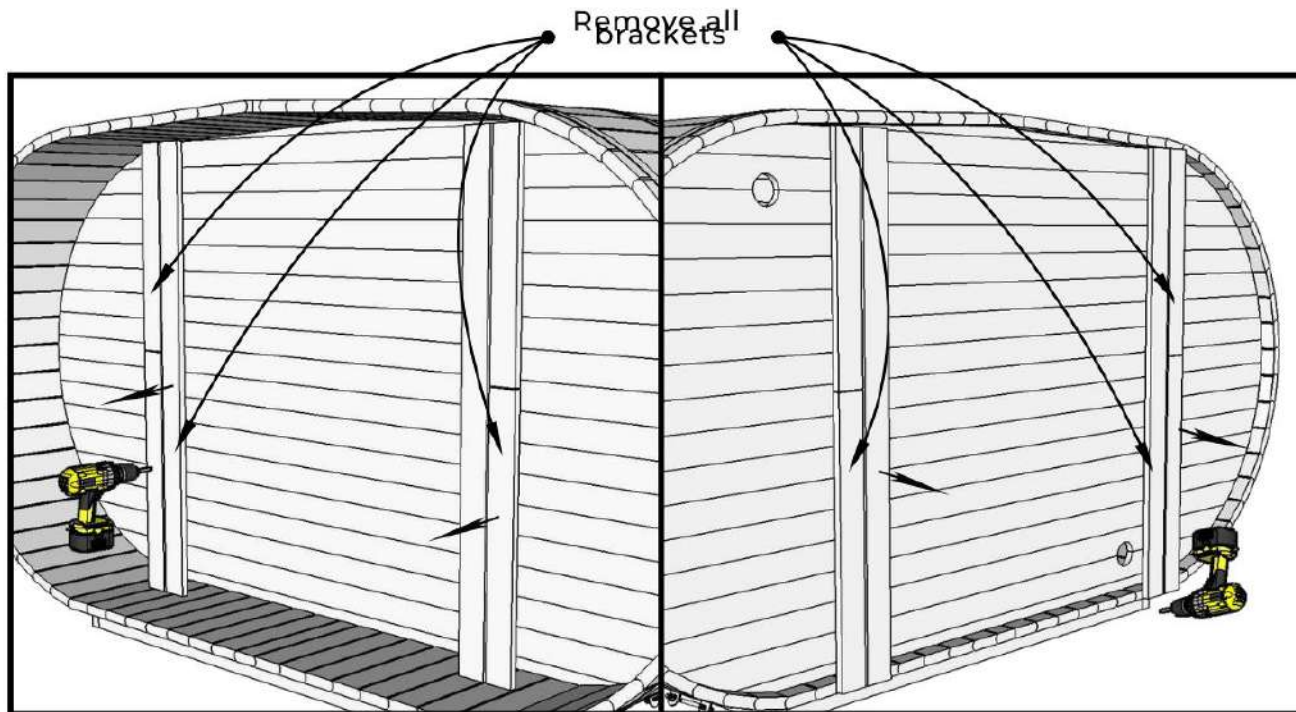


I

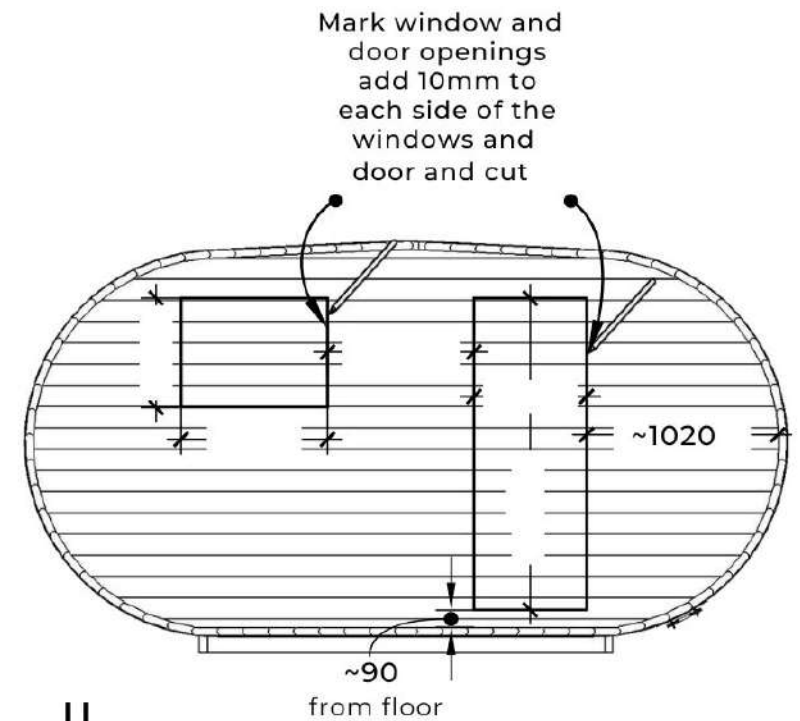


II


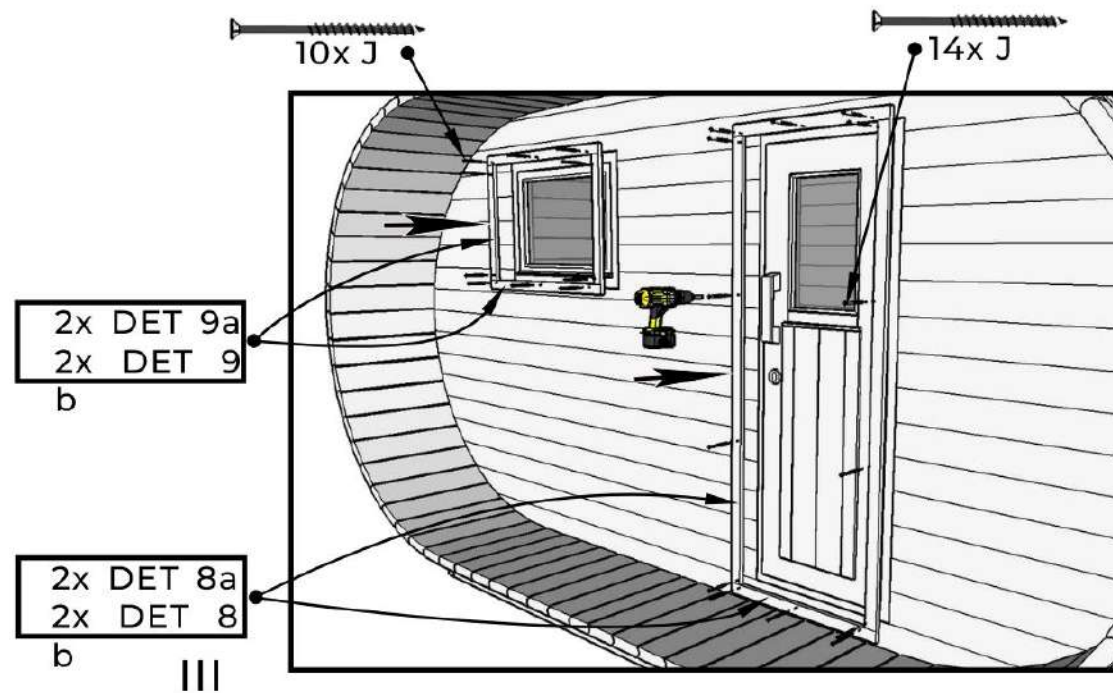
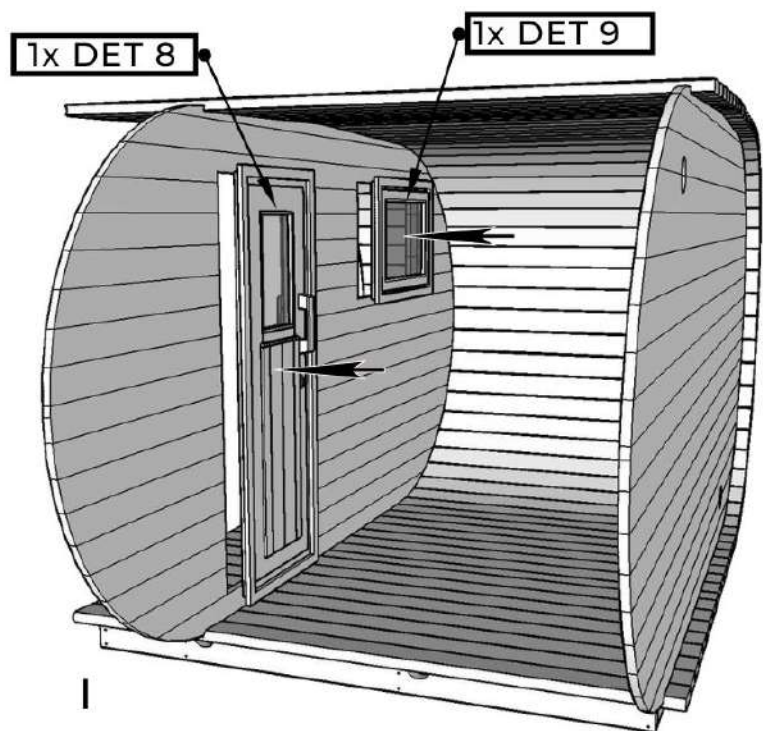
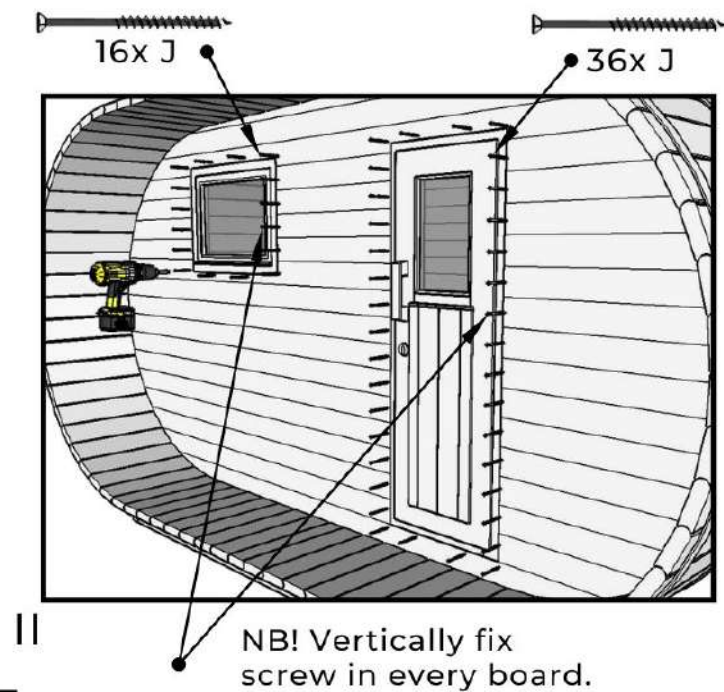



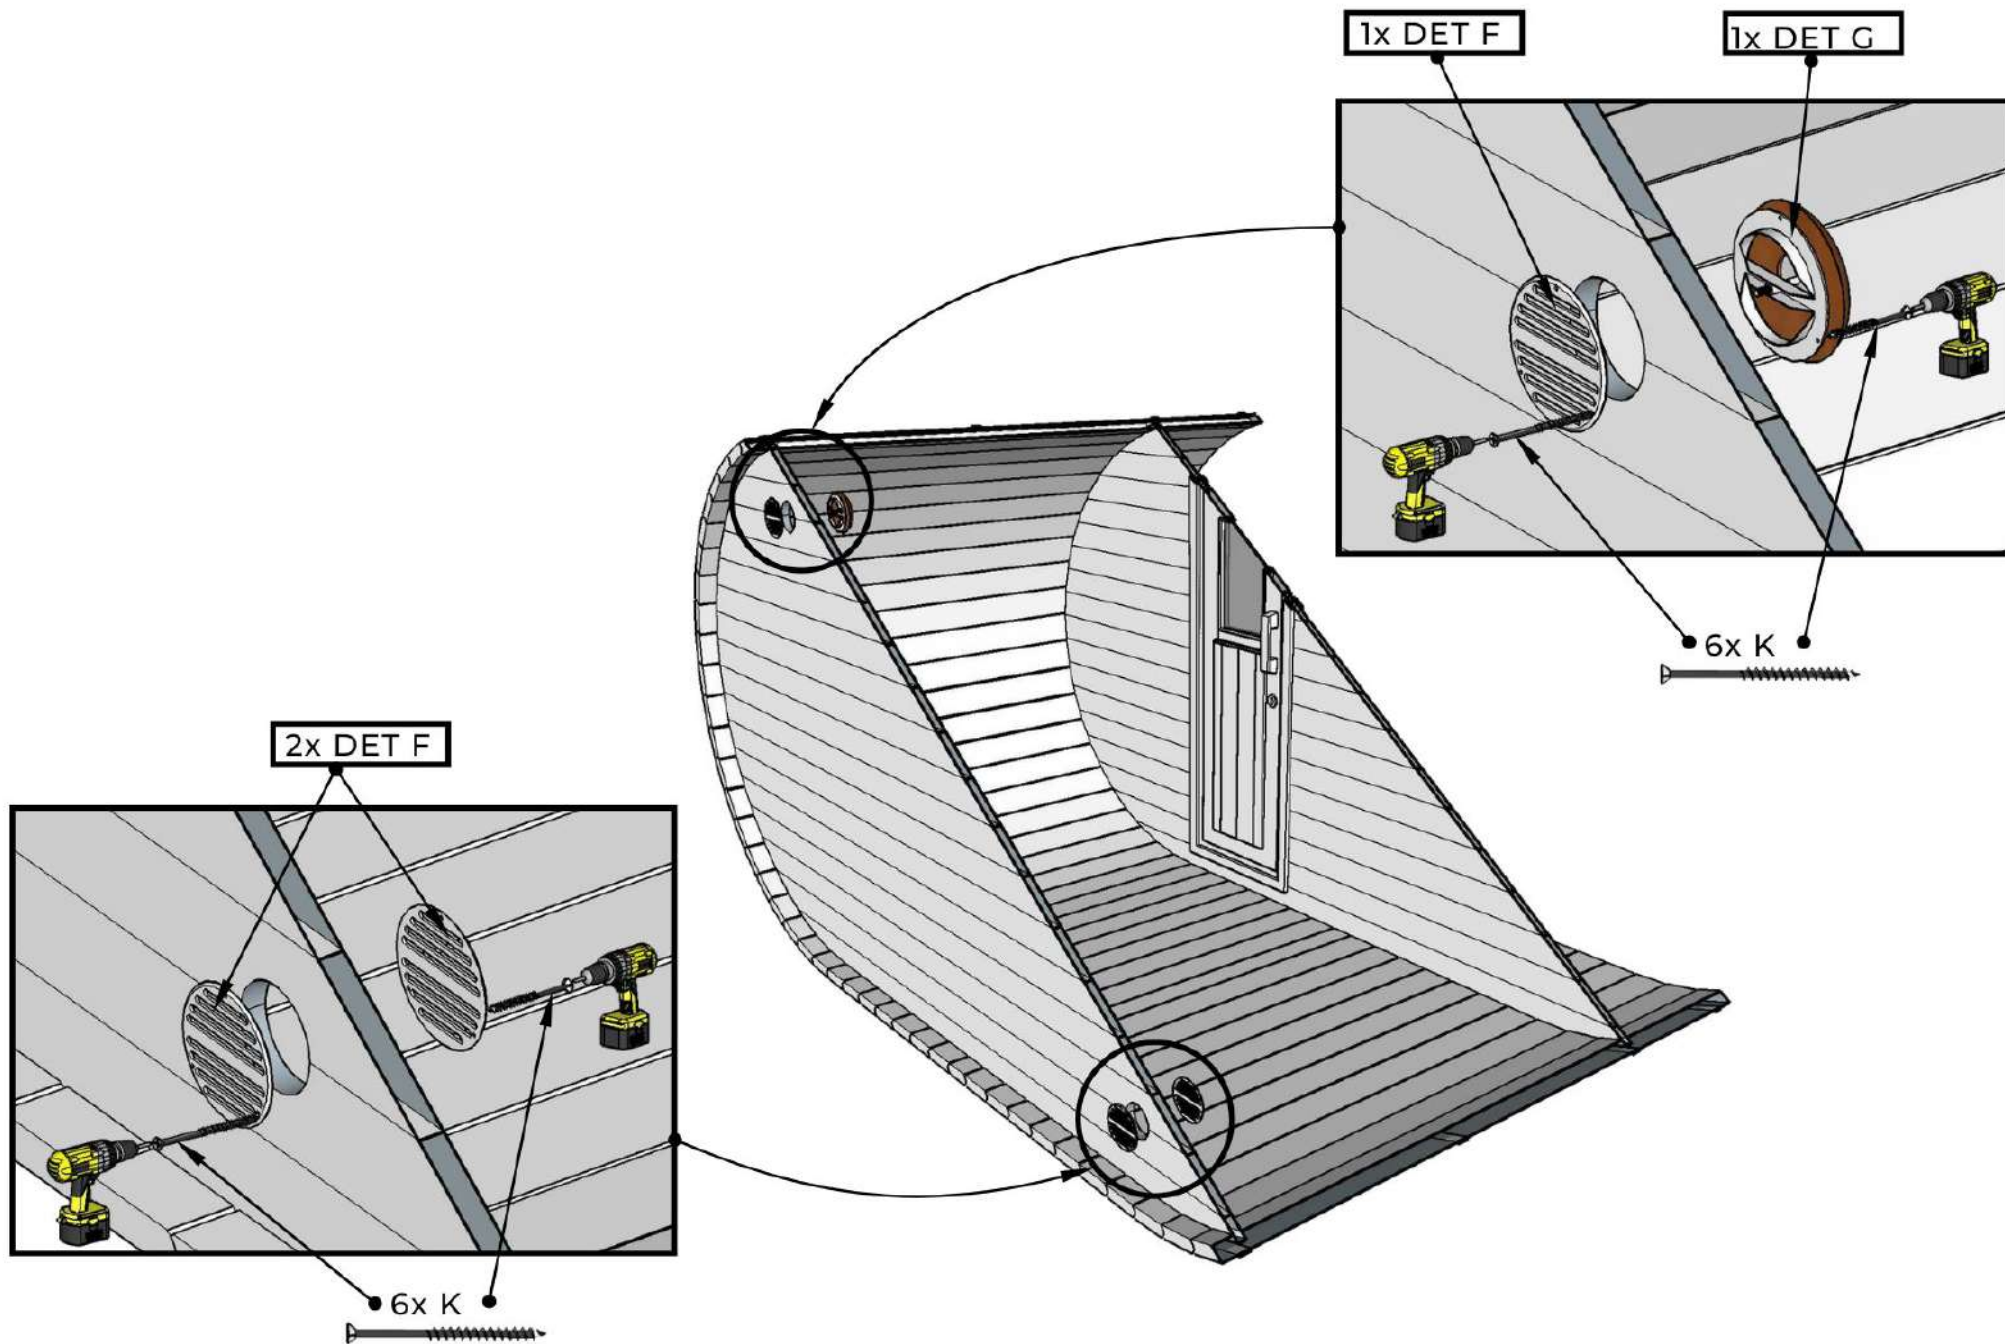




13.

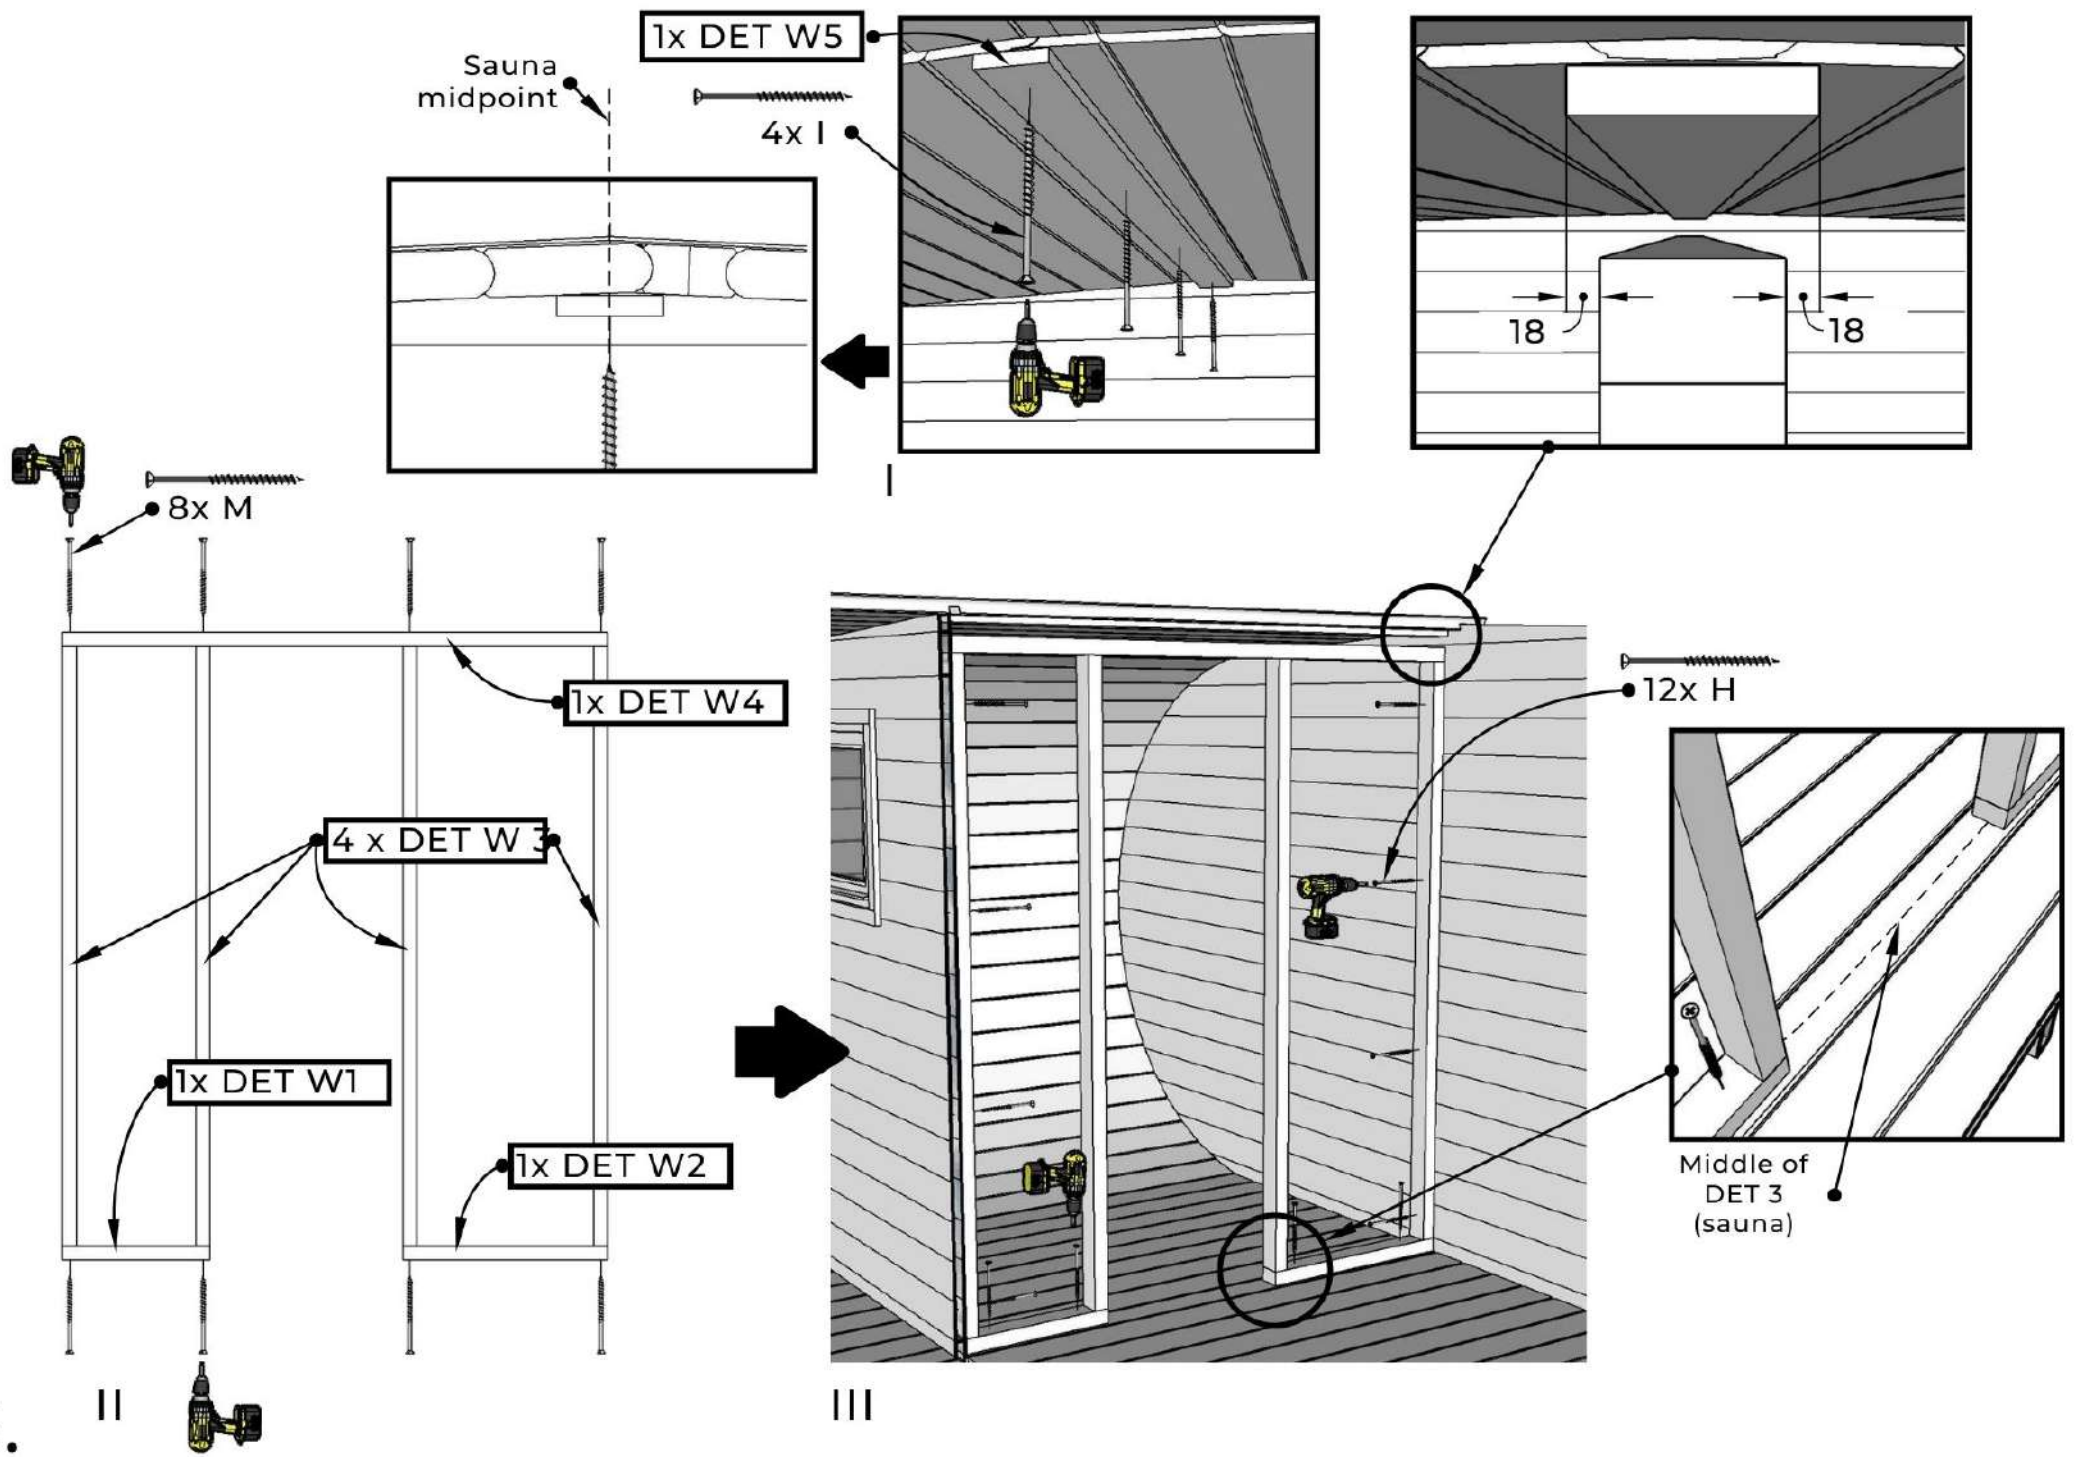



If Your saunaroom equipped with double decker or L-shape benches, please check extra pages for installation.



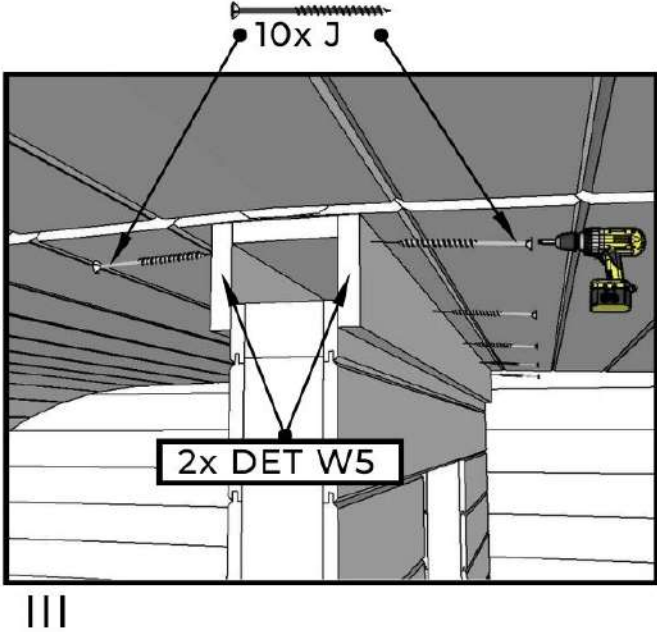
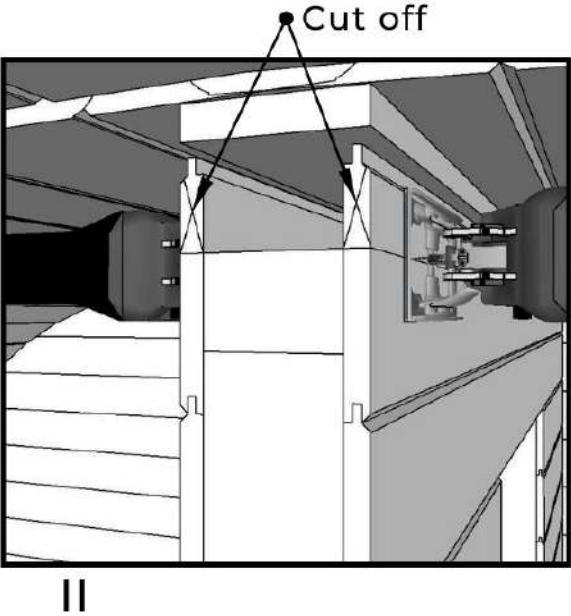
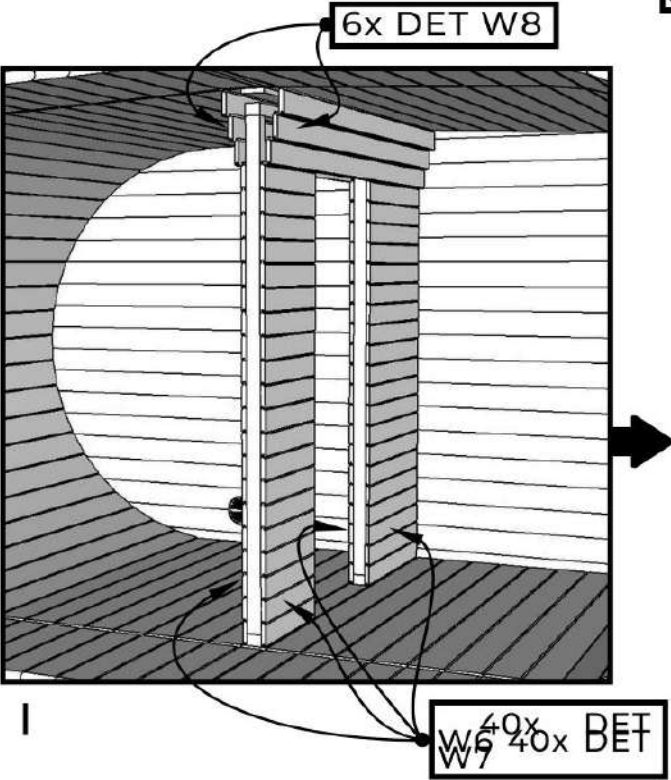
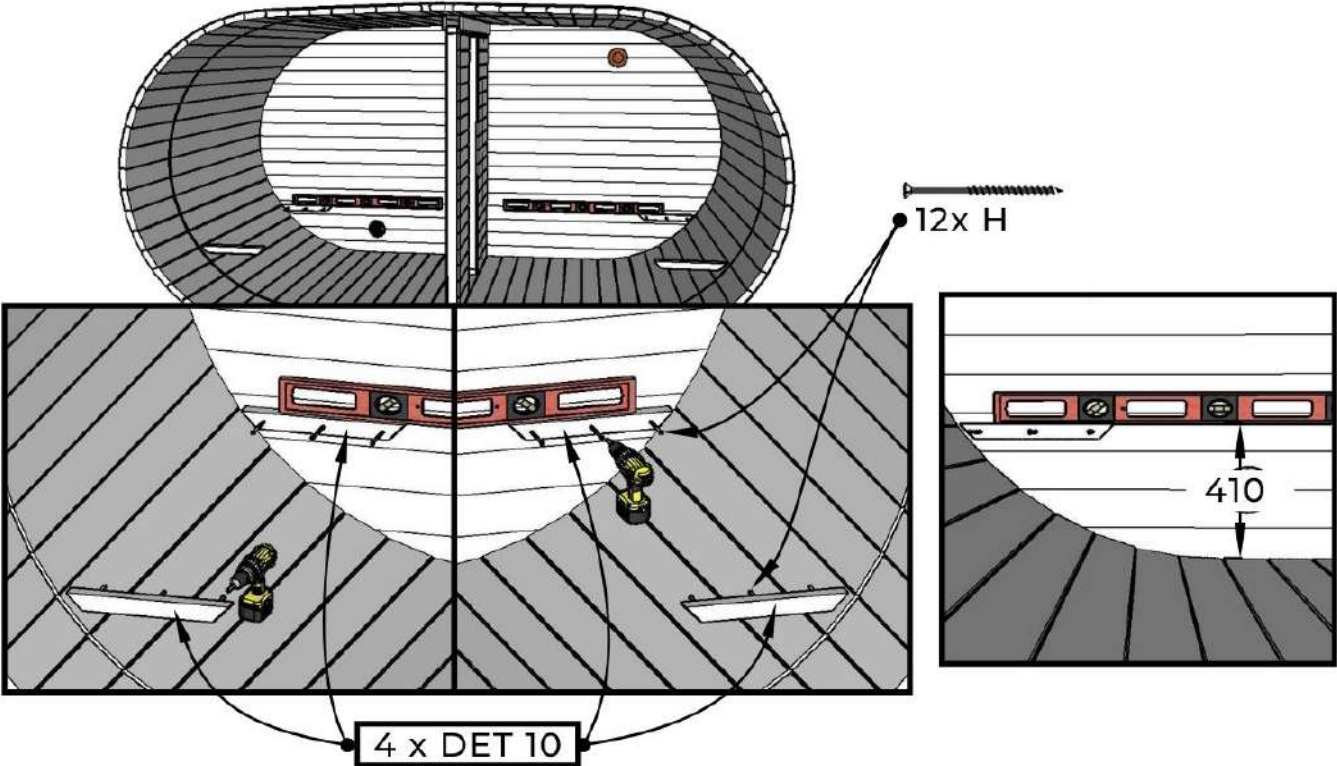


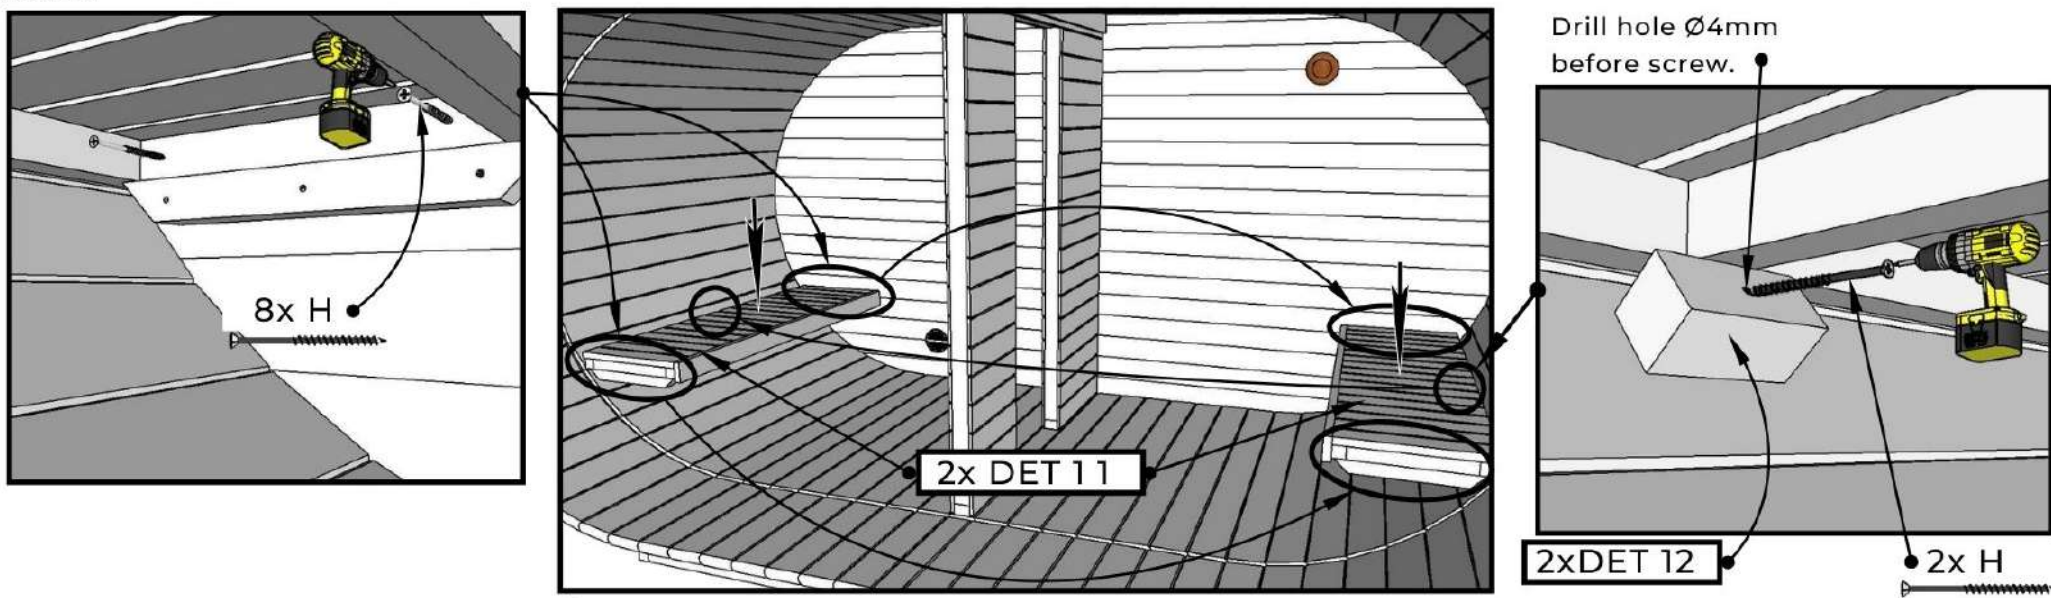
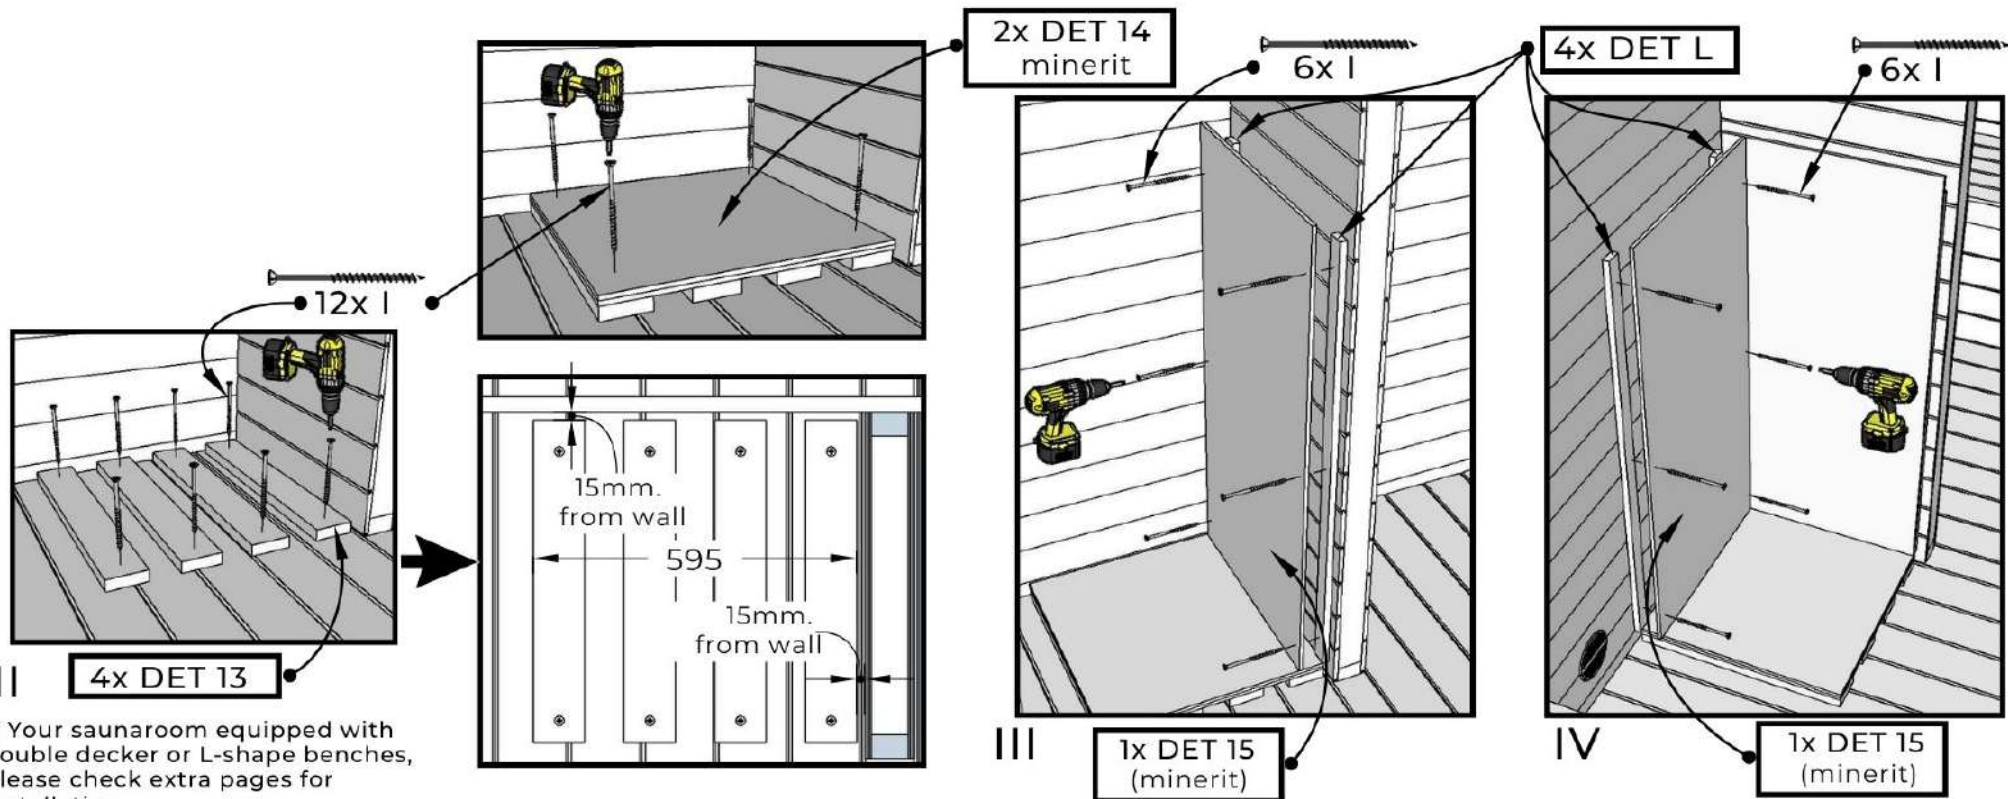


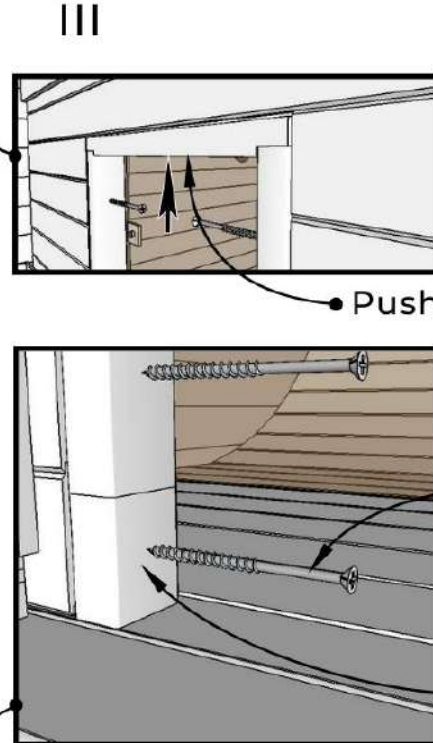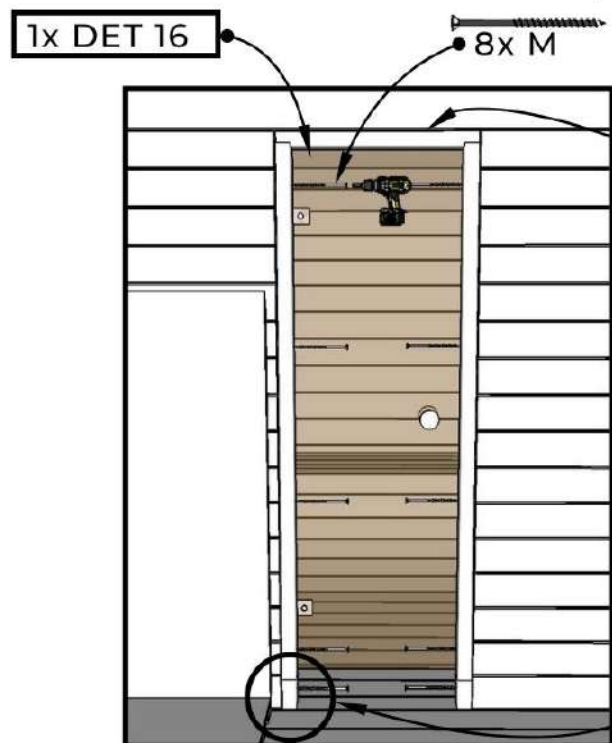

Drill holes Ø4mm
before screw s.

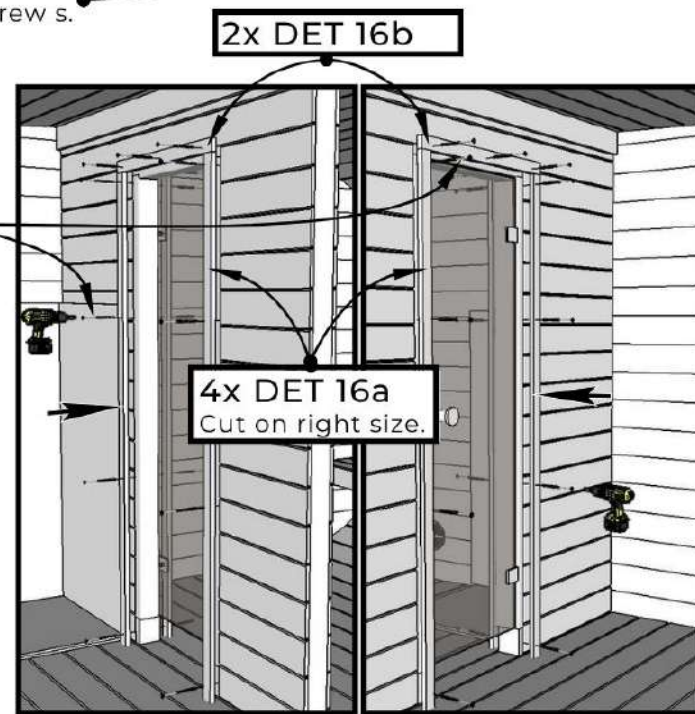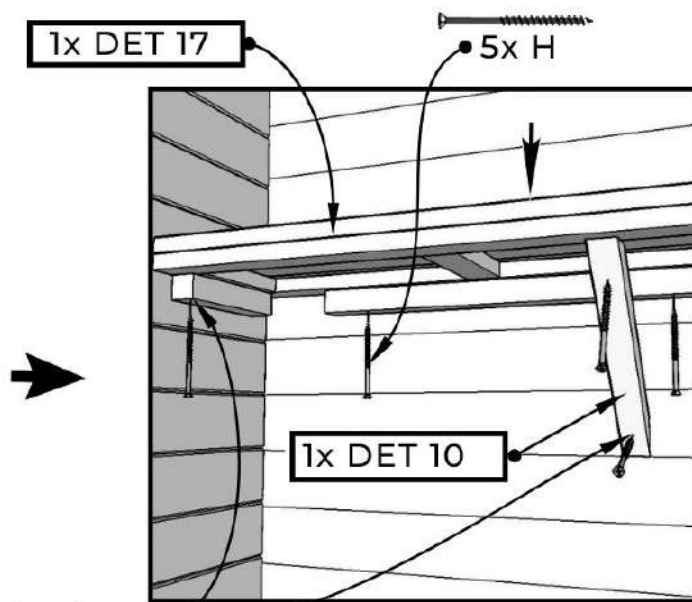

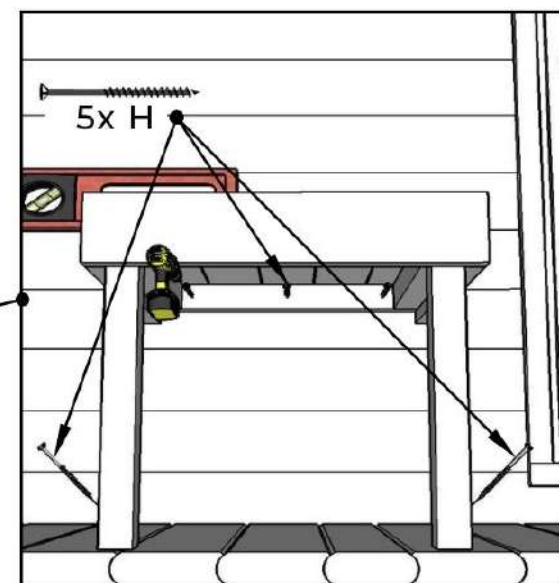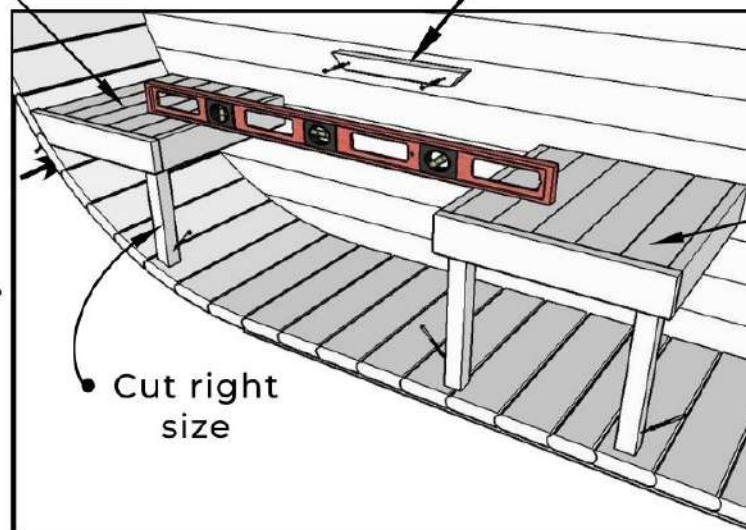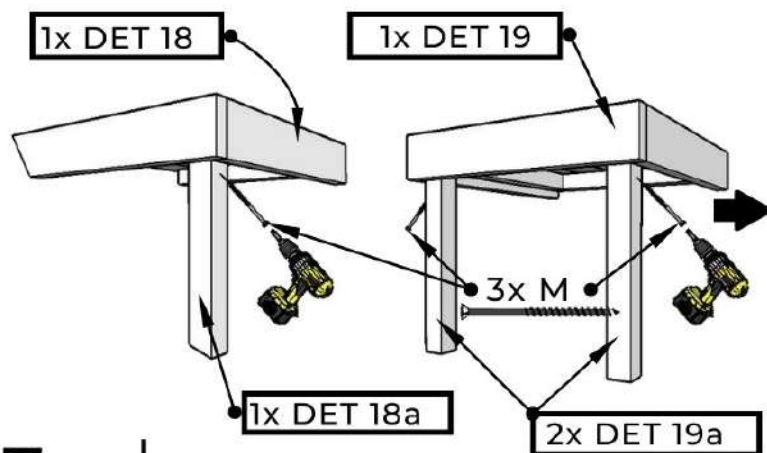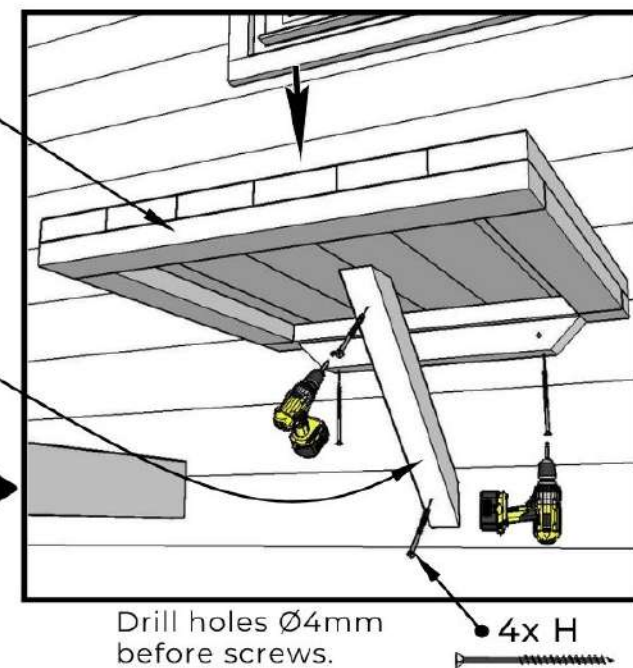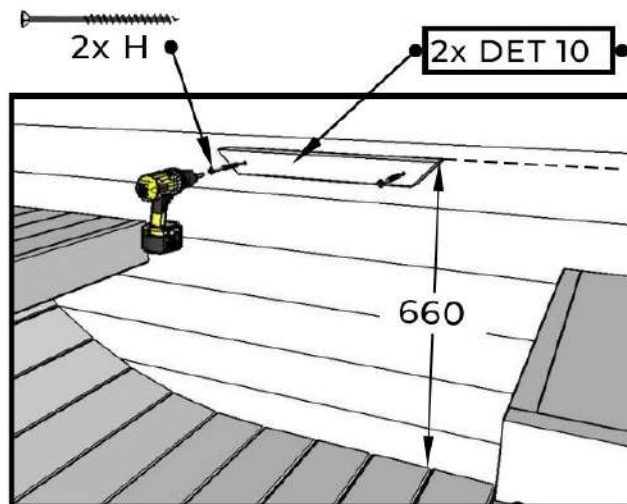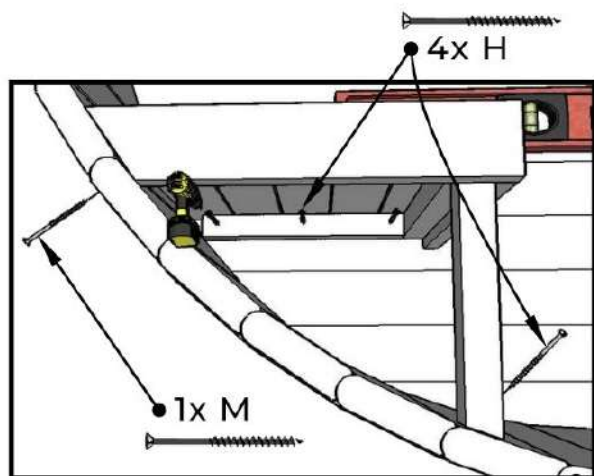


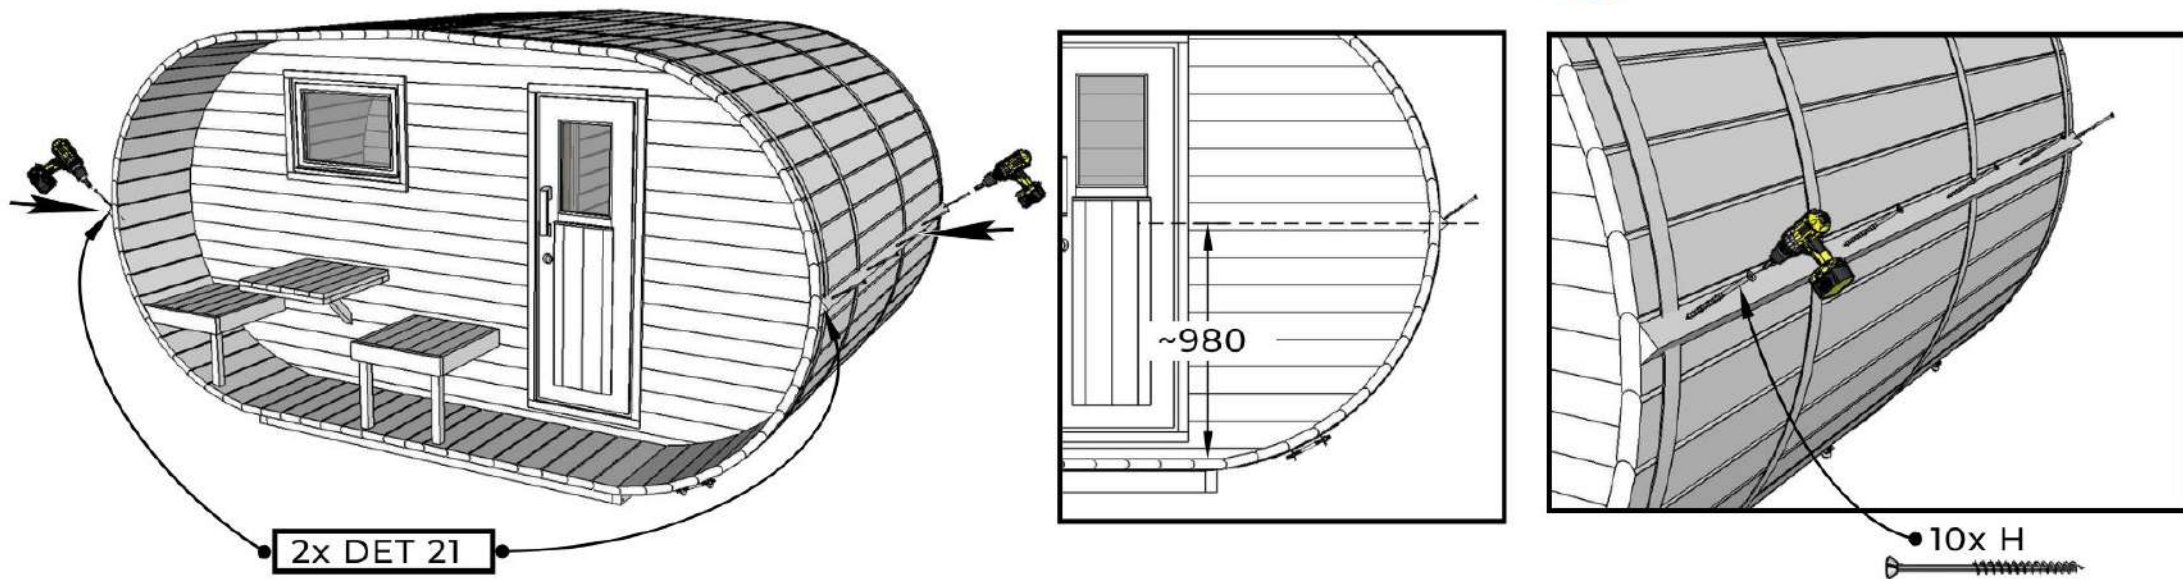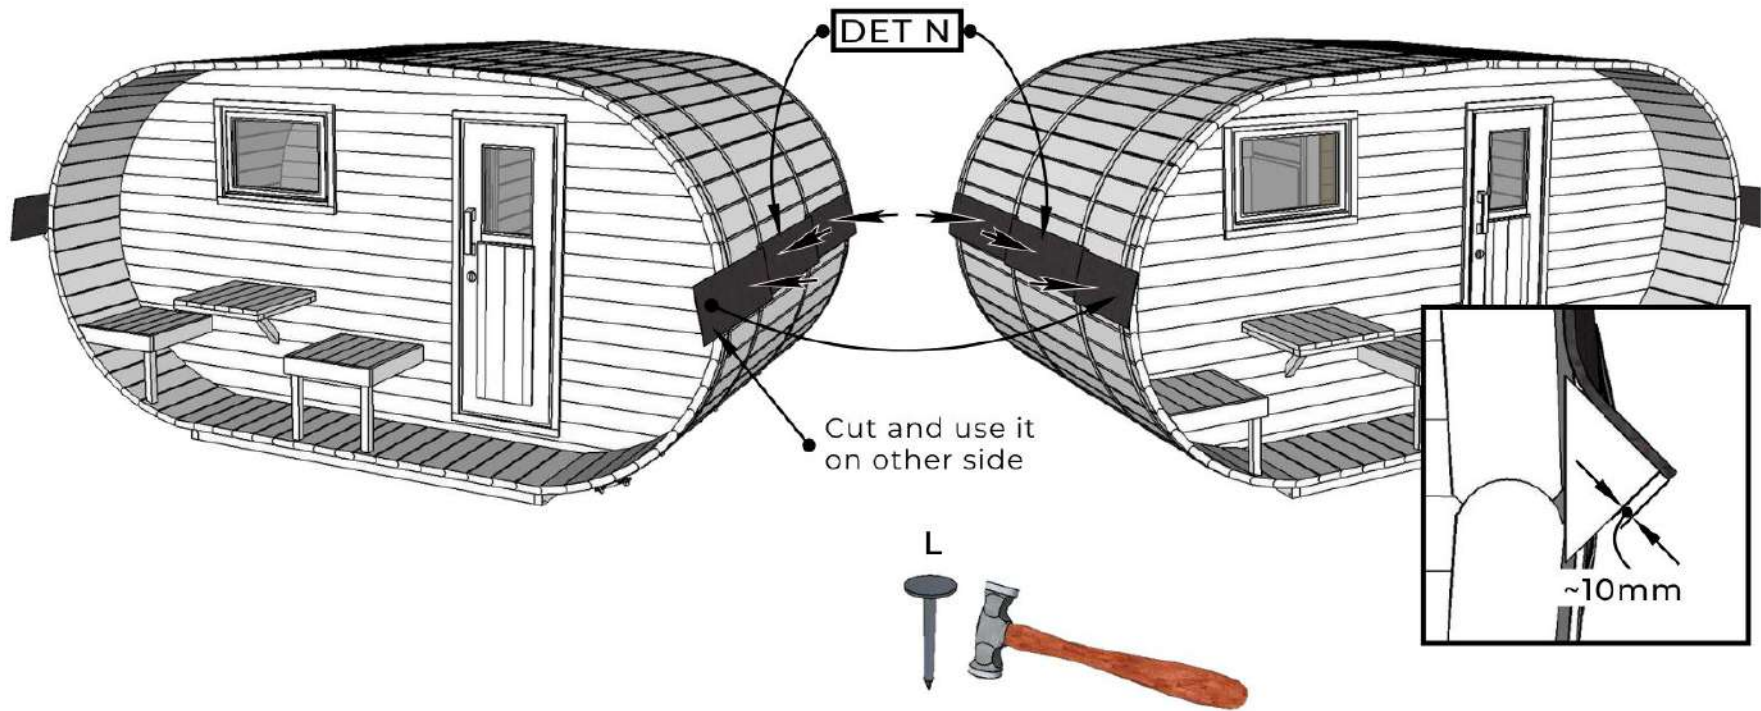




NB! Before shingles installation, underlay sheet **MUST** be installed. Check extra pages for instructions!




NB! Check also shingles installation manual inside package.

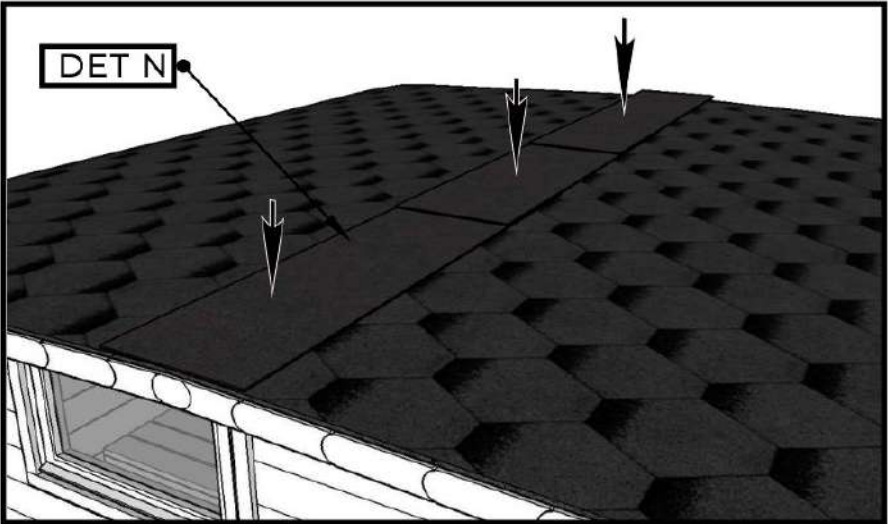


II

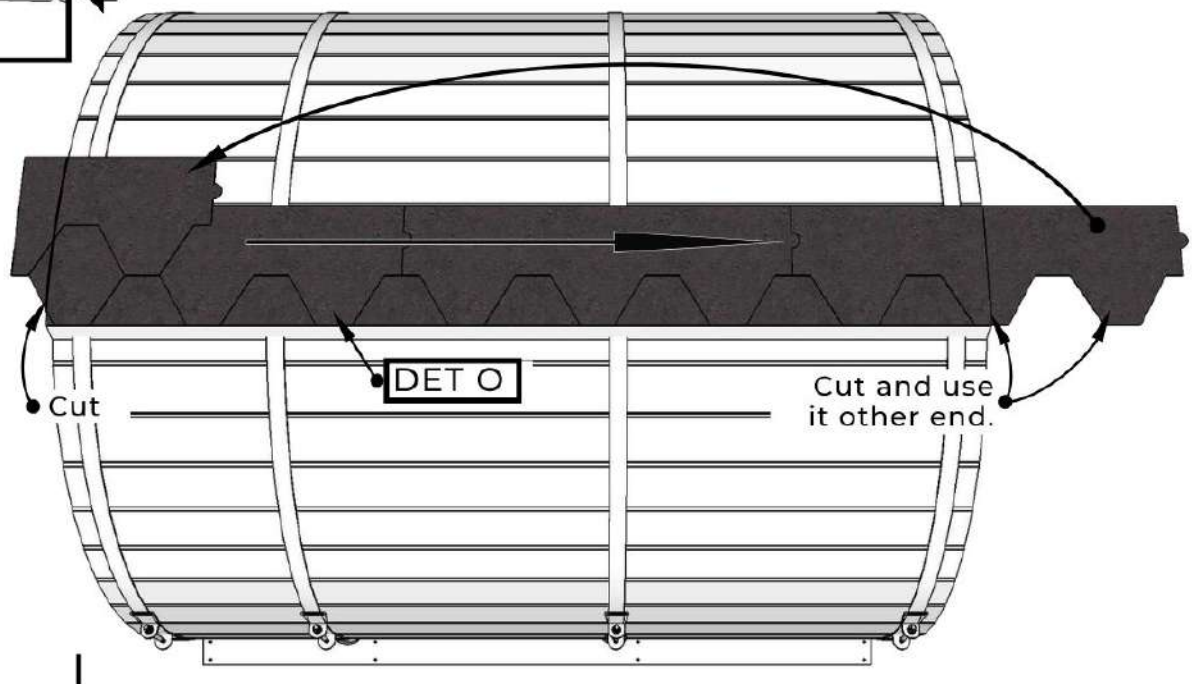


I

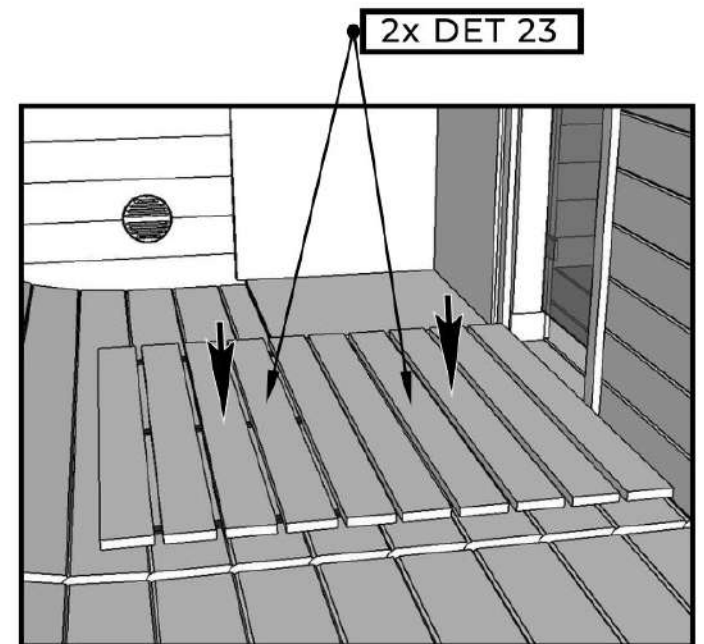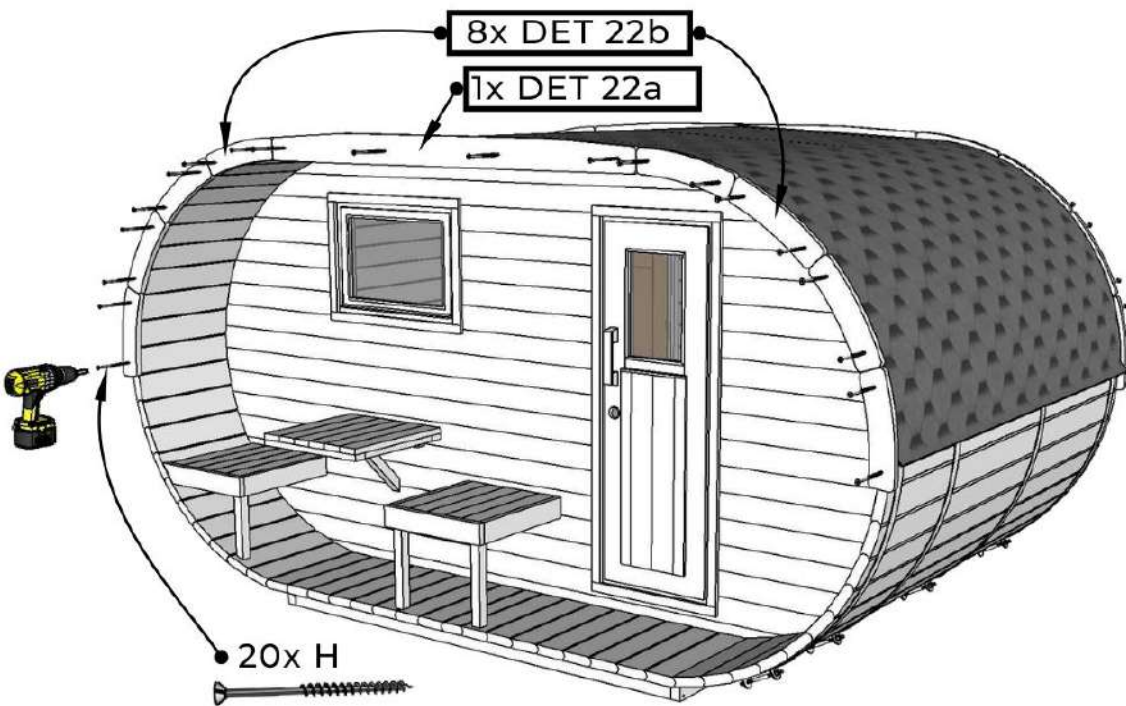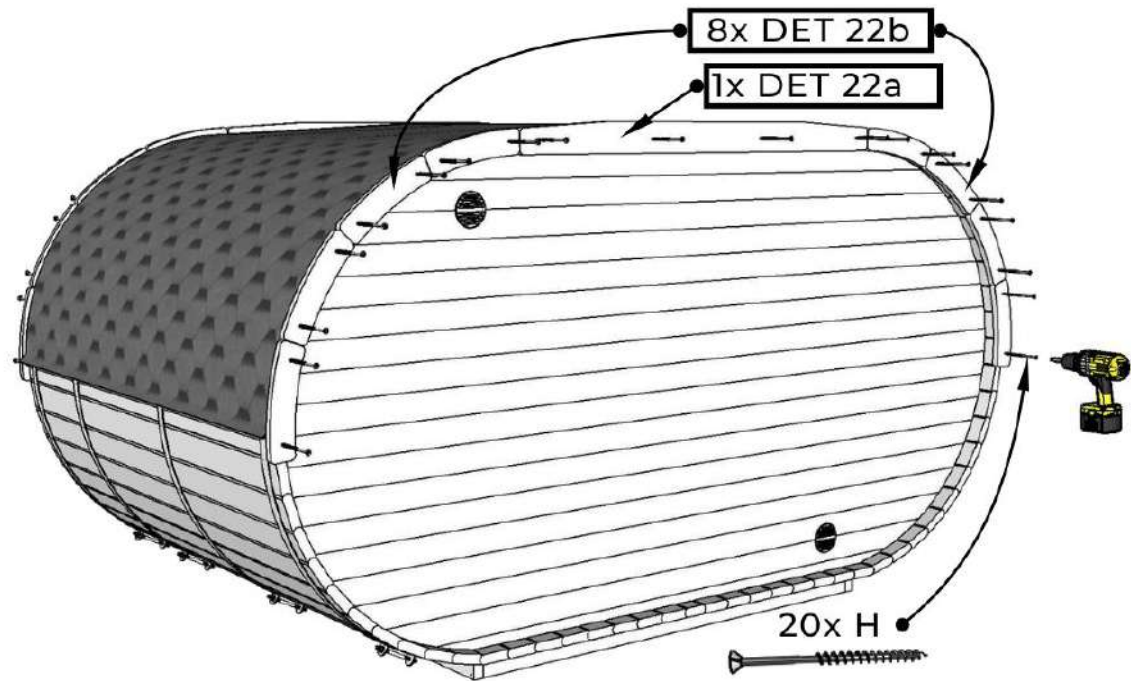


Self-adhesive UNDERLAY FELT INSTALLATION MANUAL.

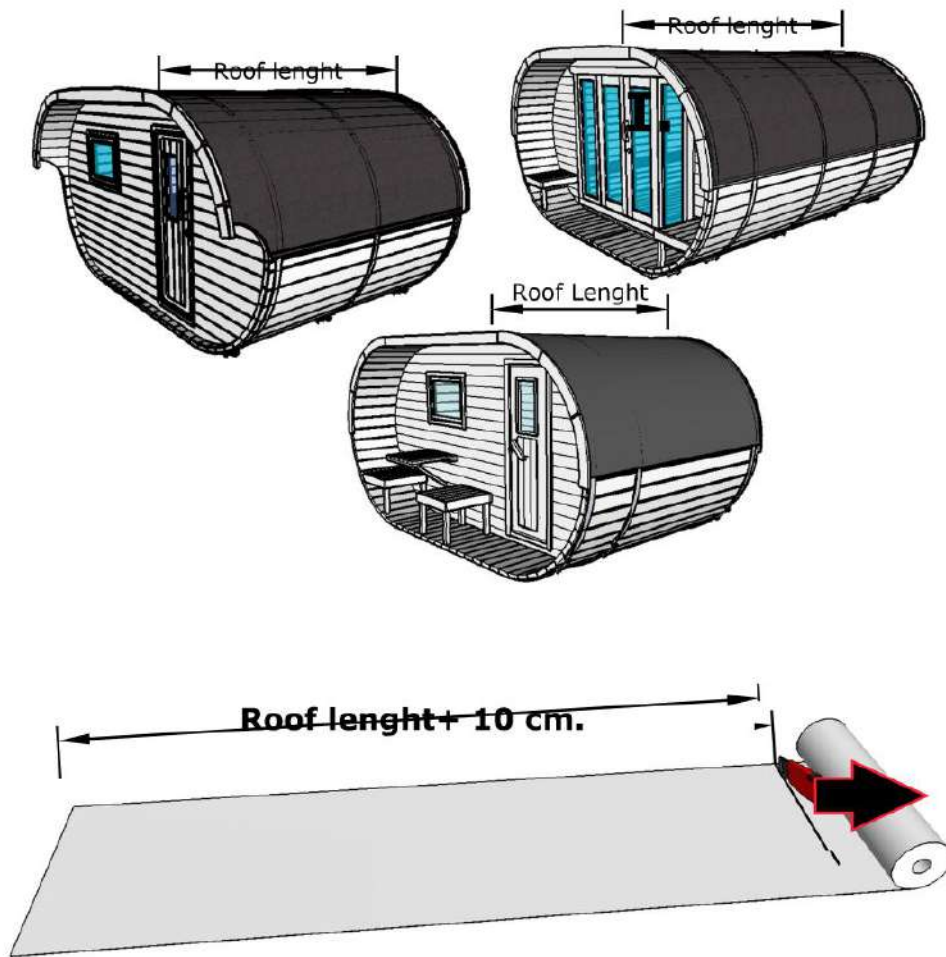

The temperature during installation should be a minimum of +10°C. In colder conditions, a hot air gun should be used.
Hot bitumen or torching must not be used when installing the felt.

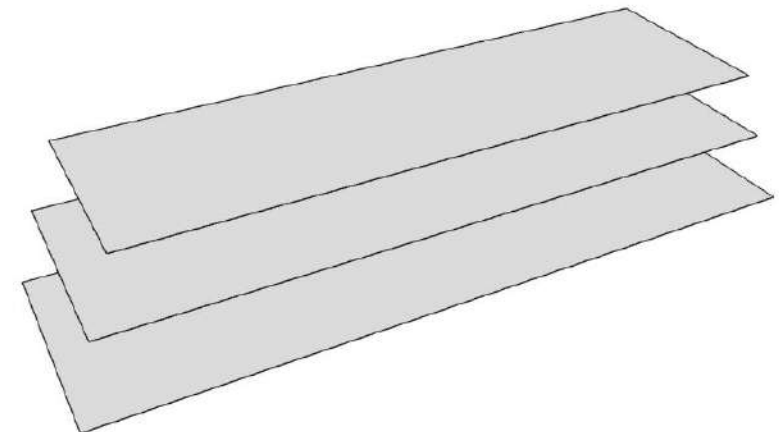



II.

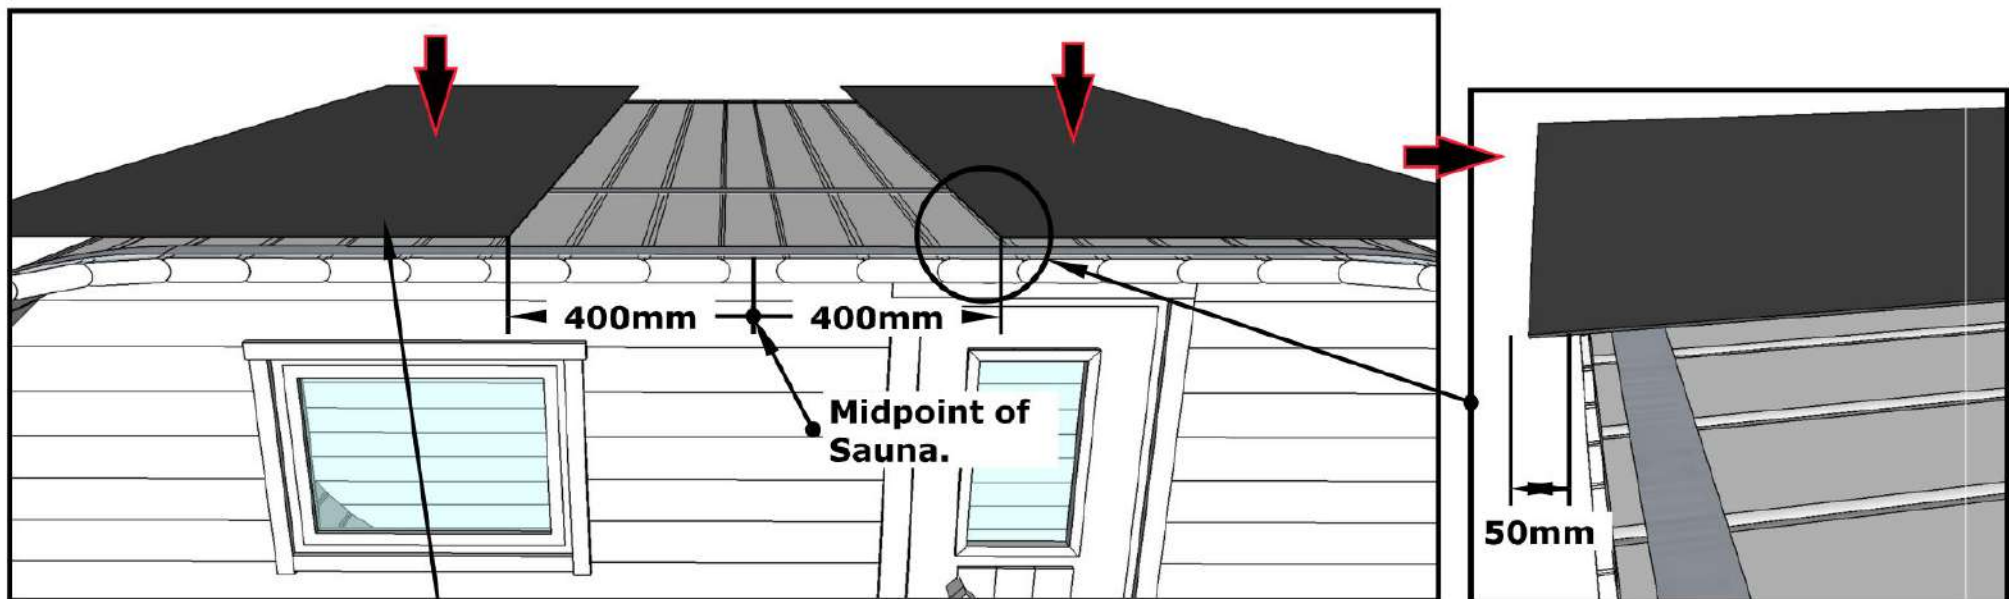

Before placing underlay felt, remove bottom film.

Fix top side of underlay felt with clout nails every ~30 cm.

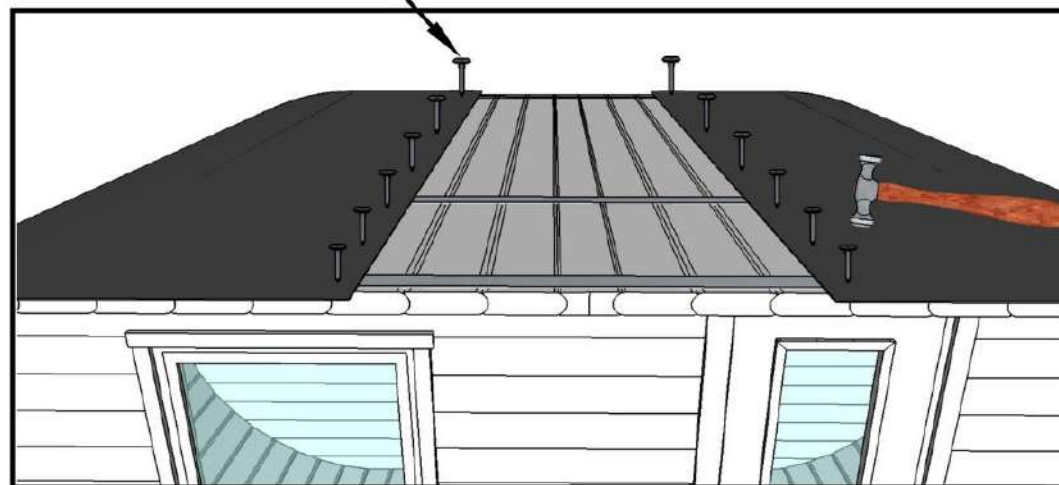


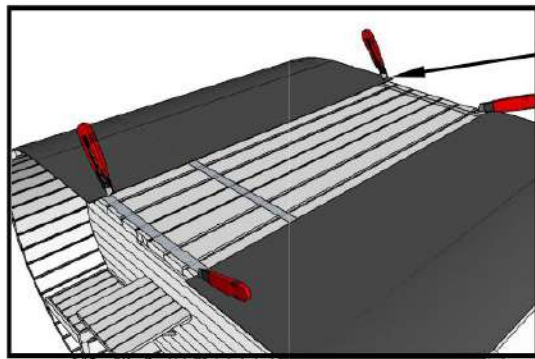

Cut off the parts that extend over the roof.




II.
Remove top film.

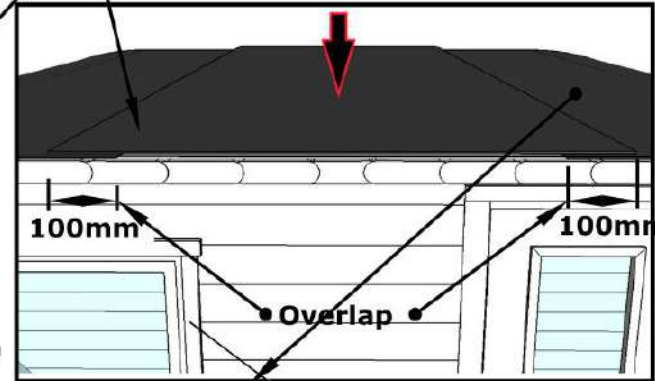

III.


Before placing underlay felt, remove bottom film.

IV.

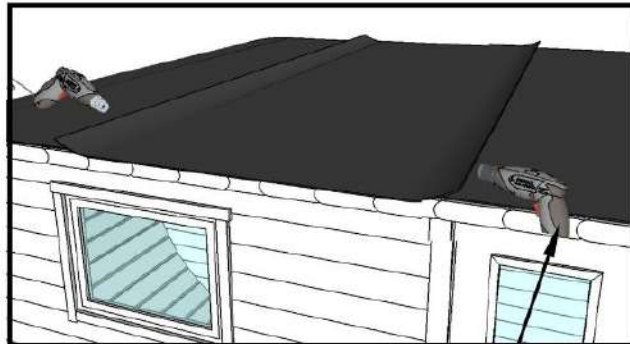

If necessary, use hot air gun to seal overlaps. Do not use torching!!! Do not use nails !!!

V.

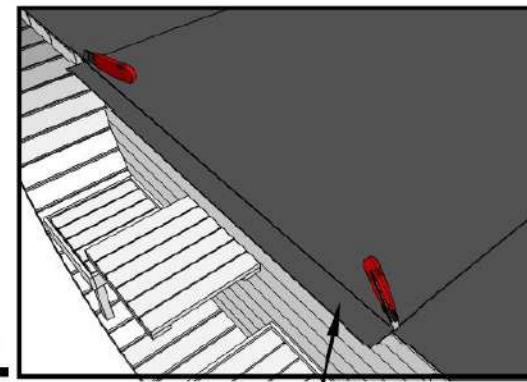

Cut off the parts that extend over the edge of the roof.



Remove top film.